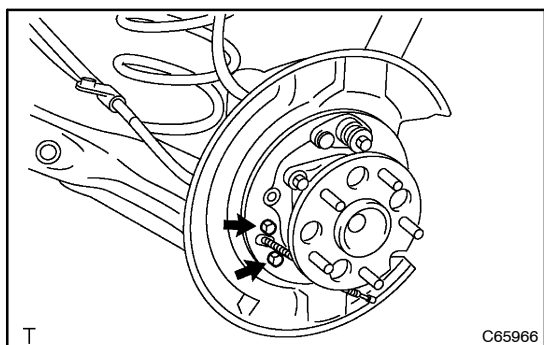


REPLACEMENT

HINT:

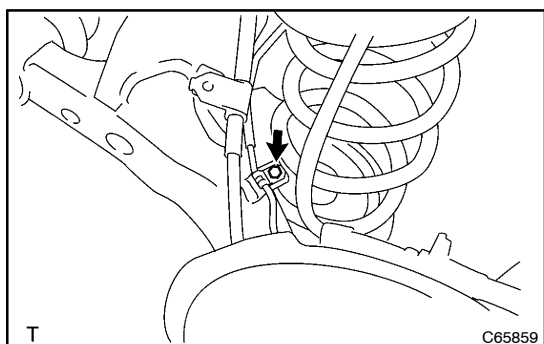
For parking brake cable No. 2, employ the same procedure to the RH side.

1. **REMOVE REAR WHEEL**
2. **SEPARATE REAR DISC BRAKE CALIPER ASSY LH**
3. **REMOVE REAR DISC**
4. **REMOVE PARKING BRAKE SHOE ASSY LH NO.1**
5. **REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET**
6. **REMOVE PARKING BRAKE SHOE STRUT LH**
7. **REMOVE PARKING BRAKE SHOE ASSY LH NO.2**



8. SEPARATE PARKING BRAKE CABLE ASSY NO.3

- (a) Remove the 2 bolts, and disconnect the parking brake cable No. 3 from the backing plate.

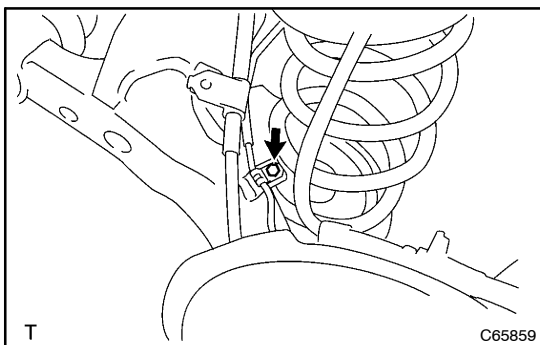
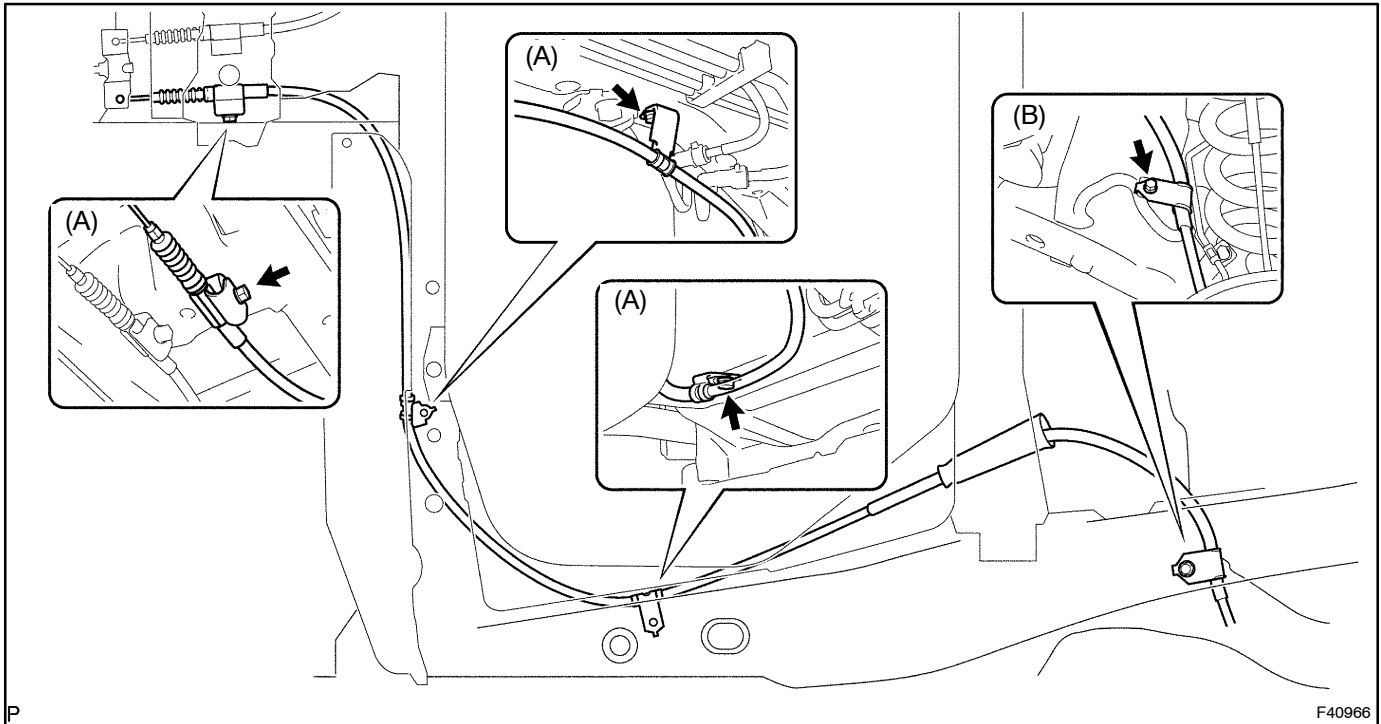


9. REMOVE PARKING BRAKE CABLE ASSY NO.3

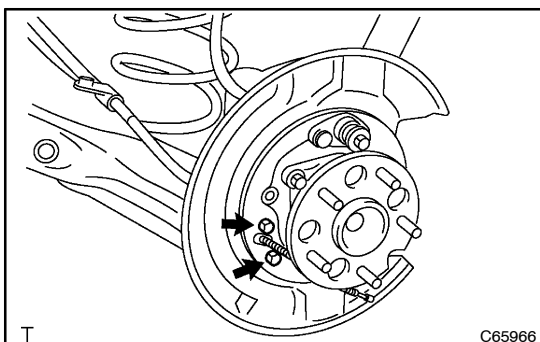
- (a) Disconnect the skid control sensor wire harness clamp.
- (b) Remove the 4 bolts and disconnect the parking brake cable No. 3 from the body.
- (c) Disconnect the parking brake cable No. 3 from the parking brake equalizer, and remove the parking brake cable No. 3.

10. INSTALL PARKING BRAKE CABLE ASSY NO.3

- (a) Connect the parking brake cable No. 3 to the parking brake cable equalizer.
- (b) Install the parking brake cable No. 3 with the 4 bolts.

Torque:**Bolt (A): 5.4 N·m (55 kgf·cm, 48 in.·lbf)****Bolt (B): 7.8 N·m (80 kgf·cm, 69 in.·lbf)**

- (c) Connect the skid control sensor wire harness.

**11. CONNECT PARKING BRAKE CABLE ASSY NO.3**

- (a) Install the parking brake cable No. 3 with the 2 bolts to the backing plate.

Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)

12. □ APPLY HIGH TEMPERATURE GREASE (See page 33-13)
13. INSTALL PARKING BRAKE SHOE ASSY LH NO.2
14. INSTALL PARKING BRAKE SHOE ADJUSTING SCREW SET
15. INSTALL PARKING BRAKE SHOE STRUT LH
16. INSTALL PARKING BRAKE SHOE ASSY LH NO.1
17. CHECK PARKING BRAKE INSTALLATION
18. INSTALL REAR DISC
19. ADJUST PARKING BRAKE SHOE CLEARANCE
20. CONNECT REAR DISC BRAKE CALIPER ASSY LH
21. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
22. □ INSPECT PARKING BRAKE LEVER TRAVEL (See page 33-2)
23. □ ADJUST PARKING BRAKE LEVER TRAVEL (See page 33-2)