


SPEED SENSOR REPLACEMENT

400DB-01


1. REMOVE AIR CLEANER ASSY

2. REMOVE AIR CLEANER HOSE NO.1

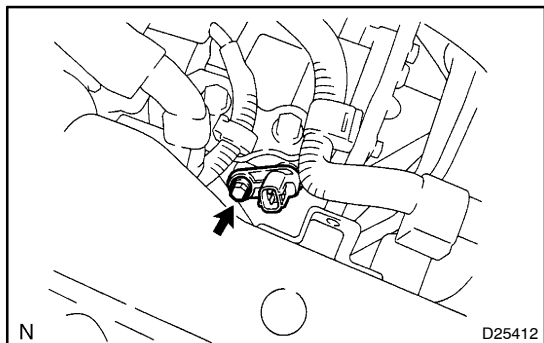


3. REMOVE SPEED SENSOR(NT SENSOR)

- Disconnect the speed sensor connector.
- Remove the bolt and speed sensor.

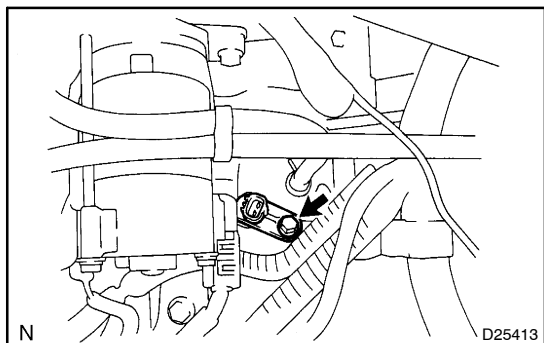

4. REMOVE SPEED SENSOR(NC SENSOR)

- Disconnect the speed sensor connector.
- Remove the bolt and speed sensor.

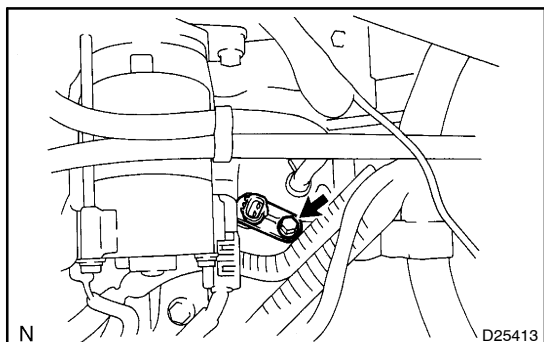


5. INSTALL SPEED SENSOR(NC SENSOR)

- Coat a O-ring with ATF.
- Install the speed sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

Make sure of the manufacturer's name.

- Connect the speed sensor connector.

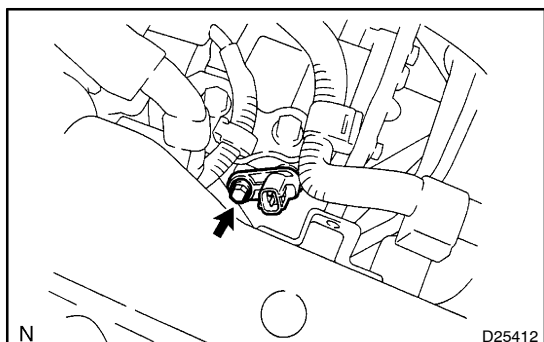

6. INSTALL SPEED SENSOR(NT SENSOR)

- Coat a O-ring with ATF.
- Install the speed sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

Make sure of the manufacturer's name.

- Connect the speed sensor connector.

7. INSTALL AIR CLEANER ASSY

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

8. □ HAND-HELD □ TESTER (NT □ SENSOR) (See □ page □ 05-346)

9. □ HAND-HELD □ TESTER (NC □ SENSOR) (See □ page □ 05-346)