

TRANSMISSION OIL COOLER REPLACEMENT

1. SEPARATE WATER BY-PASS HOSE NO.6

- (a) Loosen the clip and separate the water by-pass hose No. 6 from the transmission oil cooler.

2. SEPARATE WATER BY-PASS HOSE NO.5


- (a) Loosen the clip and separate the water by-pass hose No. 5 from the transmission oil cooler.

3. SEPARATE OIL COOLER INLET HOSE NO.1

- (a) Loosen the clip and separate the oil cooler inlet hose No. 1 from the transmission oil cooler.


4. SEPARATE OIL COOLER OUTLET HOSE NO.2

- (a) Loosen the clip and separate the oil cooler outlet hose No. 2 from the transmission oil cooler.

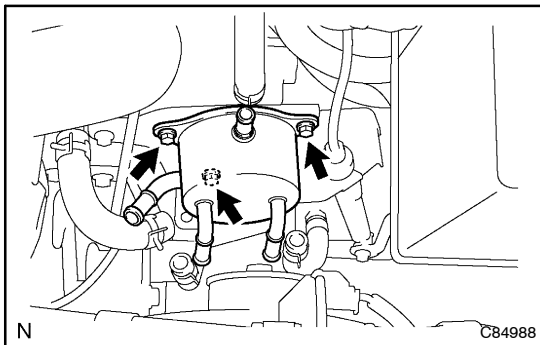

5. REMOVE TRANSMISSION OIL COOLER

- (a) Remove the 3 bolts and the oil cooler from the bracket.

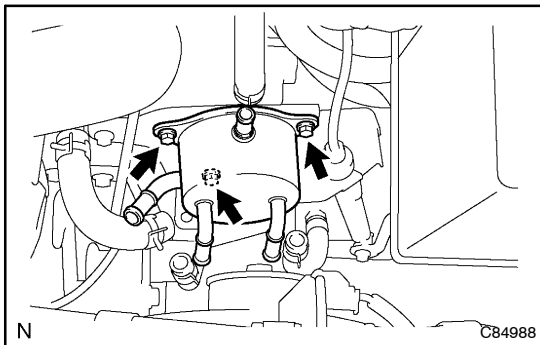

6. INSTALL TRANSMISSION OIL COOLER

- (a) Install the oil cooler to the bracket with the 3 bolts.
Torque: 18 N·m (184 kgf·cm, 13 ft·lbf)

7. INSTALL OIL COOLER OUTLET HOSE NO.2

- (a) Install the oil cooler outlet hose No. 2 with the clip to the transmission.

8. INSTALL OIL COOLER INLET HOSE NO.1

- (a) Install the oil cooler inlet hose No. 1 with the clip to the transmission.

9. INSTALL WATER BY-PASS HOSE NO.5

- (a) Install the water by-pass hose No. 5 with the clip to the transmission.

10. INSTALL WATER BY-PASS HOSE NO.6

(a) Install the water by-pass hose No.6 with the clip to the transmission.

11. ADD AUTOMATIC TRANSAXLE FLUID**12. INSPECT AUTOMATIC TRANSAXLE FLUID ([See page 40-2](#))****13. ADD COOLANT**