

SHIFT LOCK SYSTEM

400DG-01

ON-VEHICLE INSPECTION

1. CHECK SHIFT LOCK OPERATION

- (a) Shift the shift lever to P range.
- (b) Turn the ignition switch to LOCK.
- (c) Check that the shift lever cannot be shifted to any other ranges than P.
- (d) Turn the ignition switch ON, depress the brake pedal and check that the shift lever can be shifted to any range other than P.

2. CHECK KEY INTERLOCK OPERATION

- (a) Turn the ignition switch ON.
- (b) Depress the brake pedal and check that the shift lever can be shifted to any range other than P.
- (c) Check that the ignition key cannot be turned to LOCK.
- (d) Shift the shift lever to P range, turn the ignition key to LOCK and check that the ignition key can be removed.