

ADJUSTMENT

1. INSPECT SHIFT LEVER POSITION


- (a) Turn the ignition switch ON and depress the brake pedal.
- (b) When shifting it to each range, make sure that the shifting lever moves smoothly, can be moderately operated and the range indicator displays correctly.

Range which can be operated without pressing the shift lever knob button

R → N → D → 2, L → 2 → D → N


Range which can be operated only by pressing the shift lever knob button

P → R, 2 → L, N → R → P

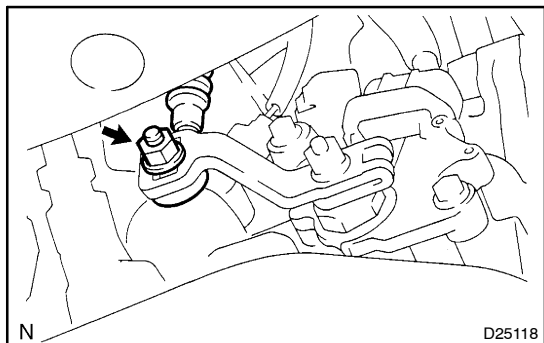

2. ADJUST SHIFT LEVER POSITION

- (a) Loosen the nut on the control shaft lever.

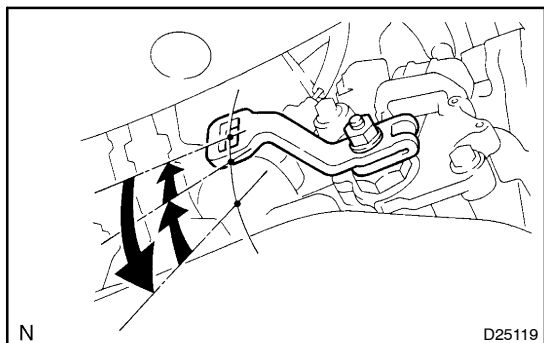

- (b) Push the control shaft fully downward.
- (c) Return the control shaft lever 2 notches to N range.
- (d) Set the shift lever to N range.
- (e) While holding the shift lever lightly toward the R range side, tighten the shift lever nut.

Torque: 13 N·m (133 kgf·cm, 18 ft·lbf)

- (f) Start the engine and make sure that the vehicle moves forward when shifting the lever from the N to D range and reverses when shifting it to the R range.