


COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY REPLACEMENT


400DJ-01

1. REMOVE AIR CLEANER ASSY
2. REMOVE AIR CLEANER HOSE NO.1
3. REMOVE SHIFT LEVER HOLE COVER
(See page 71-10)
4. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH(RHD STEERING POSITION TYPE)
(See page 71-10)
5. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL LH(LHD STEERING POSITION TYPE)
(See page 71-10)
6. REMOVE STEERING COLUMN COVER LWR
(See page 50-6)

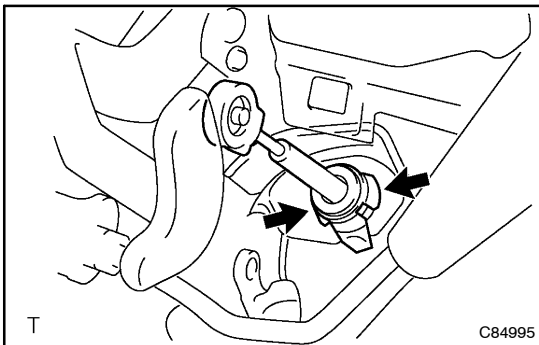


7. REMOVE COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(LHD STEERING POSITION TYPE)


- (a) Disconnect the cable end from the control shaft assy.
- (b) Using pliers, disconnect the control cable from control cable bracket.

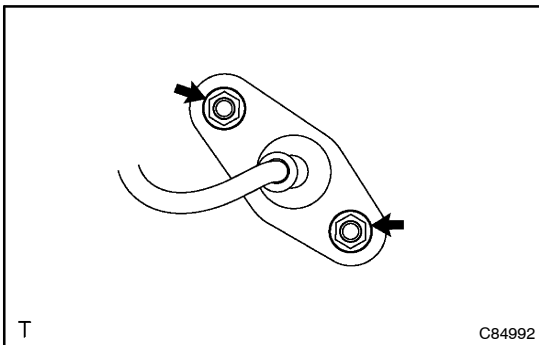


- (c) Using deep socket wrench 10mm remove the 2 nuts.

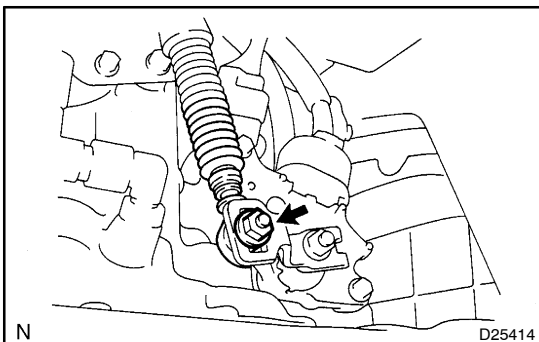

- (d) Remove the nut from the control shaft lever.
- (e) Disconnect the control cable from the control shaft lever.

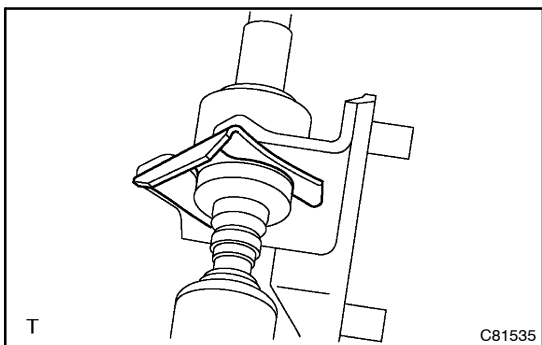


- (f) Remove the clip and disconnect the control cable from the control cable bracket.
- (g) Disconnect the control cable from the control cable clamp.
- (h) Pull out the control cable from the body.

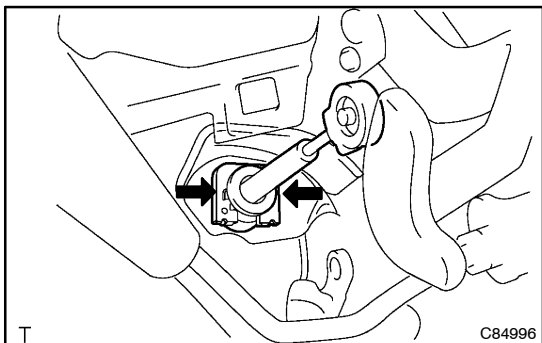


8. REMOVE COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(RHD STEERING POSITION TYPE)


- (a) Disconnect the cable end from the control shaft assy.
- (b) Push the crow of the clip and disconnect the control cable from the control cable bracket.
- (c) Remove the clip from the control cable bracket.

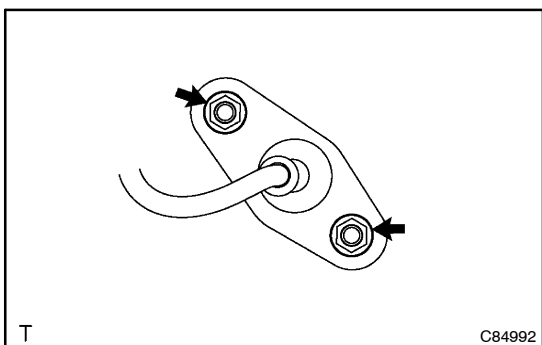

- (d) Using deep socket wrench 10mm, remove the 2 nuts.

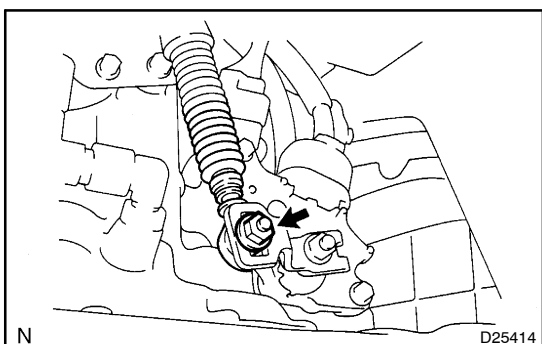


- (e) Remove the nut from the control shaft lever.
- (f) Disconnect the control cable from the control shaft lever.

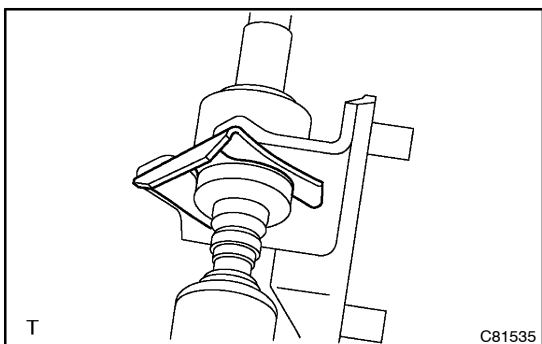


- (g) Remove the clip and disconnect the control cable from the control cable bracket.
- (h) Disconnect the control cable from the control cable clamp.
- (i) Pull out the control cable from the body.

9. INSTALL COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(RHD STEERING POSITION TYPE)

- (a) Pull in the control cable to the body.
- (b) Install the control cable and clip to the control cable bracket.

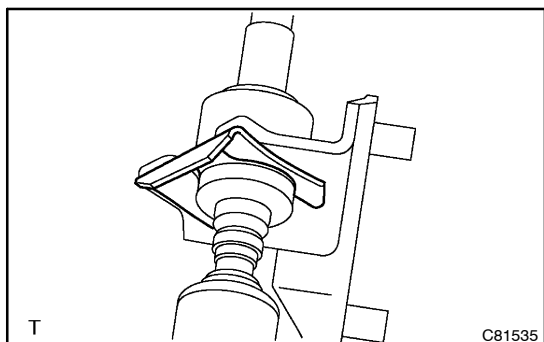


- (c) Temporarily install the control cable to the control shaft lever with nut.
- (d) Install the control cable to the control cable clamp.

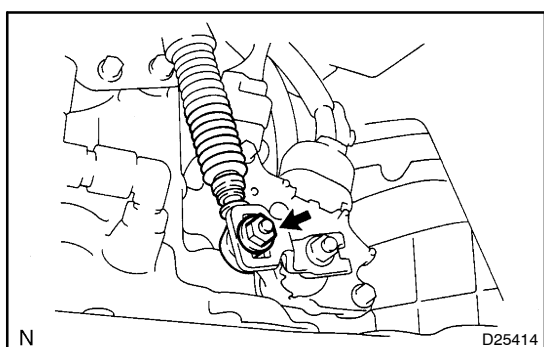

- (e) Using deep socket wrench 10mm, install the 2 nuts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

NOTICE:
Install with the arrow mark up.

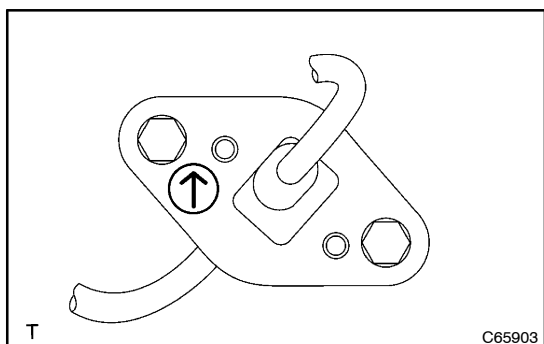



- (f) Install the cable end to the control shaft assy.
- (g) Install the new clip to the control cable bracket.
- (h) Install the control cable to the control cable bracket.

NOTICE:
Install it with the uneven surface facing up.


10. INSTALL COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(LHD STEERING POSITION TYPE)

- (a) Pull in the control cable to the body.

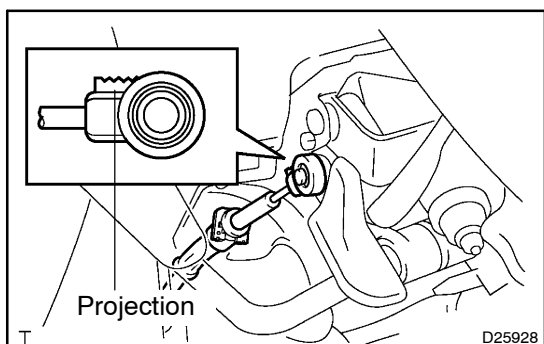


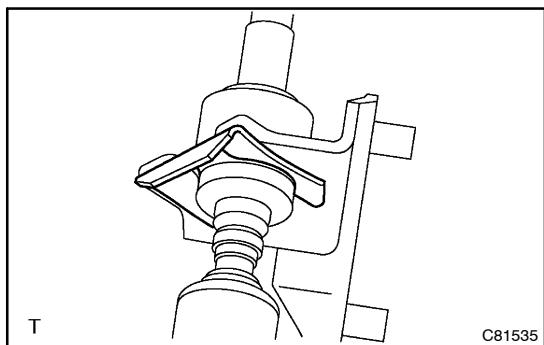


- (b) Install the control cable and clip to the control cable bracket.

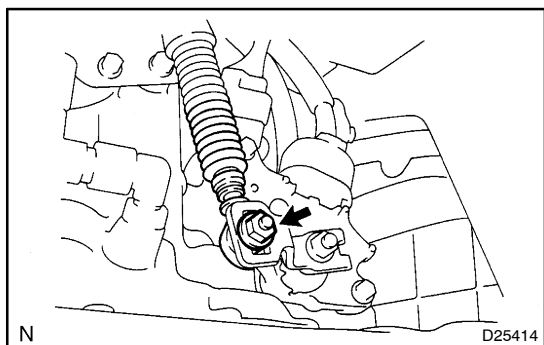

- (c) Temporarily install the control cable to the control shaft lever with nut.
- (d) Install the control cable to the control cable clamp.

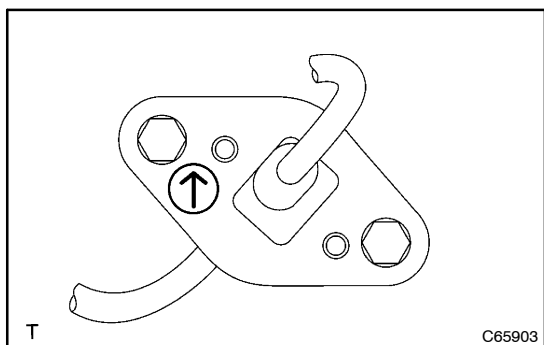

- (e) Using deep socket wrench 10mm, install the 2 nuts.
Torque: 8.0 N·m (82 kgf·cm, 71 in.·lb)
NOTICE:
 Install with the arrow mark up.

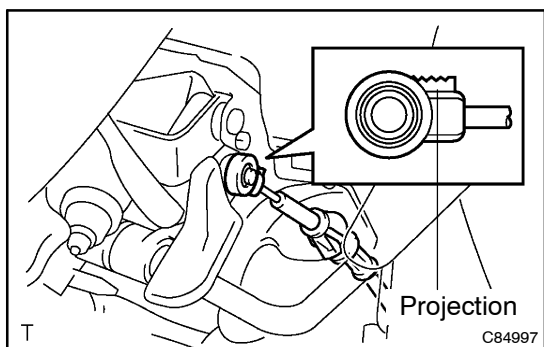

- (f) Install the cable end to the control shaft assy.
- (g) Install the control cable to the control cable bracket.
- NOTICE:**
 Install it with the uneven surface facing up.

11. INSTALL STEERING COLUMN COVER LWR

(See page 50-6)

12. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL LH (LHD STEERING POSITION TYPE)

(See page 71-10)

13. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL RH (RHD STEERING POSITION TYPE)

(See page 71-10)

14. INSTALL SHIFT LEVER HOLE COVER

(See page 71-10)

15. INSTALL AIR CLEANER ASSY

Torque: 5.0 N·m (51 kgf·cm, 44 in. lbf)

16. ADJUST SHIFT LEVER POSITION (See page 40-38)

17. INSPECT SHIFT LEVER POSITION (See page 40-38)