


FLOOR SHIFT SHIFT LEVER ASSY REPLACEMENT

41047-01


1. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY

2. REMOVE CONSOLE BOX SUB-ASSY REAR

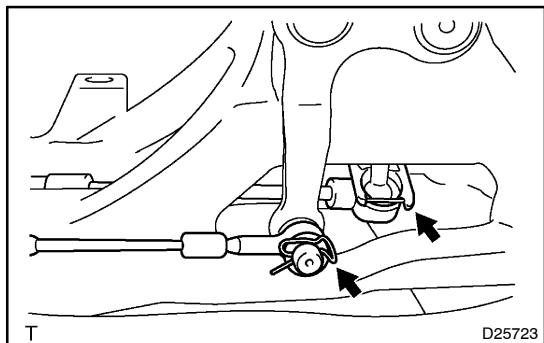


3. SEPARATE FLOOR SHIFT TRANSMISSION CONTROL CABLE ASSY

- (a) Remove the 2 clips and washer and separate the 2 cable ends of the control cable assy from the shift lever assy.

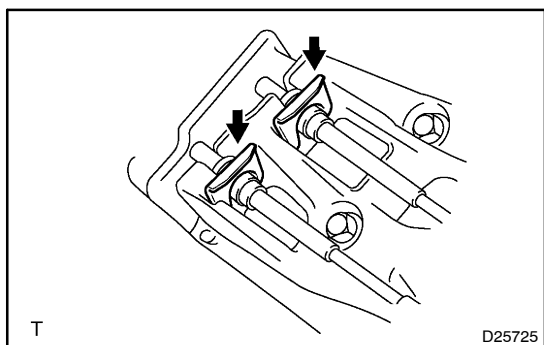

- (b) Remove the 2 clips and separate the control cable assy from the shift lever assy.

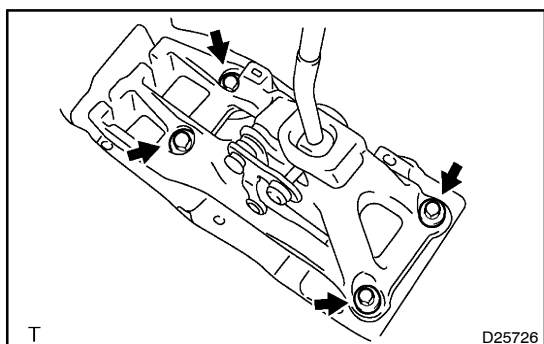


4. REMOVE FLOOR SHIFT SHIFT LEVER ASSY

- (a) Remove the 4 bolts and shift lever assy.


5. INSTALL FLOOR SHIFT SHIFT LEVER ASSY

- (a) Install the shift lever assy with the 4 bolts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

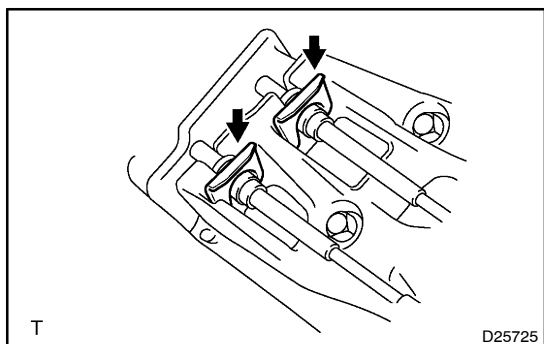

6. CONNECT FLOOR SHIFT TRANSMISSION CONTROL CABLE ASSY

- (a) Connect the control cable assy and install the 2 clips to the shift lever assy.

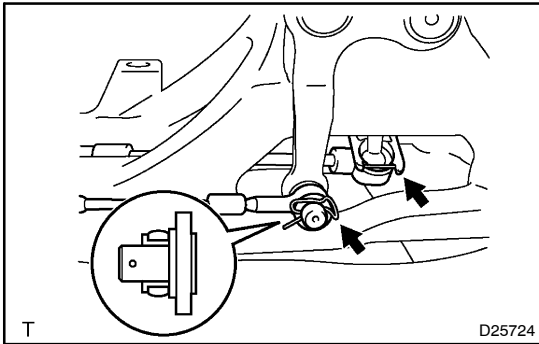

- (b) Connect the 2 cable ends as shown in the illustration.
- (c) Install the washer and 2 clips.

7. INSTALL CONSOLE BOX SUB-ASSY REAR

8. INSTALL FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY