


# AIR CONDITIONING CONTROL ASSY OVERHAUL


5507K-01

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER  
(See page 71-10)
2. REMOVE INSTRUMENT CLUSTER FINISH PANEL END  
(See page 71-10)

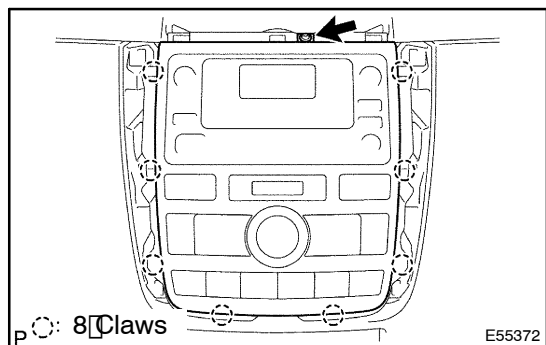


## 3. REMOVE AIR CONDITIONING CONTROL ASSY

- (a) Release the 8 claws, remove the screw and air conditioning control assy.
- (b) Disconnect the connector.

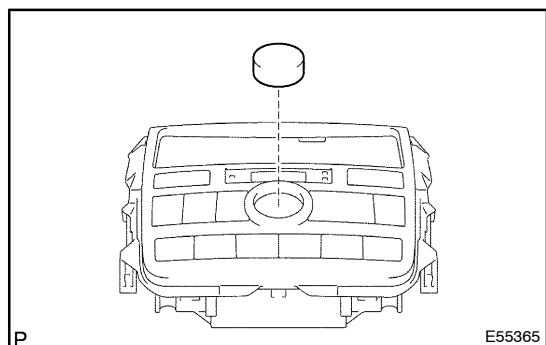


## 4. REMOVE HEATER CONTROL KNOB

- (a) Remove the heater control knob from the air conditioning control assy.

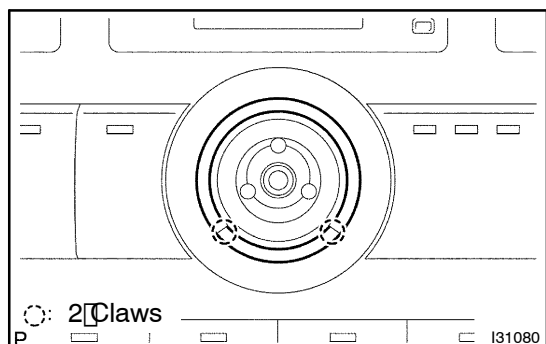

## 5. REMOVE AIR CONDITIONING PANEL SUB-ASSY

- (a) Release the 2 claws, remove the lens.

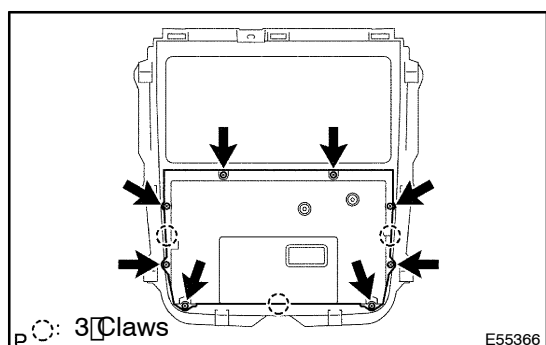

- (b) Release the 3 claws, remove the 8 screws and air conditioning panel.

### CAUTION:


During operation, be careful of not pulling the flat wire forcefully.

**6. REMOVE HEATER CONTROL KNOB****7. REMOVE HAZARD WARNING SIGNAL SWITCH KNOB****8. REMOVE AIR CONDITIONING CONTROL BULB**

- (a) Remove the air conditioning control bulb from the heater control housing.

**CAUTION:**

During operation, be careful of not pulling the flat wire forcefully.

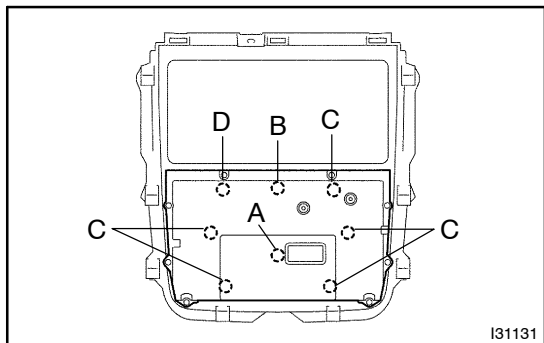**9. INSTALL AIR CONDITIONING CONTROL BULB**

- (a) Install the air conditioning control bulb to the heater control housing.

**Bulb position:**

Position	Part No.
A	90010-03034
B	90010-03051
C	90010-03052
D	90010-03053

**CAUTION:**

During operation, be careful of not pulling the flat wire forcefully.