


## OVERHAUL

HINT:

COMPONENTS: [See page 55-80](#)

1. SEPARATE BATTERY NEGATIVE TERMINAL (W/ SIDE AIRBAG)
2. REMOVE FRONT DOOR SCUFF PLATE RH  
([See page 76-23](#))
3. REMOVE FRONT DOOR SCUFF PLATE LH  
([See page 76-23](#))
4. REMOVE COWL SIDE TRIM SUB-ASSY RH  
([See page 76-23](#))
5. REMOVE COWL SIDE TRIM BOARD LH  
([See page 76-23](#))
6. REMOVE REAR DOOR SCUFF PLATE RH  
([See page 76-23](#))
7. REMOVE REAR DOOR SCUFF PLATE LH  
([See page 76-23](#))
8. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH  
([See page 76-23](#))
9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH  
([See page 76-23](#))
10. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH  
([See page 76-23](#))
11. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH  
([See page 76-23](#))
12. REMOVE BACK DOOR WEATHERSTRIP  
([See page 76-23](#))
13. REMOVE CENTER PILLAR GARNISH LOWER RH  
([See page 76-23](#))
14. REMOVE CENTER PILLAR GARNISH LOWER LH  
([See page 76-23](#))
15. REMOVE TONNEAU COVER ASSY  
([See page 76-23](#))
16. REMOVE LUGGAGE ROOM BOX LID  
([See page 76-23](#))
17. REMOVE BACK DOOR SCUFF PLATE  
([See page 76-23](#))
18. REMOVE DECK TRIM SIDE PANEL ASSY RH  
([See page 76-23](#))
19. REMOVE DECK TRIM SIDE PANEL ASSY LH  
([See page 76-23](#))
20. REMOVE FRONT FLOOR FOOTREST (RHD STEERING POSITION TYPE)
21. REMOVE FRONT FLOOR CAUTION PLATE COVER
22. REMOVE FRONT SEAT ASSEMBLY LH
23. REMOVE FRONT SEAT ASSEMBLY RH
24. REMOVE REAR No.1 SEAT ASSEMBLY LH (60/40 SPLIT AND FALDING SEAT TYPE)
25. REMOVE REAR No.1 SEAT ASSEMBLY RH (60/40 SPLIT AND FALDING SEAT TYPE)
26. REMOVE REAR No.1 SEAT ASSEMBLY RH (CAPTAN SEAT TYPE)


27. REMOVE REAR No.1 SEAT ASSEMBLY LH (CAPTAN SEAT TYPE)
28. REMOVE REAR No.1 SEAT ASSEMBLY RH (3 TUMBLE AND DETACHABLE SEAT TYPE)
29. REMOVE REAR No.1 SEAT ASSEMBLY LH (3 TUMBLE AND DETACHABLE SEATS TYPE)
30. REMOVE REAR No.1 SEAT ASSEMBLY CENTER (3 TUMBLE AND DETACHABLE SEATS TYPE)
31. REMOVE REAR NO.2 SEAT BELT ASSY INNER LH
32. REMOVE REAR NO.2 SEAT BELT ASSY INNER RH
33. REMOVE REAR No.2 SEAT ASSEMBLY RH (50/50 SPLIT SEAT TYPE)
34. REMOVE REAR No.2 SEAT ASSEMBLY LH (50/50 SPLIT SEAT TYPE)
35. REMOVE REAR No.2 SEAT ASSEMBLY RH (TUMBLE AND DETACHABLE SEPARATE TYPE SEAT)
36. REMOVE REAR No.2 SEAT ASSEMBLY LH (TUMBLE AND DETACHABLE SEPARATE TYPE SEAT)
37. REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSY  
(See page 71-10)
38. REMOVE GLOVE COMPARTMENT DOOR ASSY  
(See page 71-10)
39. REMOVE INSTRUMENT PANEL BOX CENTER  
(See page 71-10)
40. REMOVE INSTRUMENT PANEL ORNAMENT  
(See page 71-10)

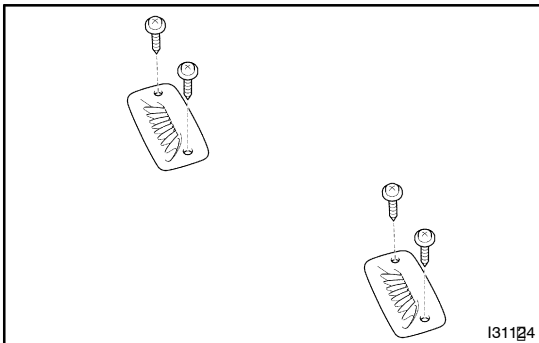

#### 41. REMOVE HEATER AIR OUTLET GRILLE

- (a) Remove the 4 screws and 2 heater air outlet grilles.

42. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY  
(See page 41-5)
43. REMOVE CONSOLE BOX SUB-ASSY REAR  
(See page 41-5)
44. REMOVE PARKING BRAKE HOLE COVER  
(See page 41-5)
45. REMOVE FLOOR CARPET ASSY FRONT

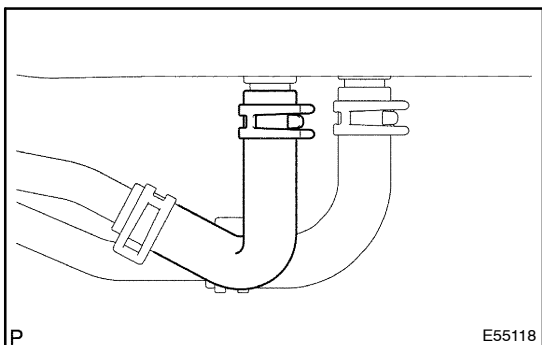


#### 46. SEPARATE HEATER WATER OUTLET HOSE A(FROM HEATER UNIT)

- (a) Slide the clip and disconnect the heater water outlet hose A.

#### 47. SEPARATE HEATER WATER INLET HOSE B


HINT:

Disconnect heater water inlet hose B in the same way as the heater water outlet hose A.

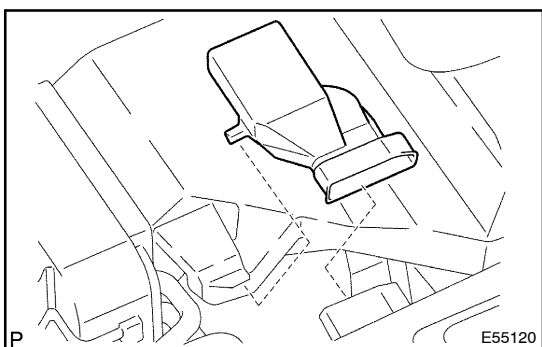


#### 48. REMOVE AIR DUCT REAR NO.4

- (a) Remove the air duct rear No. 4.

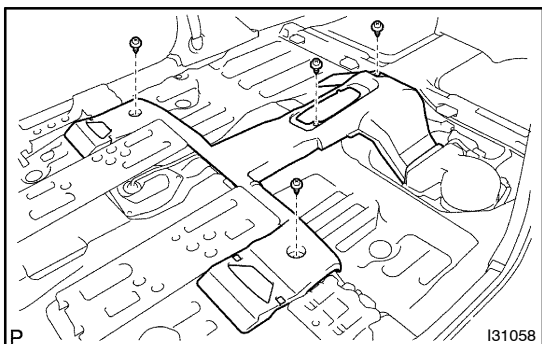


#### 49. REMOVE AIR DUCT ASSY

- (a) Remove the 4 screws and air duct assy.

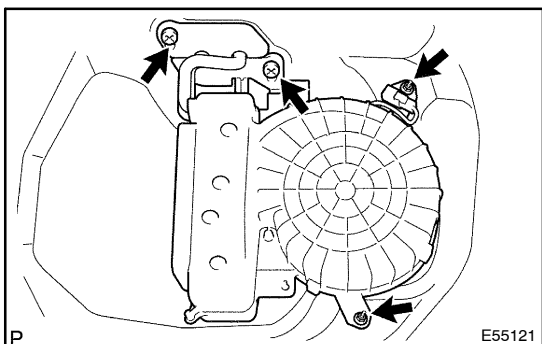


#### 50. REMOVE REAR HEATER ASSY


- (a) Disconnect the connector and clamp.
- (b) Remove the 2 nuts, 2 screws and rear heater assy.

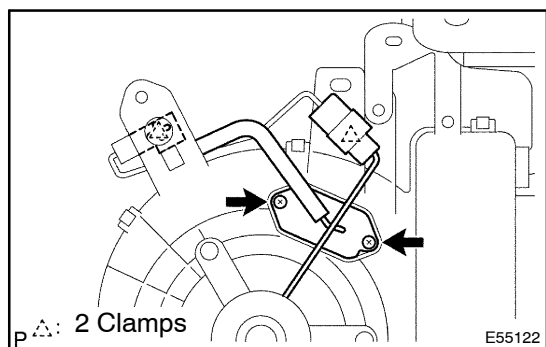**51. REMOVE REAR HEATER BLOWER RESISTOR**


- (a) Disconnect the rear heater blower motor connector and 2 clamps.
- (b) Remove the 2 screws and rear heater blower resistor.

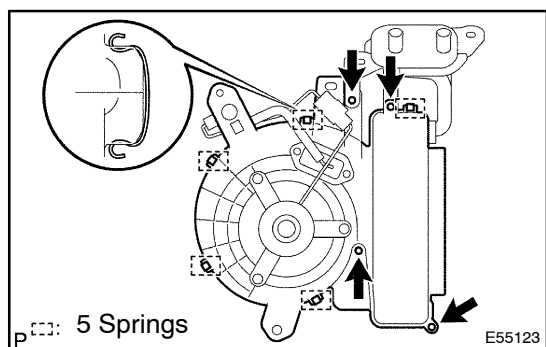**52. REMOVE REAR HEATER UNIT SUB-ASSY**


- (a) Remove the 4 screws and 5 holding springs.
- (b) Remove the rear heater unit sub-assy from the rear heater unit assy.

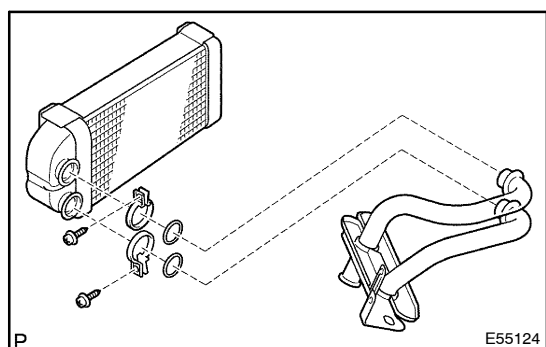


- (c) Remove the 2 screws, 2 clamps and rear heater unit sub-assy.
- (d) Remove the 2 O-rings from the pipe.

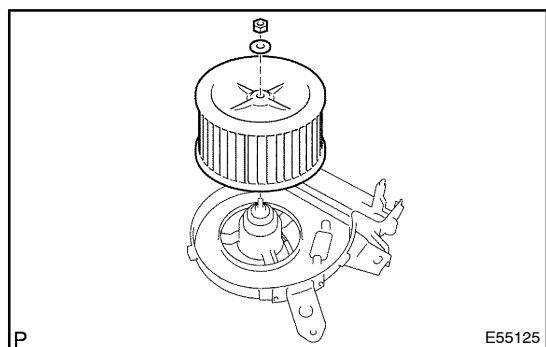**53. REMOVE REAR HEATER BLOWER FAN SUB-ASSY**

- (a) Remove the nut, washer and rear heater blower fan sub-assy.

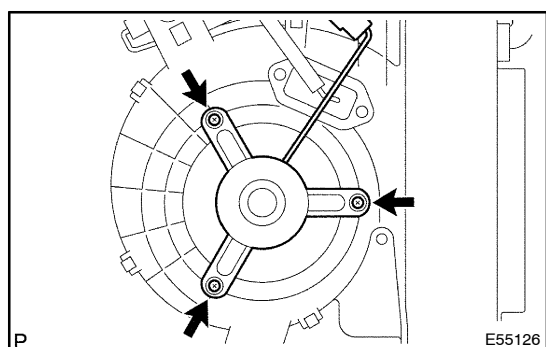**54. REMOVE REAR HEATER BLOWER MOTOR SUB-ASSY**


- (a) Remove the 3 screws and rear heater blower motor sub-assy.

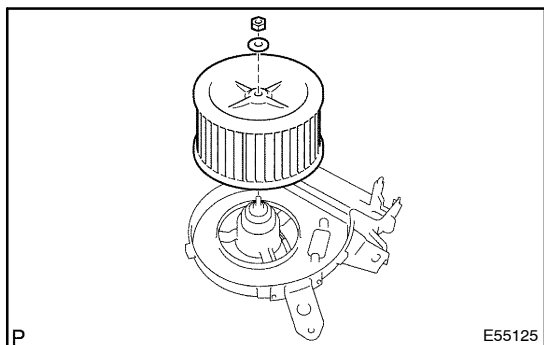

### 55. INSTALL REAR HEATER BLOWER FAN SUB-ASSY


- (a) Install the rear heater blower fan sub-assy with the nut and washer.

**Torque: 2.9 N·m (30 kgf·cm, 26 in·lbf)**

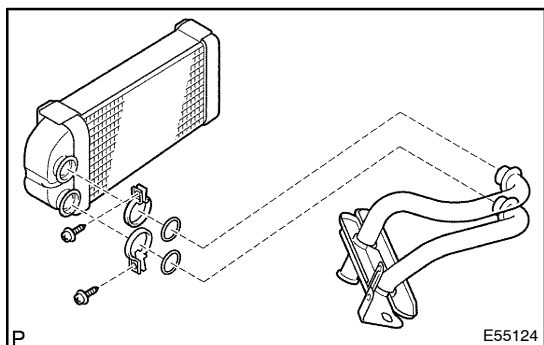


### 56. INSTALL REAR HEATER UNIT SUB-ASSY

- (a) Install the 2 new O-rings to the pipe.  
 (b) Install the rear heater unit sub-assy with the 2 screws and 2 clamps.

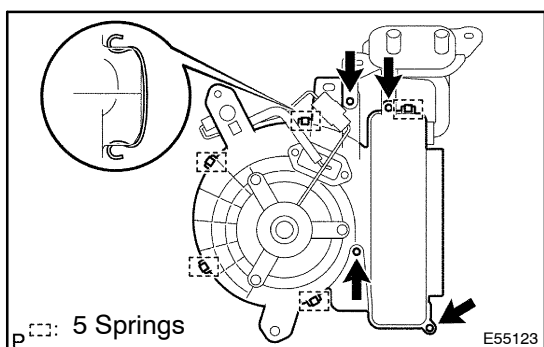

- (c) Install the rear heater unit sub-assy with the 4 screws and 5 holding springs, to the rear heater unit assy.

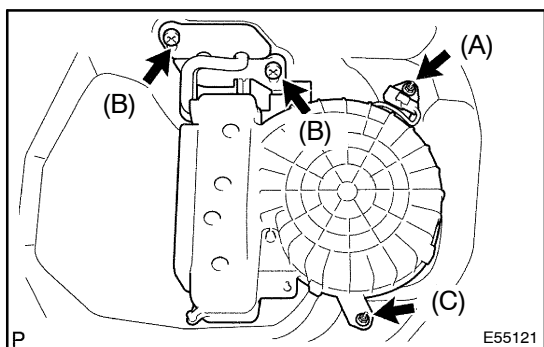


### 57. INSTALL REAR HEATER ASSY

- (a) Install the rear heater assy with the 2 nuts and 2 screws.

**HINT:**

Tighten in the order of A, B, C.

- (b) Connect the connector and clamp.

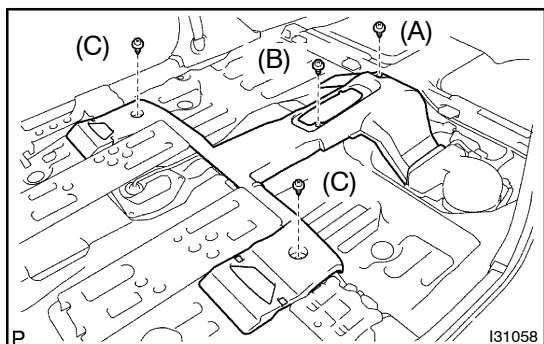


### 58. INSTALL AIR DUCT ASSY

- (a) Install the air duct assy with the 4 screws.

**HINT:**

Tighten in the order of A, B, C.

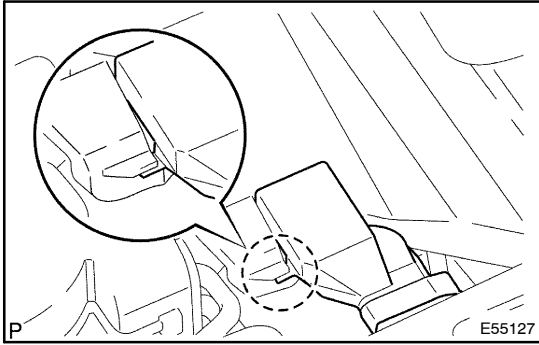**59. INSTALL AIR DUCT REAR NO.4**

- (a) Install the air duct rear No.4 to the air duct assy.
- (b) Install the boss of air duct rear No.4 to the rib of air duct assy.

**60. INSTALL PARKING BRAKE HOLE COVER**

(See page 41-5)

**61. INSTALL REAR No.2 SEAT ASSEMBLY RH (50/50 SPLIT SEAT TYPE)**

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

**62. INSTALL REAR No.2 SEAT ASSEMBLY LH (50/50 SPLIT SEAT TYPE)**

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

**63. INSTALL REAR NO.2 SEAT BELT ASSY INNER RH**

Torque: 44 N·m (440 kgf·cm, 32 ft·lbf)

**64. INSTALL REAR NO.2 SEAT BELT ASSY INNER LH**

Torque: 44 N·m (440 kgf·cm, 32 ft·lbf)

**65. INSTALL REAR No.1 SEAT ASSEMBLY RH (60/40 SPLIT AND FALDING SEAT TYPE)**

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

**66. INSTALL REAR No.1 SEAT ASSEMBLY LH (60/40 SPLIT AND FALDING SEAT TYPE)**

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

**67. CHECK SEAT SLIDE ADJUSTER LOCKS****68. INSTALL FRONT SEAT ASSEMBLY LH)**

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

**69. INSTALL FRONT SEAT ASSEMBLY RH**

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

**70. CHECK SEAT SLIDE ADJUSTER LOCKS****71. ADD COOLANT 1AZ-FE (See page 16-6)**

1CD-FTV (See page 16-19)

**72. CHECK ENGINE COOLANT LEAK 1AZ-FE (See page 16-6)**

1CD-FTV (See page 16-19)