


## REPLACEMENT

HINT:


COMPONENTS: (See page 60-26)

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE GLOVE COMPARTMENT DOOR ASSY**  
(See page 71-10)

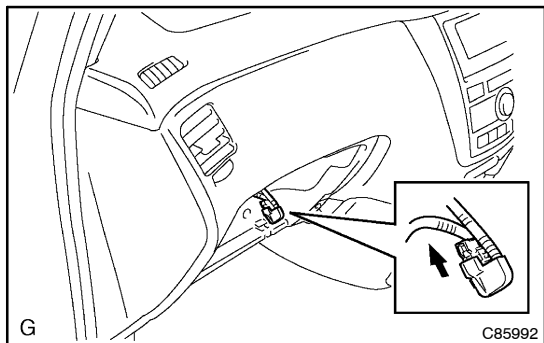

### 4. **SEPARATE PASSENGER AIRBAG CONNECTOR**

- (a) Disconnect the instrument panel passenger airbag connector.

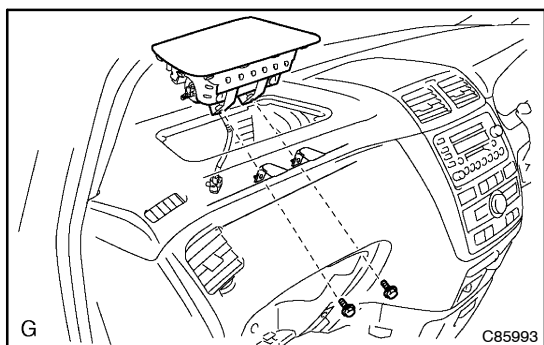

### 5. **REMOVE INSTRUMENT PANEL PASSENGER AIR BAG ASSY**

- (a) Remove the 2 bolts and instrument panel passenger airbag assy from the instrument panel reinforcement.

### 6. **INSTALL INSTRUMENT PANEL PASSENGER AIR BAG ASSY**

- (a) Install the instrument panel passenger airbag assy to the instrument panel reinforcement with the 2 bolts.

**Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)**

### 7. **INSPECT INSTRUMENT PANEL PASSENGER AIR BAG ASSY**

(See page 60-9)

### 8. **INSPECT SRS WARNING LIGHT** (See page 05-403)