


REPLACEMENT

HINT:


COMPONENTS: [See page 60-39](#)

1. **PRECAUTION** [\(See page 60-1\)](#)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** [\(See page 60-9\)](#)
3. **REMOVE FRONT DOOR SCUFF PLATE RH**
[\(See page 76-23\)](#)
4. **REMOVE FRONT DOOR SCUFF PLATE LH**
[\(See page 76-23\)](#)
5. **REMOVE COWL SIDE TRIM SUB-ASSY RH**
[\(See page 76-23\)](#)
6. **REMOVE COWL SIDE TRIM BOARD LH**
[\(See page 76-23\)](#)
7. **REMOVE REAR DOOR SCUFF PLATE RH**
[\(See page 76-23\)](#)
8. **REMOVE REAR DOOR SCUFF PLATE LH**
[\(See page 76-23\)](#)
9. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**
[\(See page 76-23\)](#)
10. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**
[\(See page 76-23\)](#)
11. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH**
[\(See page 76-23\)](#)
12. **REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**
[\(See page 76-23\)](#)
13. **REMOVE BACK DOOR WEATHERSTRIP**
[\(See page 76-23\)](#)
14. **REMOVE CENTER PILLAR GARNISH LOWER RH**
[\(See page 76-23\)](#)
15. **REMOVE CENTER PILLAR GARNISH LOWER LH**
[\(See page 76-23\)](#)
16. **REMOVE CENTER PILLAR GARNISH RH**
[\(See page 76-23\)](#)
17. **REMOVE CENTER PILLAR GARNISH LH**
[\(See page 76-23\)](#)
18. **REMOVE TONNEAU COVER ASSY(W/ TONNEAU COVER)**
[\(See page 76-23\)](#)
19. **REMOVE LUGGAGE ROOM BOX LID**
[\(See page 76-23\)](#)
20. **REMOVE BACK DOOR SCUFF PLATE**
[\(See page 76-23\)](#)
21. **REMOVE DECK TRIM SIDE PANEL ASSY RH**
[\(See page 76-23\)](#)
22. **REMOVE DECK TRIM SIDE PANEL ASSY LH**
[\(See page 76-23\)](#)
23. **REMOVE ROOF SIDE GARNISH INNER RH**
[\(See page 76-23\)](#)
24. **REMOVE ROOF SIDE GARNISH INNER LH**
[\(See page 76-23\)](#)

25. REMOVE FRONT PILLAR GARNISH RH
(See page 76-23)
26. REMOVE FRONT PILLAR GARNISH LH
(See page 76-23)
27. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER
(See page 76-23)
28. REMOVE INNER REAR VIEW MIRROR ASSY
(See page 76-23)
29. REMOVE RH VISOR ASSY
(See page 76-23)
30. REMOVE LH VISOR ASSY
(See page 76-23)
31. REMOVE MAP LAMP ASSY
(See page 76-23)
32. REMOVE ROOM LAMP ASSY NO.1
(See page 76-23)
33. REMOVE ROOM LAMP ASSY NO.2
(See page 76-23)
34. REMOVE COOLER AIR DUCT NO.4
(See page 76-23)
35. REMOVE AIR OUTLET REGISTER ASSY RH
(See page 76-23)
36. REMOVE AIR OUTLET REGISTER ASSY LH
(See page 76-23)
37. REMOVE ASSIST GRIP COVER
(See page 76-23)
38. REMOVE ASSIST GRIP SUB-ASSY
(See page 76-23)
39. REMOVE VISOR HOLDER
(See page 76-23)
40. REMOVE SUN ROOF OPENING TRIM MOULDING(W/ SLIDING ROOF)
(See page 76-23)
41. REMOVE SUN ROOF OPENING TRIM MOULDING NO.2(W/ SLIDING ROOF)
(See page 76-23)
42. REMOVE ROOF HEADLINING ASSY
(See page 76-23)

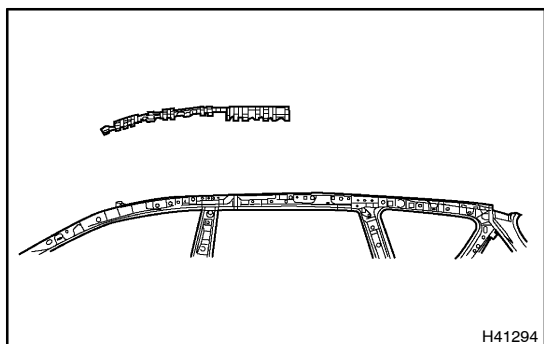

43. REMOVE SIDE RAIL SPACER FRONT RH
44. REMOVE SIDE RAIL SPACER REAR RH

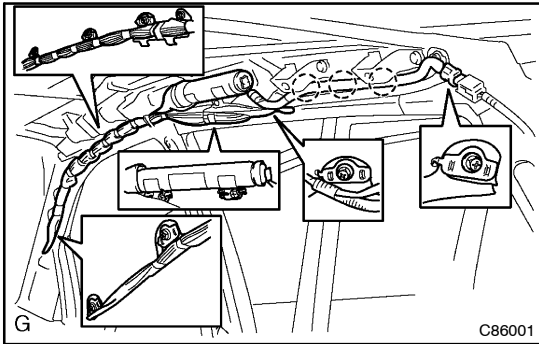

45. REMOVE CURTAIN SHIELD AIR BAG ASSY RH

- (a) Disconnect the connector of the curtain shield air bag assy RH.
- (b) Remove the 10 bolts and curtain shield air bag assy RH.

HINT:

Remove the bolts from front side of the vehicle in order.

46. INSPECT CURTAIN SHIELD AIR BAG ASSY RH

(See page 60-9)

47. INSTALL CURTAIN SHIELD AIR BAG ASSY RH

- (a) Install the curtain shield air bag assy RH with the 10 bolts.

Torque: 9.8 N·m (100 kgf·cm, 87 in. lbf)

HINT:

Install the bolts from rear side of the vehicle in order.

- (b) Connect the curtain shield air bag assy RH connector.

48. INSPECT SRS WARNING LIGHT (See page 05-403)