



DISPOSAL

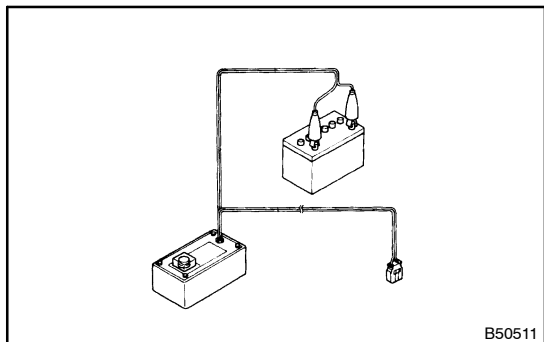

1. DISPOSE FRONT SEAT OUTER BELT ASSY RH(WHEN SCRAPPING VEHICLE DEPLOYMENT METHOD)

HINT:

Check battery positive voltage is above 12 V.

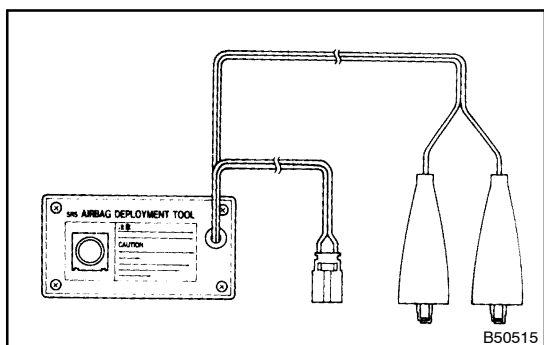


(a) Check functioning of SST.

CAUTION:

When activating the seat belt pretensioner, always use a specified SST.

SST 09082-00700, 09082-00770

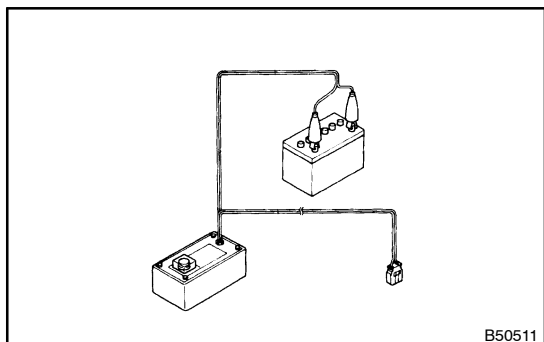


(1) Connect the SST to the battery.

Connect the red clip of the SST to the battery positive (+) terminal and the black clip to the battery negative (-) terminal.

HINT:

Do not connect the yellow connector which will be connected to the seat belt pretensioner.

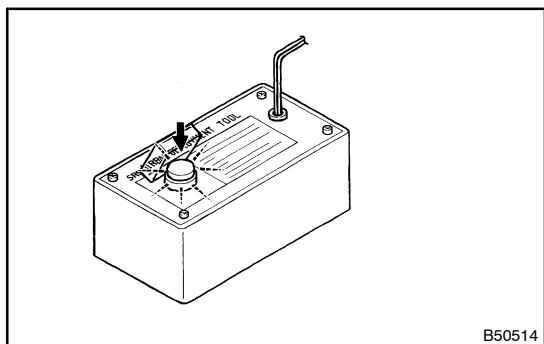

(2) Check functioning of SST.


Press the SST activation switch, and check the LED of the SST activation switch lights up.

CAUTION:


If the LED lights up when the activation switch is not pressed, the SST probably malfunctions, so definitely do not use the SST.

(b) Disconnect the pretensioner connector.

- (1) Remove the rear seat cushion assembly.
- (2) Remove the rear seat headrest plate cover.
- (3) Remove the wind deflector board assembly.
- (4) Remove the rear seat headrest plate.
- (5) Remove the rear seat headrest assembly.
- (6) Remove the rear seat back assembly.
- (7) Remove the quarter trim panel assembly front.

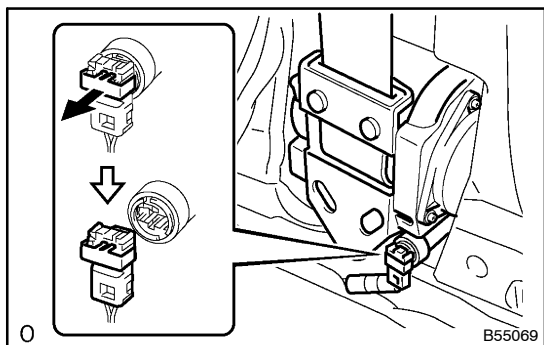

- (8) Disconnect the pretensioner connector as shown in the illustration.
- (c) Install the SST.
- (1) Install the floor anchor of the seat belt.

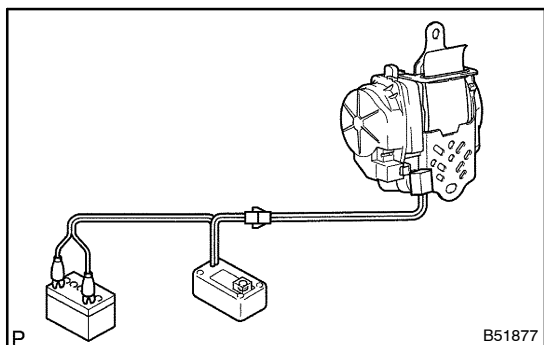


- (2) Connect the 2 SST, then connect them to the seat belt pretensioner.

SST 09082-00700, 09082-00770

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

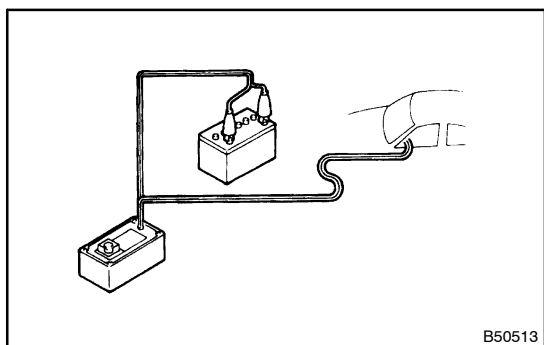

- (3) Move the SST to at least 10 m (33 ft) away from the front of the vehicle.
- (4) Close all the doors and windows of the vehicle.

NOTICE:

Take care not to damage the SST wire harness.

- (5) Connect the SST red clip to the battery positive (+) terminal and the black clip to the negative (-) terminal.

- (d) Activate the seat belt pretensioner.

- (1) Confirm that no one is inside the vehicle or within 10 m (33 ft) area around the vehicle.
- (2) Press the SST activation switch and activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates simultaneously with the LED of the SST activation switch lighting up.

- (e) Dispose of the front seat outer belt (with seat belt pretensioner).

HINT:

When scrapping a vehicle, activate the seat belt pretensioner and scrap the vehicle with activated front seat outer belt being installed.

2. DISPOSE FRONT SEAT OUTER BELT ASSY RH(WHEN DISPOSING OF FRONT SEAT BELT DEPLOYMENT METHOD)


NOTICE:

- When disposing of a front seat outer belt (with seat belt pretensioner) only, never use the customer's vehicle to activate the seat belt pretensioner.
- Be sure to follow the procedure given on the next page when activating the seat belt pretensioner.


- (a) Remove the front seat outer belt.

HINT:

Cut the belt near the seat belt retractor.

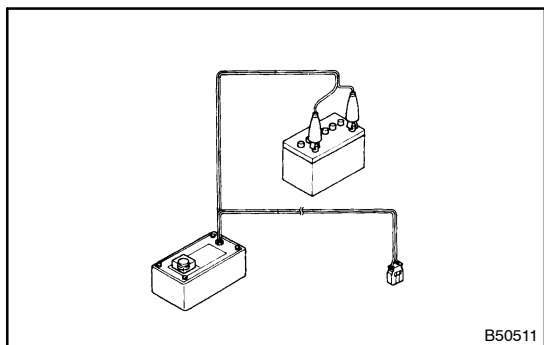


- (b) Check functioning of SST (See step 1-(a)).
SST 09082-00700, 09082-00770

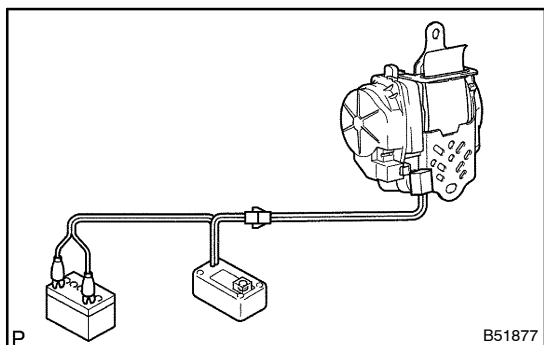

- (c) Install the SST.
(1) Connect the 2 SST, then connect to the seat belt pretensioner.
SST 09082-00700, 09082-00770

NOTICE:

To avoid damaging the SST connector and wire harness, do not lock the secondary lock of the twin lock.

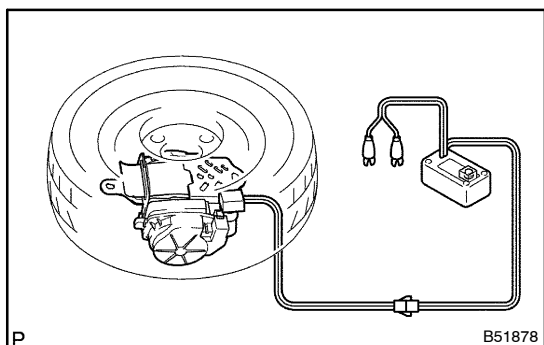

- (2) Place the front seat outer belt on the ground and cover it with the disc wheel with tire.


NOTICE:

Place the front seat outer belt as shown in the illustration.

- (3) Move the SST at least 10 m (33 ft) away from the disc wheel.

NOTICE:


Take care not to damage the SST wire harness.

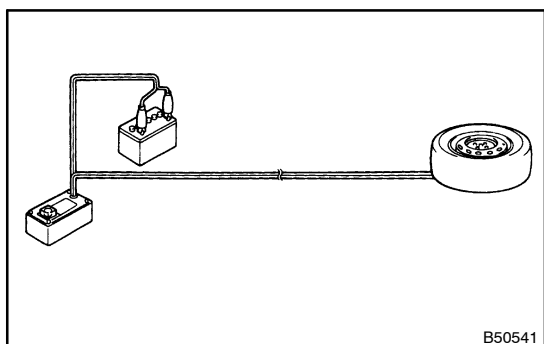

- (d) Activate the seat belt pretensioner.
(1) Connect the SST red clip to the battery positive (+) terminal and black clip to the battery negative (-) terminal.
(2) Check that no one is within 10 m (33 ft) area around the disc wheel.
(3) Press the SST activation switch and activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates simultaneously with the LED of the SST activation switch lighting up.

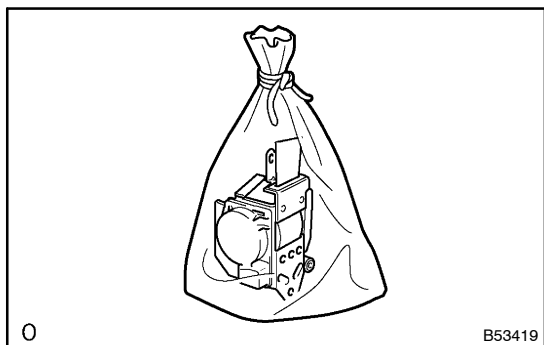

(e) Dispose of the front seat outer belt (with seat belt pretensioner).

- (1) Remove the disc wheel and SST.
- (2) Place the front seat outer belt in a vinyl bag, tie the end tightly and dispose of it in the same way as other general parts.