

PROBLEM SYMPTOMS TABLE

1. HEADLIGHT AND TAILLIGHT

Symptom	Suspect Area	See page
Only one headlight comes on.	1. Bulb 2. H-LP LH fuse (LWR, UPR) H-LP RH fuse (LWR, UPR) 3. Wire harness	– – – –
"LO-Beam" does not light (All).	1. MAIN fuse 2. Wire harness 3. HEAD relay	– – 65-5
"HI-Beam" does not light (All).	1. Headlight dimmer switch 2. Multiplex network body ECU 3. Wire harness	65-5 65-5 –
"HI-Beam" does not light (One side).	1. Bulb 2. Wire harness	– –
"Flash" does not light.	1. Headlight Dimmer Switch 2. Multiplex network body ECU 3. Wire harness	65-5 65-5 –
Headlight is dark.	1. Bulb 2. Wire harness	– –
Only one taillight comes on.	1. Bulb 2. Wire harness	– –
Taillight does not come on. (Headlight is normal)	1. TAIL Fuse 2. TAIL relay 3. Light Control Switch 4. Wire harness	– 65-5 65-5 –
Taillight does not come on. (Headlight does not light)	1. Light Control Switch 2. Wire harness	65-5 –
Rear combination light does not come on.	1. Bulb 2. Wire harness	– –
Headlight does not come on with engine running and light control switch in OFF	1. HEAD relay 2. Generator Lterminal 3. Parking brake switch 4. Multiplex network body ECU 5. Wire harness	65-5 – – 65-5 –

2. FOG LIGHT SYSTEM

Symptom	Suspect Area	See page
Front fog light does not light up with light control SW HEAD (Headlight is normal.)	1. FR FOG Fuse 2. FR Fog light relay 3. Combination switch 4. Wire harness 5. Multiplex network body ECU	– 65-5 65-5 – 65-5
Only one front fog light does not light up.	1. Bulb 2. Wire harness	– –

3. TURN SIGNAL AND HAZARD WARNING SYSTEM

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not light up.	1. IG1 Fuse 2. HAZ Fuse 3. Ignition switch 4. Turn signal flasher relay 5. Wire harness	– – – 65-4 –
Hazard warning light does not light up. (Turn is normal)	1. Hazard warning switch (Alr conditioning panel) 2. Wire harness	65-5 –
Turn signal does not light up. (Hazard is normal)	1. Turn signal switch 2. Wire harness	65-5 –
Turn signal does not light up in one direction.	1. Turn signal switch 2. Wire harness	65-5 –
Only one bulb does not light up.	1. Bulb 2. Wire harness	– –

4. INTERIOR LIGHT SYSTEM

Symptom	Suspect Area	See page
All the lights do not come ON.	1. DOME Fuse	–
The light does not come ON when the driver's door is opened.	1. Driver's door courtesy switch 2. Wire harness	65-5 –
The light does not come ON when the passenger's door is opened.	1. Passenger's door courtesy switch 2. Wire harness	65-5 –
The light does not come on when the rear-right door is opened.	1. Rear-Right door courtesy switch 2. Wire harness	65-5 –
The light does not come on when the rear-left door is opened.	1. Rear-Left door courtesy switch 2. Wire harness	65-5 –
Only one of the bulbs comes ON.	1. Bulb	–
The illumination does not fade out when all the doors are closed.	1. Courtesy switch 2. Wire harness 3. Multiplex network body ECU	65-5 – –
The illumination does not fade out immediately when the ignition switch is turned to ACC or ON within 15 seconds after all the doors are closed.	1. Ignition switch 2. IG1 Fuse 3. Multiplex network body ECU 4. Wire harness	– – 65-5 –