


ON-VEHICLE INSPECTION

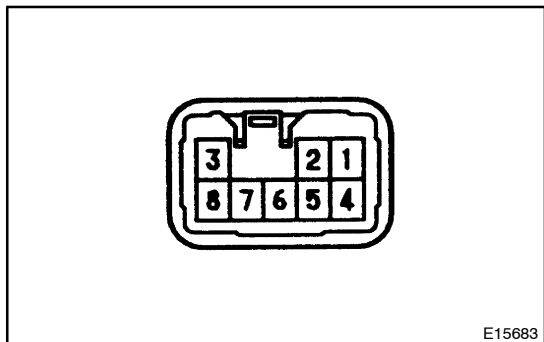

E15683

1. INSPECT TURN SIGNAL FLASHER CIRCUIT

- (a) Disconnect the connector from the turn signal flasher and inspect the connector on wire harness side as shown in the chart.

Tester connection	Condition	Specified condition
7 - Ground	Constant	Continuity
1 - Ground	Turn ignition switch ON	Battery positive voltage
1 - Ground	Turn ignition switch ON	No voltage
4 - Ground	Constant	Battery positive voltage

- (b) Connect the connector to turn signal flasher and inspect the wire harness side connector from the back side, as shown in the chart.

Tester connection	Condition	Specified condition
2 - Ground	Hazard switch OFF → ON	0V → 0 ⇔ 9V (60 to 120 time per minutes)
2 - Ground	Turn signal switch (right turn) OFF → ON	0V → 0 ⇔ 9V (60 to 120 time per minutes)
3 - Ground	Hazard switch OFF → ON	0V → 0 ⇔ 9V (60 to 120 time per minutes)
3 - Ground	Turn signal switch (left turn) OFF → ON	0V → 0 ⇔ 9V (60 to 120 time per minutes)
5 - Ground	Turn signal switch (left turn) OFF → ON	Above 9 V → 0 V
6 - Ground	Turn signal switch (right turn) OFF → ON	Above 9 V → 0 V
8 - Ground	Hazard switch OFF → ON	Above 9 V → 0 V

2. ILLUMINATED ENTRY SYSTEM OPERATION CHECK

- (a) The light that is lit in the illuminated entry system is explained below:

HINT:

Reference:

Key cylinder light, room light.

- (b) Turn the ignition switch OFF close all the doors, and set the driver door in the lock condition.
- (c) Unlock the driver door and open any one of the doors, and check that the room light goes on. Close the door and check that the room light goes off in about 15 seconds.
- (d) Turn the ignition switch ON and open and close any one of the doors. Check that the room light immediately goes off.
- (e) Turn ignition switch OFF.
- (f) Open and close any one of the doors to light the room light. Before the room light goes off in about 15 seconds, turn the ignition switch ON. Check that the room light goes off immediately.
- (g) Turn ignition switch OFF.
- (h) Open and close any one of the doors to light the room light. Before the light goes off in about 15 seconds, lock the driver door. Check that the light goes off immediately.