


REPLACEMENT

HINT:

COMPONENTS: [See page 65-12](#)

1. REMOVE ENGINE UNDER COVER RH
([See page 76-2](#))
2. REMOVE ENGINE UNDER COVER LH
([See page 76-2](#))
3. REMOVE FRONT FENDER LINER RH
([See page 76-2](#))
4. REMOVE FRONT FENDER LINER LH
([See page 76-2](#))
5. REMOVE FRONT BUMPER COVER
([See page 76-2](#))

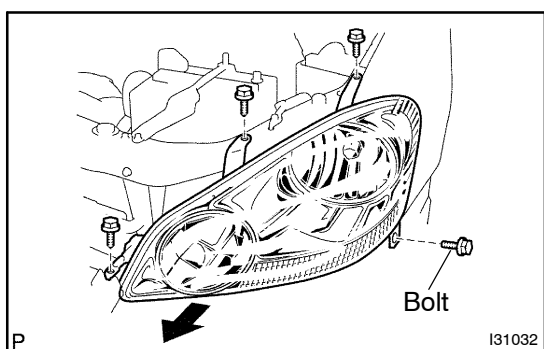


6. REMOVE HEADLAMP UNIT ASSY LH

- (a) Remove the 3 screws and bolt.
- (b) Disconnect the connectors.
- (c) Pull out the headlight unit forward.
- (d) Remove the headlight assy.
- (e) Remove the bulb and headlight unit assy LH.

7. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH

HINT:


When only the installation part of the headlight unit assy LH is damaged, it can be repaired inexpensively by using a bracket provided for repair. In this case, however, the headlight unit assy LH itself should not be damaged.

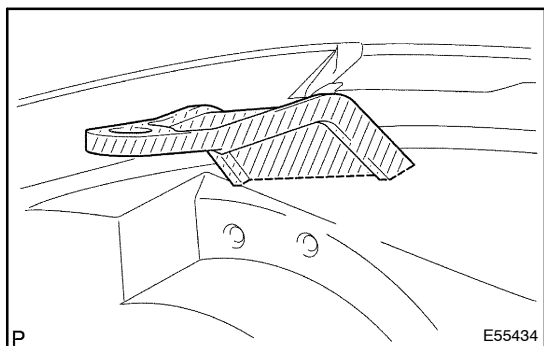

- (a) Cut off the part shaded in the illustration and properly it with sandpaper.

NOTICE:

After roughly cutting off the part, place the headlamp protector retainer UPR LH against the bosses and gradually file any interfering part until the proper condition for installation is made.

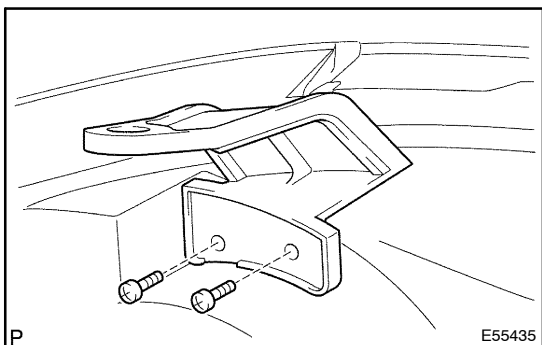

- (b) Install the headlamp protector retainer UPR LH with the 2 screws.

8. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH

HINT:



When only the installation part of the headlight unit assy LH is damaged, it can be repaired inexpensively by using a bracket provided for repair. In this case, however, the headlight unit assy LH itself should not be damaged.

- (a) Cut off the part shaded in the illustration and properly it with sandpaper.

A : Less than 9 mm (0.35 in.)

NOTICE:

After roughly cutting off the part, place the headlamp protector retainer UPR LH against the bosses and gradually file any interfering part until the proper condition for installation is made.

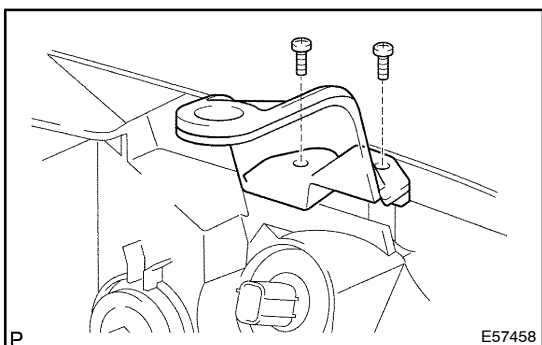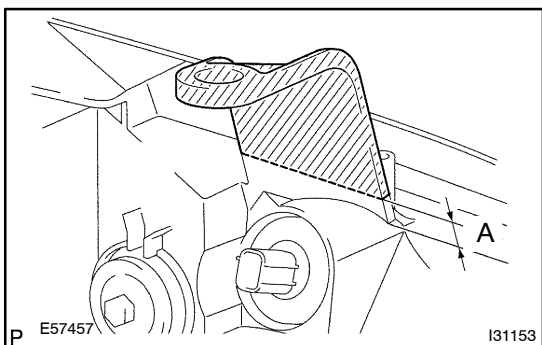

- (b) Install the headlamp protector retainer UPR LH with the 2 screws.

9. INSTALL HEADLAMP PROTECTOR RETAINER LWR LH



HINT:

When only the installation part of the headlight unit assy LH is damaged, it can be repaired inexpensively by using a bracket provided for repair. In this case, however, the headlight unit assy LH itself should not be damaged.

- (a) Cut off the part shaded in the illustration and properly it with sandpaper.

NOTICE:

After roughly cutting off the part, place the headlamp protector retainer LWR LH against the bosses and gradually file any interfering part until the proper condition for installation is made.

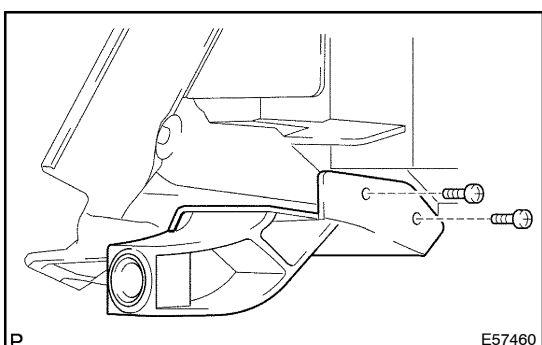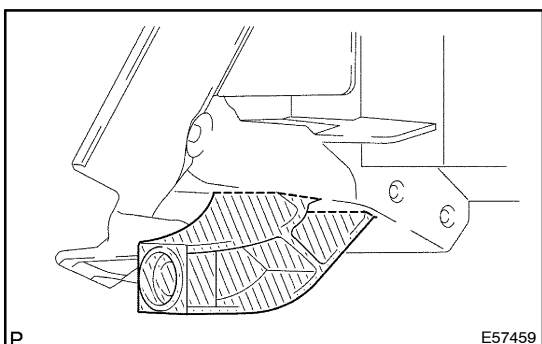


- (b) Install the headlamp protector retainer LWR LH with the 2 screws.

10. INSTALL HEADLAMP PROTECTOR RETAINER LWR LH

HINT:


When only the installation part of the headlight unit assy LH is damaged, it can be repaired inexpensively by using a bracket provided for repair. In this case, however, the headlight unit assy LH itself should not be damaged.

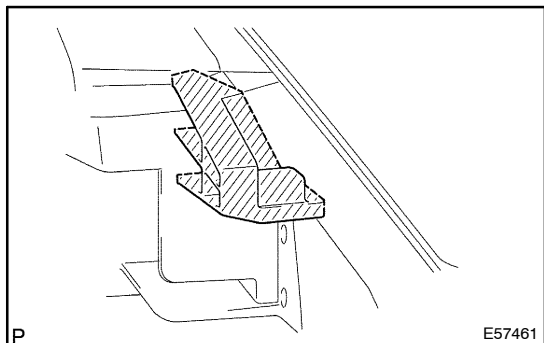

- (a) Cut off the part shaded in the illustration and properly it with sandpaper.

NOTICE:

After roughly cutting off the part, place the headlamp protector retainer LWR LH against the bosses and gradually file any interfering part until the proper condition for installation is made.

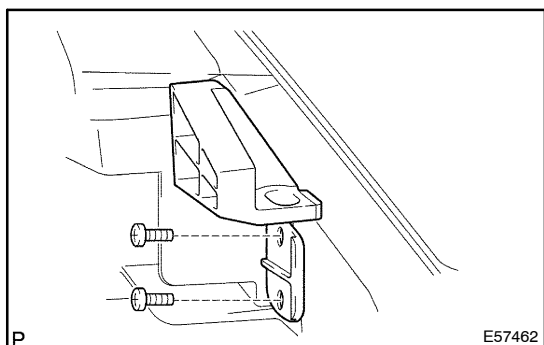

- (b) Install the headlamp protector retainer LWR LH with the 2 screws.

11. HEADLIGHT AIM ONLY (See Page 65-17)

12. PUT VEHICLE THESE CONDITIONS (See Page 65-20)

13. ADJUST FOG LIGHT AIM (See Page 65-20)