


## FOG LAMP LAMP UNIT LH REPLACEMENT

65093-01

1. REMOVE ENGINE UNDER COVER RH  
(See page 76-2)
2. REMOVE ENGINE UNDER COVER LH  
(See page 76-2)
3. REMOVE FRONT FENDER LINER RH  
(See page 76-2)
4. REMOVE FRONT FENDER LINER LH  
(See page 76-2)
5. REMOVE FRONT BUMPER COVER  
(See page 76-2)

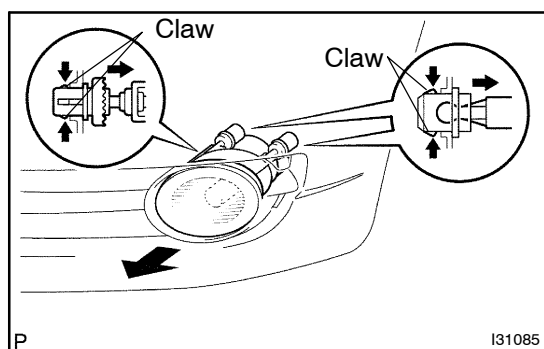

### 6. REMOVE FOG LAMP LAMP UNIT LH

- (a) Release the 6 claws from the front bumper and pull out the fog light, as shown in the illustration.
- (b) Remove the fog light assy.
- (c) Remove the bulb and fog light unit LH.

7. PUT VEHICLE IN THESE CONDITIONS (See page 65-20)
8. ADJUST FOG LIGHT AIM (See page 65-20)