


SIDE TURN SIGNAL LAMP LENS LH REPLACEMENT

65095-01

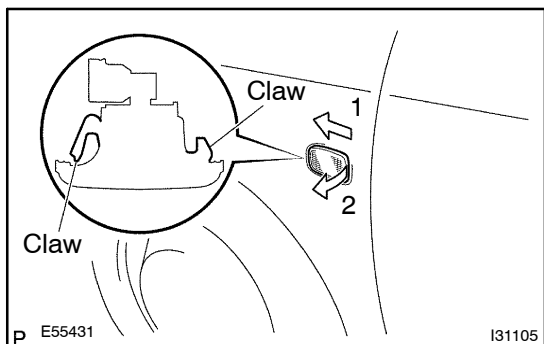

1. REMOVE SIDE TURN SIGNAL LAMP LENS LH

- (a) Pull the vehicle forward and undo the claw by pulling it forward.
- (b) Take the socket off and remove the side turn signal light lens LH.

2. INSTALL SIDE TURN SIGNAL LAMP LENS LH

- (a) Install the side turn signal light lens LH with a new gasket.