


WINDSHIELD WIPER SWITCH ASSY REPLACEMENT

6603Q-01

1. REMOVE STEERING COLUMN COVER LWR
(See [Page 50-6](#))
2. REMOVE STEERING COLUMN COVER UPR
(See [Page 50-6](#))

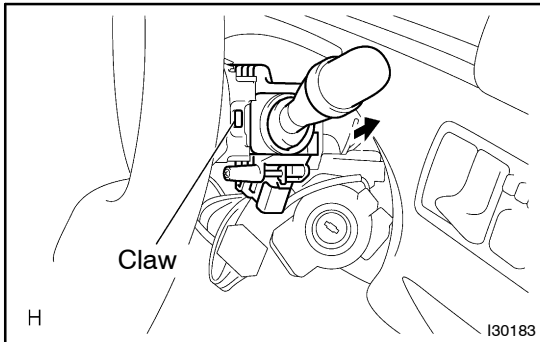

3. REMOVE WINDSHIELD WIPER SWITCH ASSY

- (a) Disconnect the connector.
- (b) Using a screwdriver, press the claw shown in the illustration to disengage it is meshing and remove the windshield wiper switch assy.

NOTICE:

Pressing the claw hard breaks the claw.

HINT:

Tape the screwdriver tip before use.