


FRONT NO.1 SPEAKER ASSY REPLACEMENT

6705W-01

HINT:

COMPONENTS: [See page 67-1](#)

1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH
([See page 75-6](#))
2. REMOVE POWER WINDOW REGULATOR SWITCH ASSY
([See page 75-6](#))
3. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH
([See page 75-6](#))

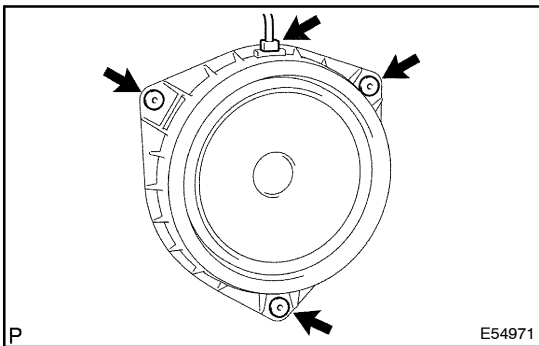

4. REMOVE FRONT NO.1 SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Using a drill, remove the 3 rivets and front No. 1. speaker assy.

5. INSTALL FRONT NO.1 SPEAKER ASSY

- (a) Using a air riveter, install the front No.1 speaker assy with 3 rivets.
- (b) Connect the connector.