

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Rear window defogger does not operate (Indicator lamp on)	1. Communication function check	–
	2. RR DEF fuse	–
	3 DEF relay	70-24
	4. Rear window defogger wire	–
	5. Wire harness	–
	6. Air conditioning amplifier	55-96
Rear window defogger does not operate (Indicator lamp off)	1. HEAT fuse	–
	2. Defogger switch (A/C panel switch)	55-79
	3. Air conditioning amplifier	55-96
	4. Wire harness	–