

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Door lock system does not operate at all.	1. Door 25 A fuse 2. Body ECU 3. Wire harness	68-1 05-677 -
Door lock system does not operate by manual switch.	1. Power window master switch (Door control switch for manual operation) 2. Body ECU 3. Wire harness	73-10 05-677 -
Door lock system does not operate by door key	1. Driver door lock assembly (door control switch) 2. Body ECU 3. Wire harness 4. Door lock link disconnected	73-10 05-677 - -
Fault in key confine prevention operate.	1. Body ECU 2. Unlock warning switch assembly 3. Front door courtesy lamp 4. Wireharness	05-677 - 73-10 -
Only one door lock does not operate.	1. Front door lock assembly RH 2. Wireharness	73-10 -
Fault in 2-Operation unlock function of Driver's side door key lock and unlock switch	1. Door key lock and unlock switch circuit 2. Body ECU 3. Wireharness	73-10 05-677 -