

## PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Sliding roof system does not operate (Door Lock is normal)	1. FRP/W fuse (I/P/B) 2. GAUGE fuse (I/P/B) 3. Wire harness	68-1 68-1 –
Sliding roof system does not operate (Door Lock is normal)	1. PWR fuse 2. Sliding roof control relay and switch 3. Sliding roof dive gear 4. Wire harness	68-1 74-2 74-5 –
Sliding roof system operate abnormally	1. Sliding roof control relay and switch 2. Sliding roof dive gear 3. Wire harness	74-2 74-5 –
Sliding roof system stops operation half way (Any foreign materials are not trapped in motor assembly)	1. Sliding roof control relay and switch 2. Sliding roof dive gear 3. Wire harness	74-2 74-5 –