


ADJUSTMENT


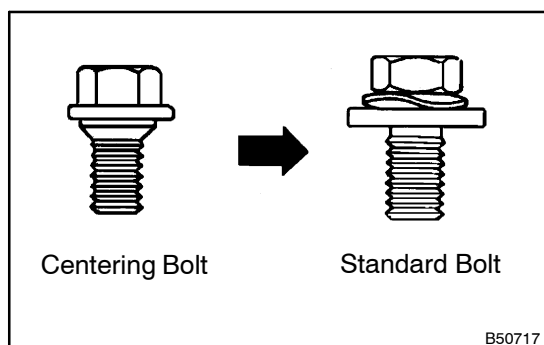


HINT:

Since the centering bolt is used as a hood hinge and hood lock set bolt, the hood and hood lock can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.

1. INSPECT BACK DOOR PANEL SUB-ASSY


- (a) Check that the clearance is within the standard value.

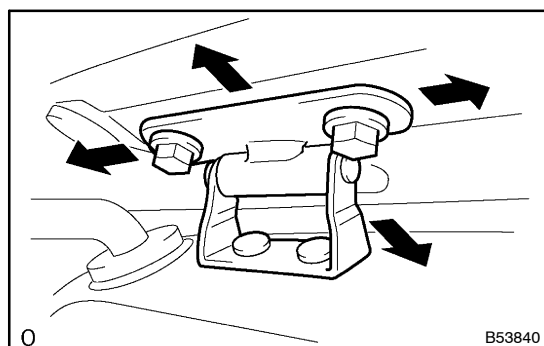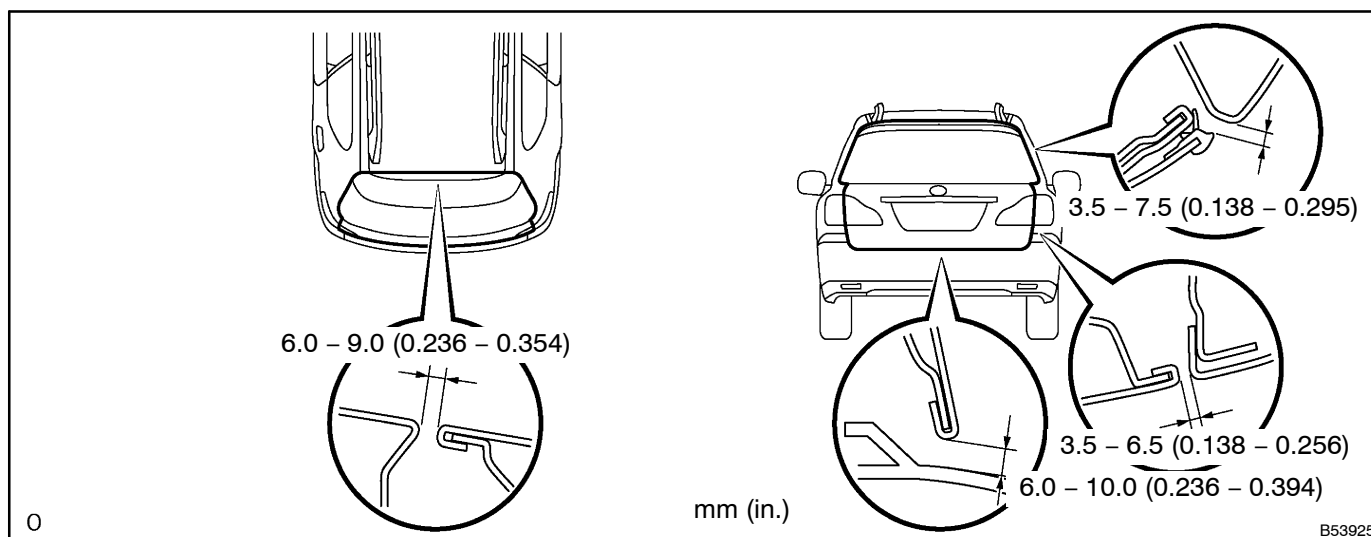

2. ADJUST BACK DOOR PANEL SUB-ASSY

- (a) Adjust the door by loosening the door side hinge bolts.
- (b) Adjust the door by loosening the body side hinge nuts.

Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)

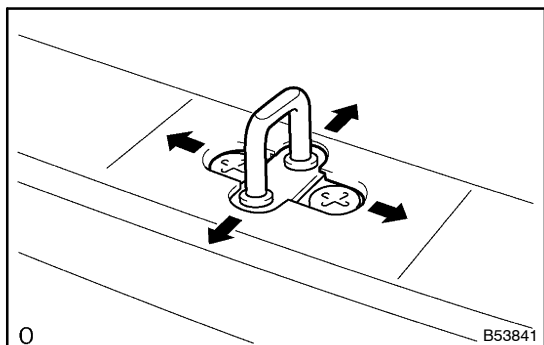

- (c) Check that the door fit and door linkage are adjusted correctly.
- (d) Adjust the striker by loosening the striker mounting screws.

Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

- (e) Using a plastic hammer, tap the striker for adjustment.