


BACK DOOR STAY SUB-ASSY LH REPLACEMENT

7506L-02

HINT:

In the RH side, work in the same procedure as in the LH side.

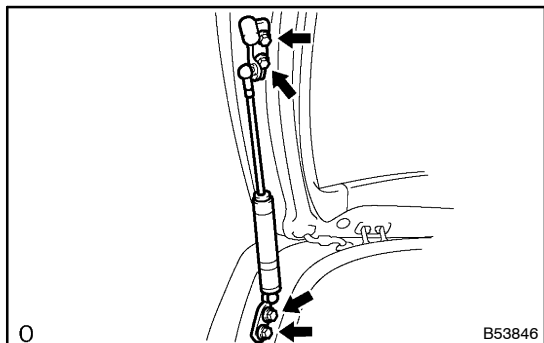

1. REMOVE BACK DOOR STAY SUB-ASSY LH

- (a) Remove the 4 bolts and back door stay from the back door panel.

HINT:

While supporting the back door by hand, remove the back door stay.

2. INSTALL BACK DOOR STAY SUB-ASSY LH

- (a) Install the back door stay with the 4 bolts.

Torque: 7.5 N·m (77 kgf·cm, 66 in·lbf)