

REPLACEMENT


HINT:

Installation is in the reverse order of removal. But the installation is indicated only when it has a point.

1. REMOVE ENGINE UNDER COVER RH

- (a) Remove the 6 screws.
- (b) Using a clip remover, remove the 2 clips, hook and front bumper cover.

2. REMOVE ENGINE UNDER COVER LH

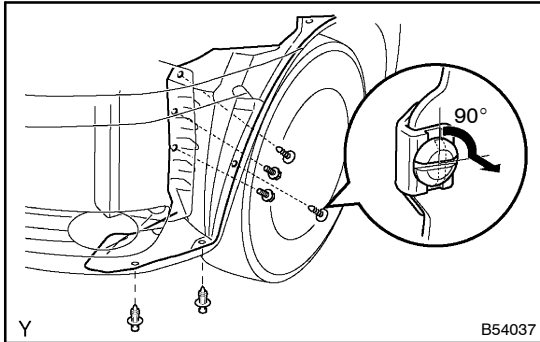


3. REMOVE FRONT FENDER LINER RH

- (a) Remove the 2 screws.
- (b) Using a clip remover, remove the 3 clips and a part of the front fender liner LH.

HINT:

Remove the screw and clip, and separate the front fender liner LH within the range that the front bumper cover can be removed.

4. REMOVE FRONT FENDER LINER LH

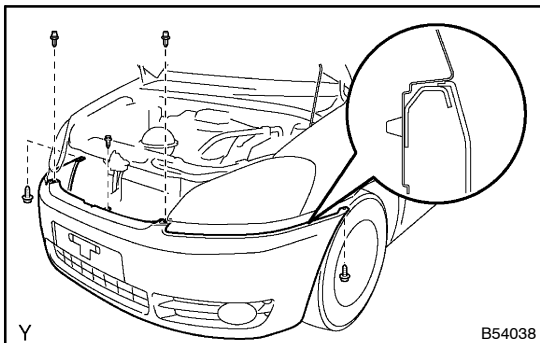

5. REMOVE FRONT BUMPER COVER

- (a) Using a clip remover, remove the 3 clips.
- (b) Remove the 2 screws.
- (c) Remove the hook and front bumper cover.
- (d) Disconnect each connector.

6. REMOVE TYPE1 H/LAMP WASHER NOZZLE SUB-ASSY RH

- (a) Remove the 2 clamps.
- (b) Pull out the 2 front head lamp washer nozzles.

7. REMOVE FOG LAMP LAMP UNIT RH(W/ FOG LIGHT)

- (a) Remove the screw, nut and fog lamp.

8. REMOVE FOG LAMP LAMP UNIT LH(W/ FOG LIGHT)

9. REMOVE FRONT BUMPER HOLE COVER RH(W/O FOG LIGHT)

10. REMOVE FRONT BUMPER HOLE COVER LH(W/O FOG LIGHT)

11. REMOVE ULTRASONIC SENSOR NO.1(W/ CLEARANCE AND BACK SONER)

12. REMOVE RADIATOR GRILLE LWR RH

13. REMOVE RADIATOR GRILLE LWR LH**14. REMOVE FRONT BUMPER SIDE SUPPORT RH**

(a) Remove the screw and front bumper side support.

15. REMOVE FRONT BUMPER SIDE SUPPORT LH**16. REMOVE FRONT BUMPER PIECE****17. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY**

(a) Remove the 8 bolts and the front bumper reinforcement sub-assembly.