


REPLACEMENT

HINT:

Installation is in the reverse order of removal. But, the installation is indicated only when it has a point.

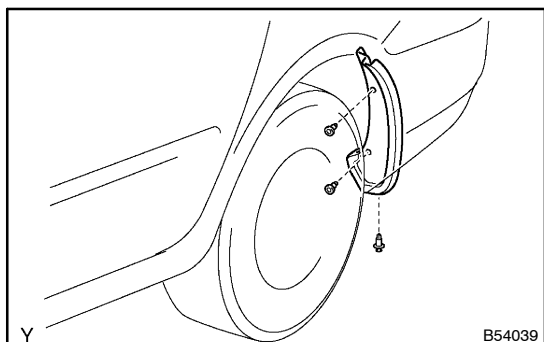


1. REMOVE REAR BUMPER EXTENSION RH

- (a) Using a clip remover, remove the 3 clips, screw and rear bumper extension.

2. REMOVE REAR BUMPER EXTENSION LH

3. REMOVE BACK DOOR SCUFF PLATE (See page 76-23)

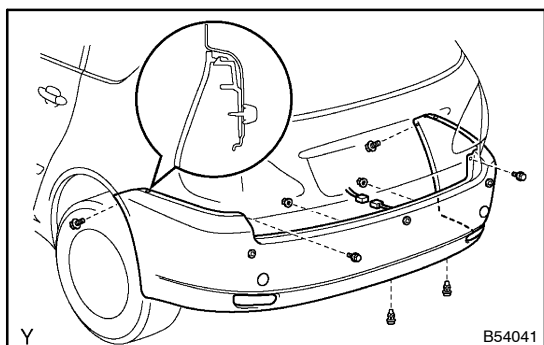

4. REMOVE REAR BUMPER COVER

- (a) Remove the 2 nuts and 2 bolts.
 (b) Remove the 2 screws.
 (c) Using a clip remover, remove the 2 clips.
 (d) Disconnect the ultrasonic sensor No.1 and remove the bumper cover.

5. REMOVE REAR BUMPER SIDE SUPPORT RH

- (a) Remove the 2 screws and rear bumper side support.

6. REMOVE REAR BUMPER SIDE SUPPORT LH

7. REMOVE REAR BUMPER SIDE SUPPORT NO.2 RH

- (a) Remove the screw and rear bumper side support No.2.

8. REMOVE REAR BUMPER SIDE SUPPORT NO.2 LH

9. REMOVE REAR BUMPER PLATE RH

10. REMOVE REAR BUMPER PLATE LH

11. REMOVE REFLEX REFLECTOR ASSY RH

- (a) Remove the screw and the reflex reflector assembly.

12. REMOVE REFLEX REFLECTOR ASSY LH

13. REMOVE ULTRASONIC SENSOR NO.1(W/ CLEARANCE AND BACK SONER)