


## BACK DOOR GARNISH OUTSIDE REPLACEMENT

7608M-01

HINT:

Installation is in the reverse order of removal.

1. **REMOVE BACK WINDOW GARNISH**  
(See page 75-21)
2. **REMOVE REAR WINDOW SIDE GARNISH RH**  
(See page 75-21)
3. **REMOVE REAR WINDOW SIDE GARNISH LH**  
(See page 75-21)
4. **REMOVE ASSIST GRIP SUB-ASSY**
5. **REMOVE BACK DOOR TRIM BOARD ASSY**  
(See page 75-21)
6. **REMOVE BACK DOOR OUTSIDE HANDLE**  
(See page 75-21)

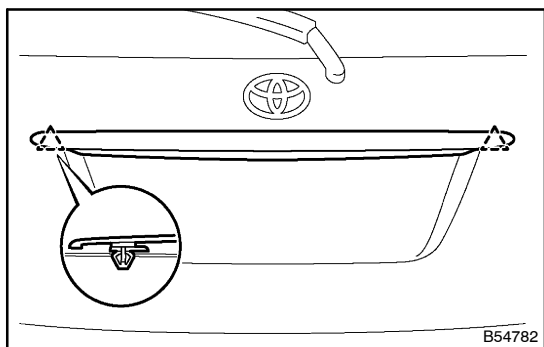

### 7. REMOVE BACK DOOR GARNISH OUTSIDE

- (a) Remove the 2 nuts.
- (b) Remove the 2 clips and garnish.