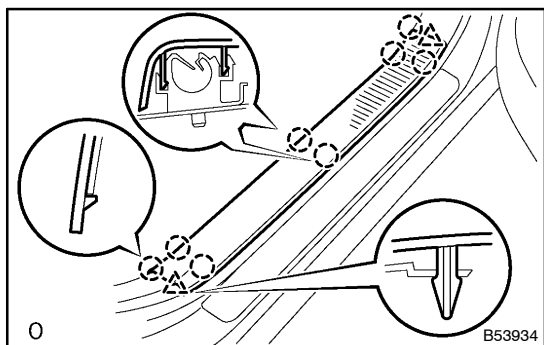


REPLACEMENT

HINT:

- Installation is in the reverse order of removal. But, the installation is indicated only when it has a point.
- In the LH side, work in the same procedure as in the RH side.

1. REMOVE REAR No.2 SEAT ASSY RH(50/50 SPLIT TYPE REAR No.2 SEAT)
2. REMOVE REAR No.2 SEAT ASSY LH(50/50 SPLIT TYPE REAR No.2 SEAT)



3. REMOVE FRONT DOOR SCUFF PLATE RH

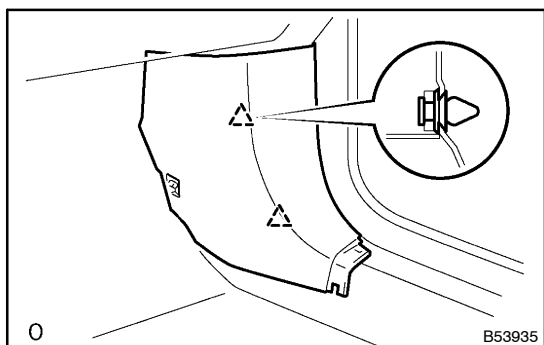
- (a) Using a screwdriver, remove the front door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

4. REMOVE FRONT DOOR SCUFF PLATE LH



5. REMOVE COWL SIDE TRIM SUB-ASSY RH

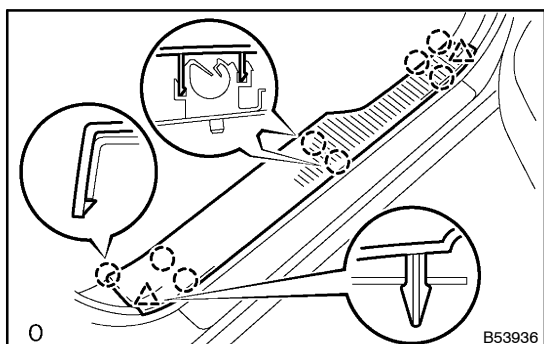
- (a) Using a screwdriver, remove the cowl side trim.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

6. REMOVE COWL SIDE TRIM BOARD LH



7. REMOVE REAR DOOR SCUFF PLATE RH

- (a) Using a screwdriver, remove the rear door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

8. REMOVE REAR DOOR SCUFF PLATE LH

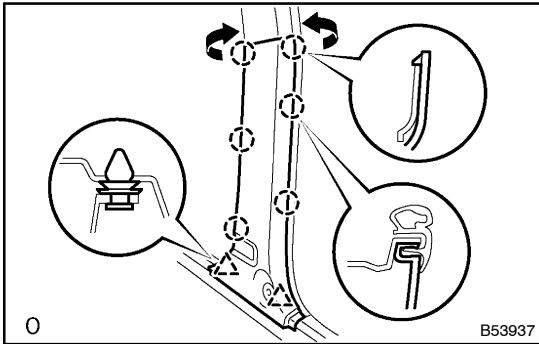
9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

10. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

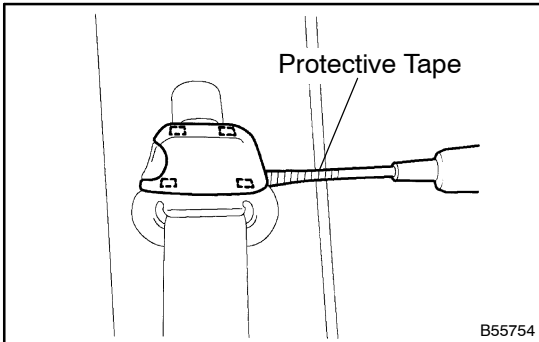
11. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

12. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

13. REMOVE BACK DOOR WEATHERSTRIP

**14. REMOVE CENTER PILLAR GARNISH LOWER RH**

- (a) Remove the bolt and front seat outer belt floor anchor.
- (b) Pull the center pillar lower garnish upward to remove it.
- (c) Employ the same manner described above to the other side.

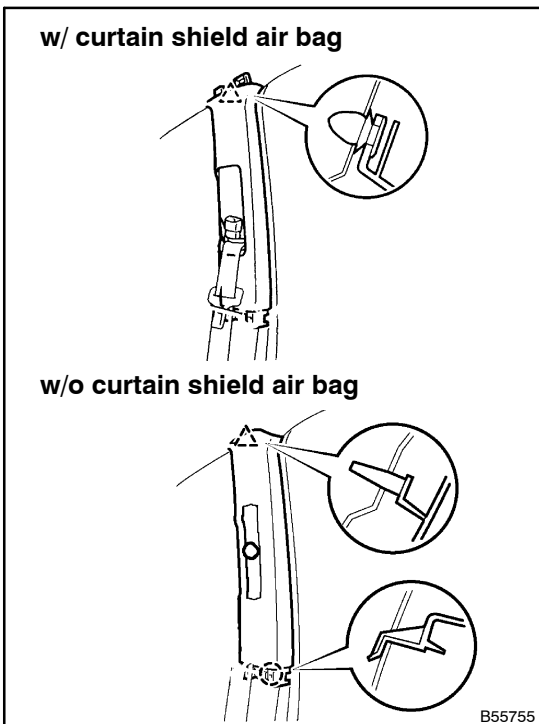
15. REMOVE CENTER PILLAR GARNISH LOWER LH**16. REMOVE CENTER PILLAR GARNISH RH**

- (a) w/o curtain shield air bag:
Using a screwdriver, remove the center pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) w/o curtain shield air bag:
Remove the bolt and front seat outer belt shoulder anchor.



- (c) w/ curtain shield air bag:

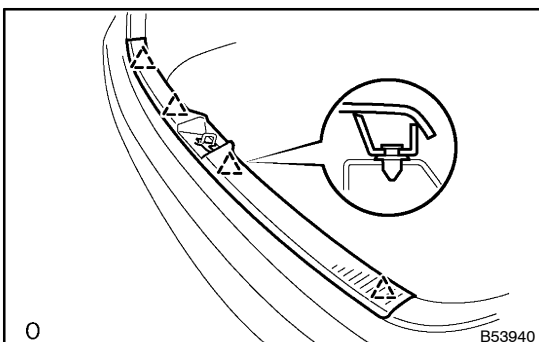
Remove the 2 screws.

- (d) Using a screwdriver, remove the center pillar upper garnish.

HINT:

Tape the screwdriver tip before use.

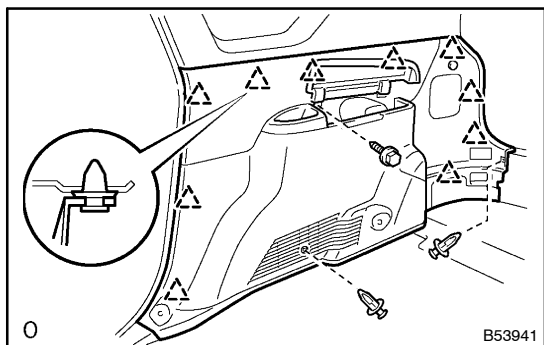
- (e) Employ the same manner described above to the other side.

17. REMOVE CENTER PILLAR GARNISH LH**18. REMOVE LUGGAGE ROOM BOX LID****19. REMOVE BACK DOOR SCUFF PLATE**

- (a) Using a screwdriver, remove the back door scuff plate.

HINT:

Tape the screwdriver tip before use.



20. REMOVE DECK TRIM SIDE PANEL ASSY RH

- Remove the bolt and the rear seat 3 point type belt assembly outer floor anchor.
- Remove the bolt and the rear No.2 seat belt assembly outer floor anchor.
- Remove the 2 clips.
- Remove the screw.
- Using a screwdriver, remove the deck trim side panel then disconnect the connector.

HINT:

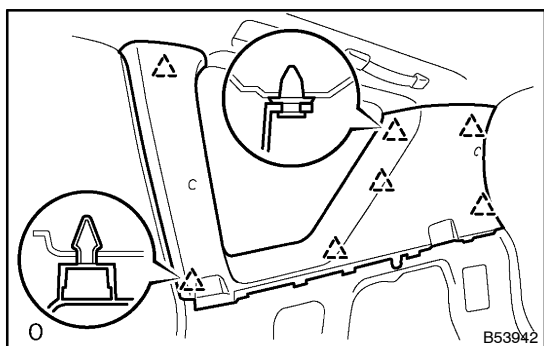
Tape the screwdriver tip before use.

21. REMOVE DECK TRIM SIDE PANEL ASSY LH

- Remove the bolt and the rear seat 3 point type belt assembly outer floor anchor.
- Remove the bolt and the rear No.2 seat belt assembly outer floor anchor.
- Remove the 2 clips.
- Remove the screw.
- Using a screwdriver, remove the deck trim side panel.

HINT:

Tape the screwdriver tip before use.



22. REMOVE ROOF SIDE GARNISH INNER RH

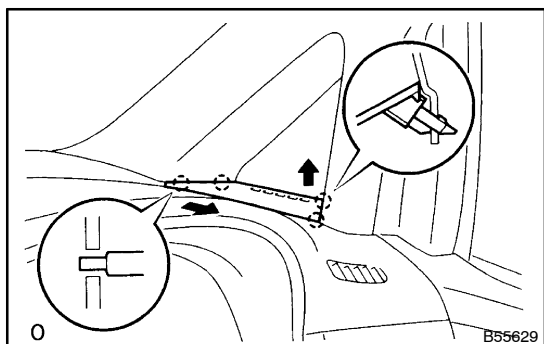
- Remove the bolt and the rear seat 3 point type belt assembly outer shoulder anchor.
- Remove the bolt and the rear No.2 seat belt assembly outer shoulder anchor.
- Using a screwdriver, remove the roof side garnish inner.

HINT:

Tape the screwdriver tip before use.

- Employ the same manner described above to the other side.

23. REMOVE ROOF SIDE GARNISH INNER LH



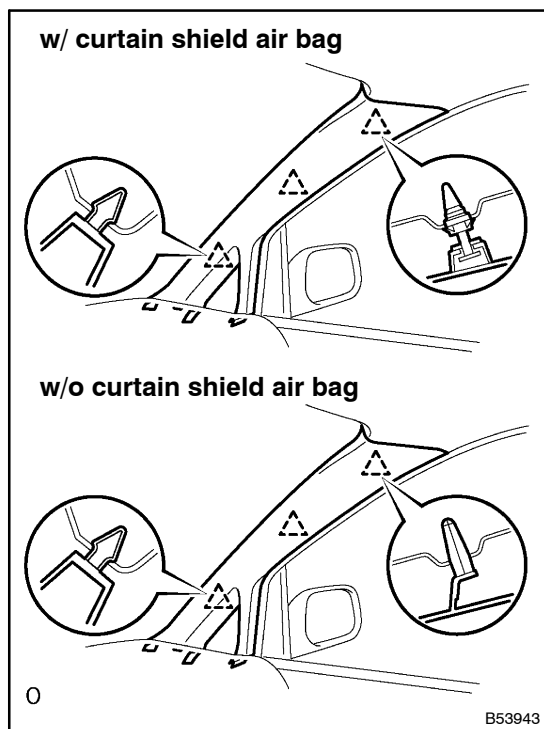
24. REMOVE FRONT PILLAR GARNISH LOWER RH

- Using a screwdriver, remove the front pillar garnish lower.

HINT:

Tape the screwdriver tip before use.

25. REMOVE FRONT PILLAR GARNISH LOWER LH

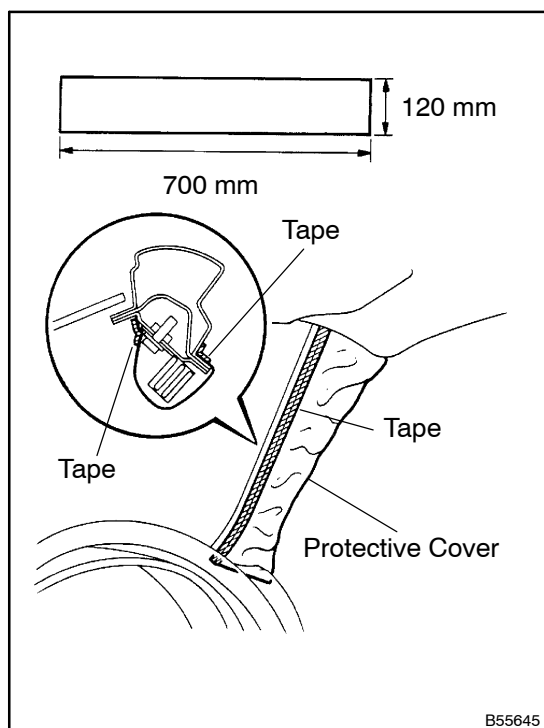


26. REMOVE FRONT PILLAR GARNISH RH

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.



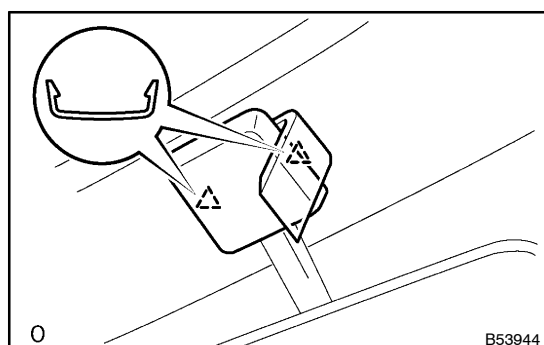
- (b) Protect the curtain shield air bag.

NOTICE:

Cover the curtain shield air bag with the protection cover as soon as the front pillar garnish is removed.

- (1) Cover the air bag with cloth or nylon of 700 mm × 120 mm and fix the ends of the cover with tape, as shown in the illustration.
- (c) Employ the same manner described above to the other side.

27. REMOVE FRONT PILLAR GARNISH LH



28. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER

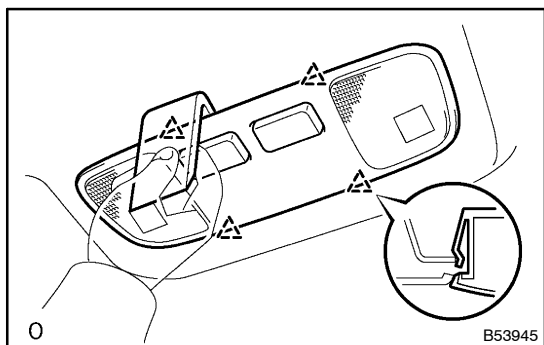
- (a) Using a roof moulding remover, remove the inner rear view mirror stay holder cover.

29. REMOVE INNER REAR VIEW MIRROR ASSY

- (a) Remove the 2 screws and inner rear view mirror.

30. REMOVE RH VISOR ASSY

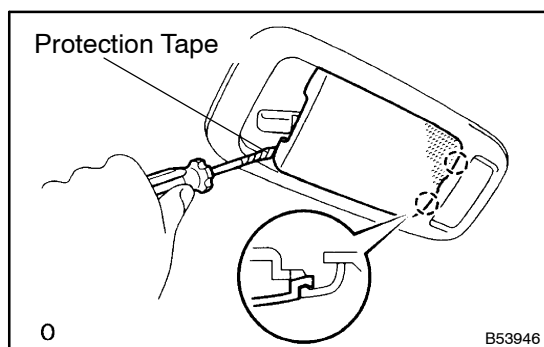
- (a) Using a roof moulding, remove the visor bracket cover.
 (b) Remove the 2 screws.
 (c) Remove the visor assembly then disconnect the connector.

31. REMOVE LH VISOR ASSY**32. REMOVE MAP LAMP ASSY**

- (a) Using a roof moulding remover, remove the deck trim side panel then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

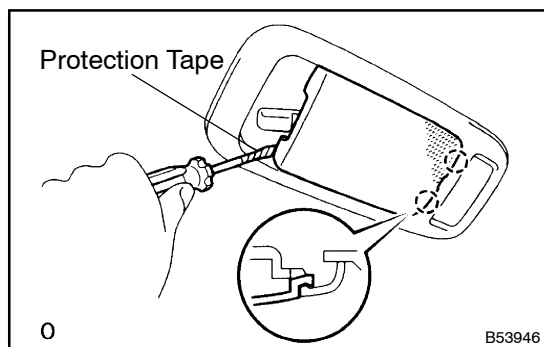
**33. REMOVE ROOM LAMP ASSY NO.1**

- (a) Using a screwdriver, remove the room lamp cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and the room lamp assembly then disconnect the connector.

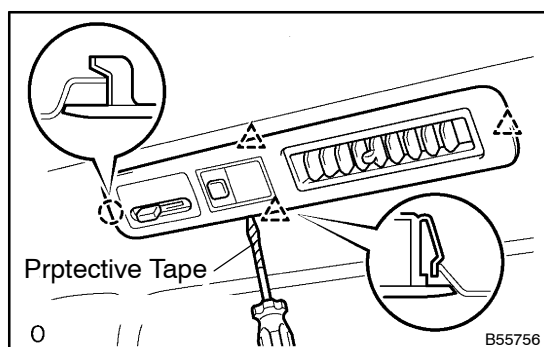
**34. REMOVE ROOM LAMP ASSY NO.2**

- (a) Using a screwdriver, remove the room lamp.

HINT:

Tape the screwdriver tip before use.

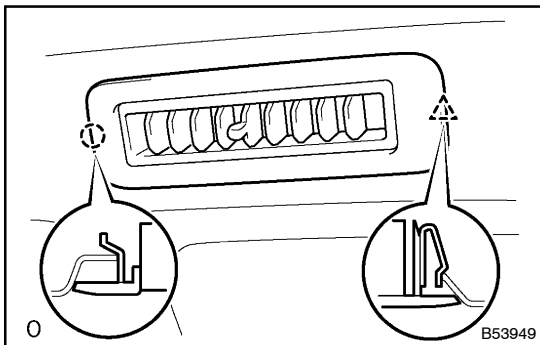
- (b) Remove the 2 screws and the room lamp assembly then disconnect the connector.

**35. REMOVE COOLER AIR DUCT NO.4**

- (a) Using a screwdriver, remove the cooler air duct No.4 then disconnect the connector.

HINT:

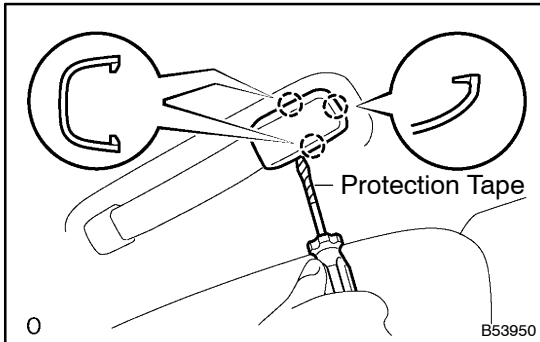
Tape the screwdriver tip before use.

**36. REMOVE AIR OUTLET REGISTER ASSY RH**

- (a) Using a screwdriver, remove the air outlet register assembly.

HINT:

Tape the screwdriver tip before use.

37. REMOVE AIR OUTLET REGISTER ASSY LH**38. REMOVE ASSIST GRIP COVER**

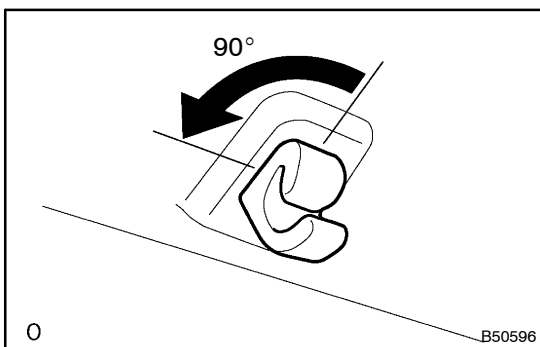
- (a) Using a screwdriver, remove the assist grip cover.

HINT:

Tape the screwdriver tip before use.

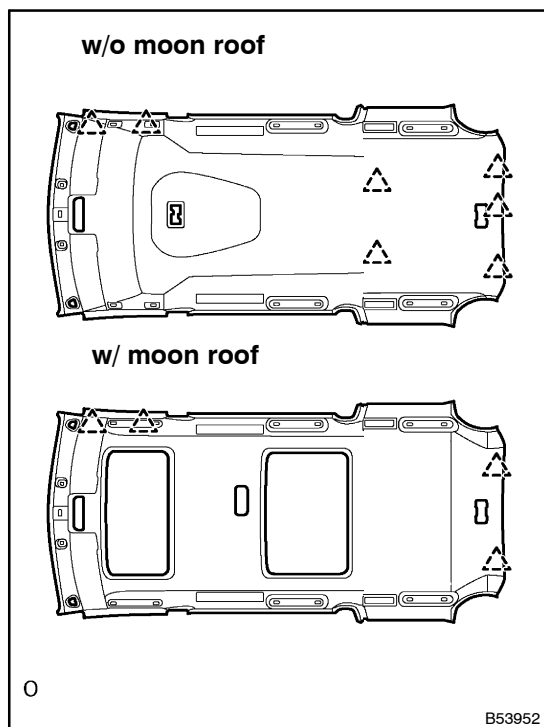
39. REMOVE ASSIST GRIP SUB-ASSY

- (a) Remove the 2 screws and assist grip.

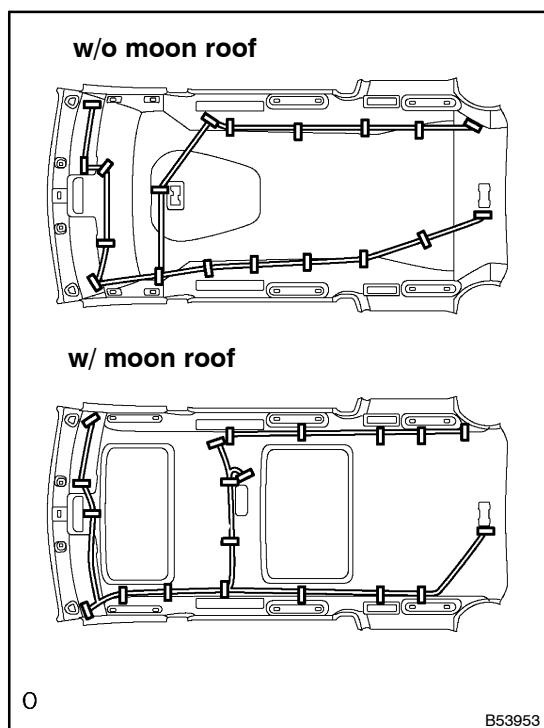
**40. REMOVE VISOR HOLDER**

- (a) Remove the holder of the sun visor by turning it to the left.

41. REMOVE SUN ROOF OPENING TRIM MOULDING(W/ SLIDING ROOF)**42. REMOVE SUN ROOF OPENING TRIM MOULDING NO.2(W/ SLIDING ROOF)**

**43. REMOVE ROOF HEADLINING ASSY**

- (a) Remove the 7 clips (w/o moon roof) or 4 clips (w/ moon roof) and roof headlining.
- (b) Remove the headlining assembly from the back door.

**44. INSTALL ROOF HEADLINING ASSY**

- (a) Align the markings, then install the wire harness with tape.
- (b) Install the roof headlining with the 7 clips (w/o moon roof) or 4 clips (w/ moon roof).

45. INSTALL FRONT PILLAR GARNISH RH**HINT:**

Installation should be done with a new clip since the upper clip is not reusable.

46. INSTALL FRONT PILLAR GARNISH LH**HINT:**

Installation should be done with a new clip since the upper clip is not reusable.

47. INSTALL ROOF SIDE GARNISH INNER RH

- (a) Install the rear seat 3 point type belt assembly outer shoulder anchor with the bolt.
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
- (b) Install the rear No.2 seat belt assembly outer shoulder anchor with the bolt.
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
- (c) Employ the same manner described above to the other side.

48. INSTALL ROOF SIDE GARNISH INNER LH**49. INSTALL DECK TRIM SIDE PANEL ASSY RH**

- (a) Install the rear seat 3 point type belt assembly outer floor anchor with the bolt.
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
- (b) Install the rear No.2 seat belt assembly outer floor anchor with the bolt.
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
- (c) Employ the same manner described above to the other side.

50. INSTALL DECK TRIM SIDE PANEL ASSY LH**51. INSTALL CENTER PILLAR GARNISH RH**

- (a) w/o curtain shield air bag:
Install the front seat outer belt shoulder anchor with the bolt.
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
- (b) Employ the same manner described above to the other side.

52. INSTALL CENTER PILLAR GARNISH LH**53. INSTALL CENTER PILLAR GARNISH LOWER RH**

- (a) Install the front seat outer belt floor anchor with the bolt.
Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)
- (b) Employ the same manner described above to the other side.

54. INSTALL CENTER PILLAR GARNISH LOWER LH