

# IGNITION OR STARTER SWITCH ASSY REPLACEMENT

80017-02

1. REMOVE STEERING COLUMN COVER LWR  
(See [page 50-6](#))
2. REMOVE IGNITION OR STARTER SWITCH ASSY
  - (a) Disconnect each connector and remove the wire harness clamp.
  - (b) Remove the 2 screws and the ignition or starter switch assembly.