





# POWER SOURCE

## SERVICE HINTS

### HEAD RELAY

- 5-3 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position  
 Closed with the engine running and the parking brake lever released (Parking brake SW off)

### TAIL RELAY

- 5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

### I10 IGNITION SW

- 1-3 : Closed with the ignition key at **ACC** or **ON** position  
 1-2 : Closed with the ignition key at **ON** or **ST** position  
 5-4 : Closed with the ignition key at **ST** position

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I10	37				

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	26	Engine Room R/B No.1 (Engine Compartment Left)
2	27	Engine Room R/B No.2 (Engine Compartment Left)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IC		
II	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IK		
2A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2E	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F		
2H		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)

## : GROUND POINTS

Code	See Page	Ground Points Location
IF	44	Instrument Panel Brace RH

