



HEADLIGHT

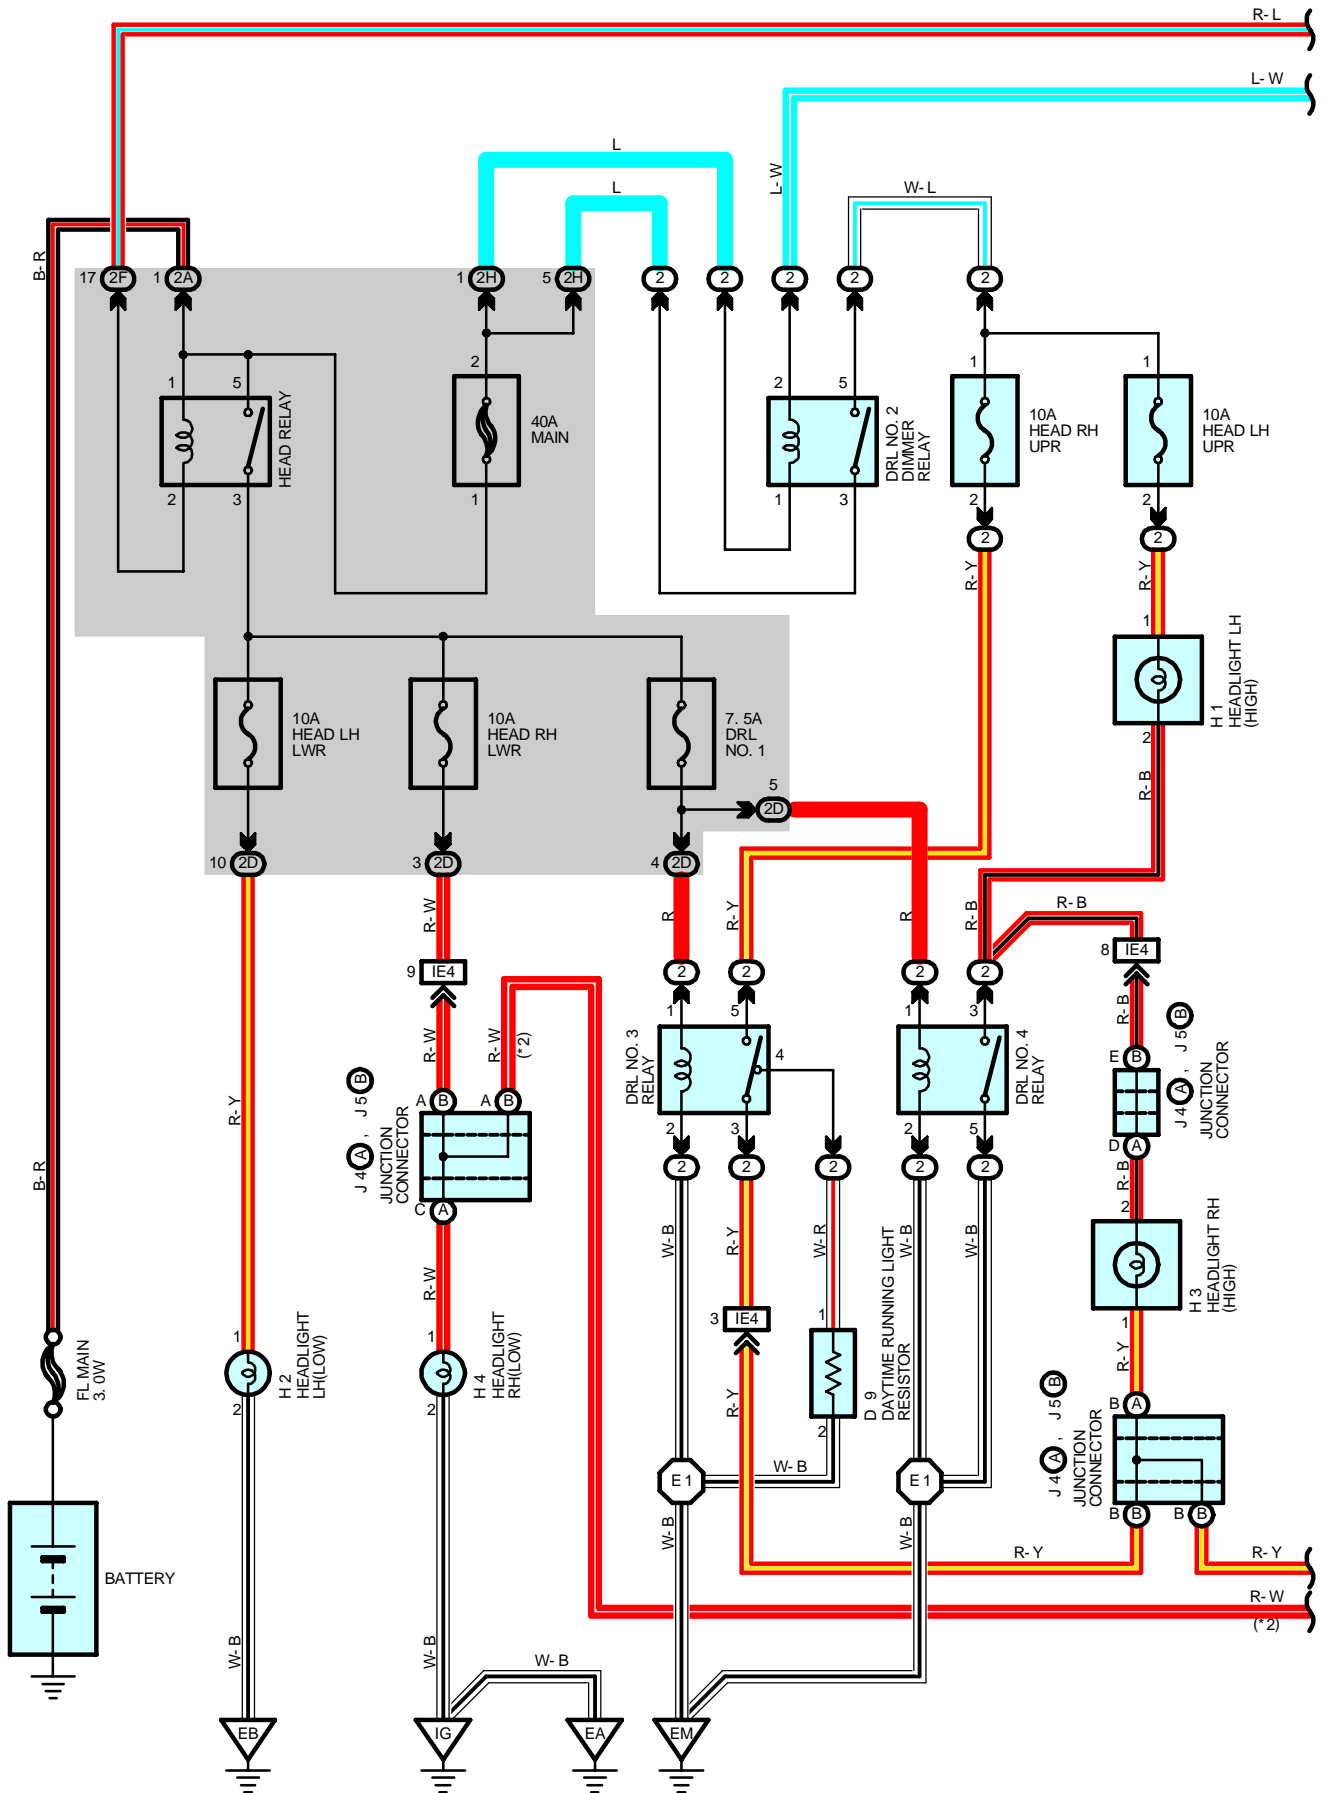

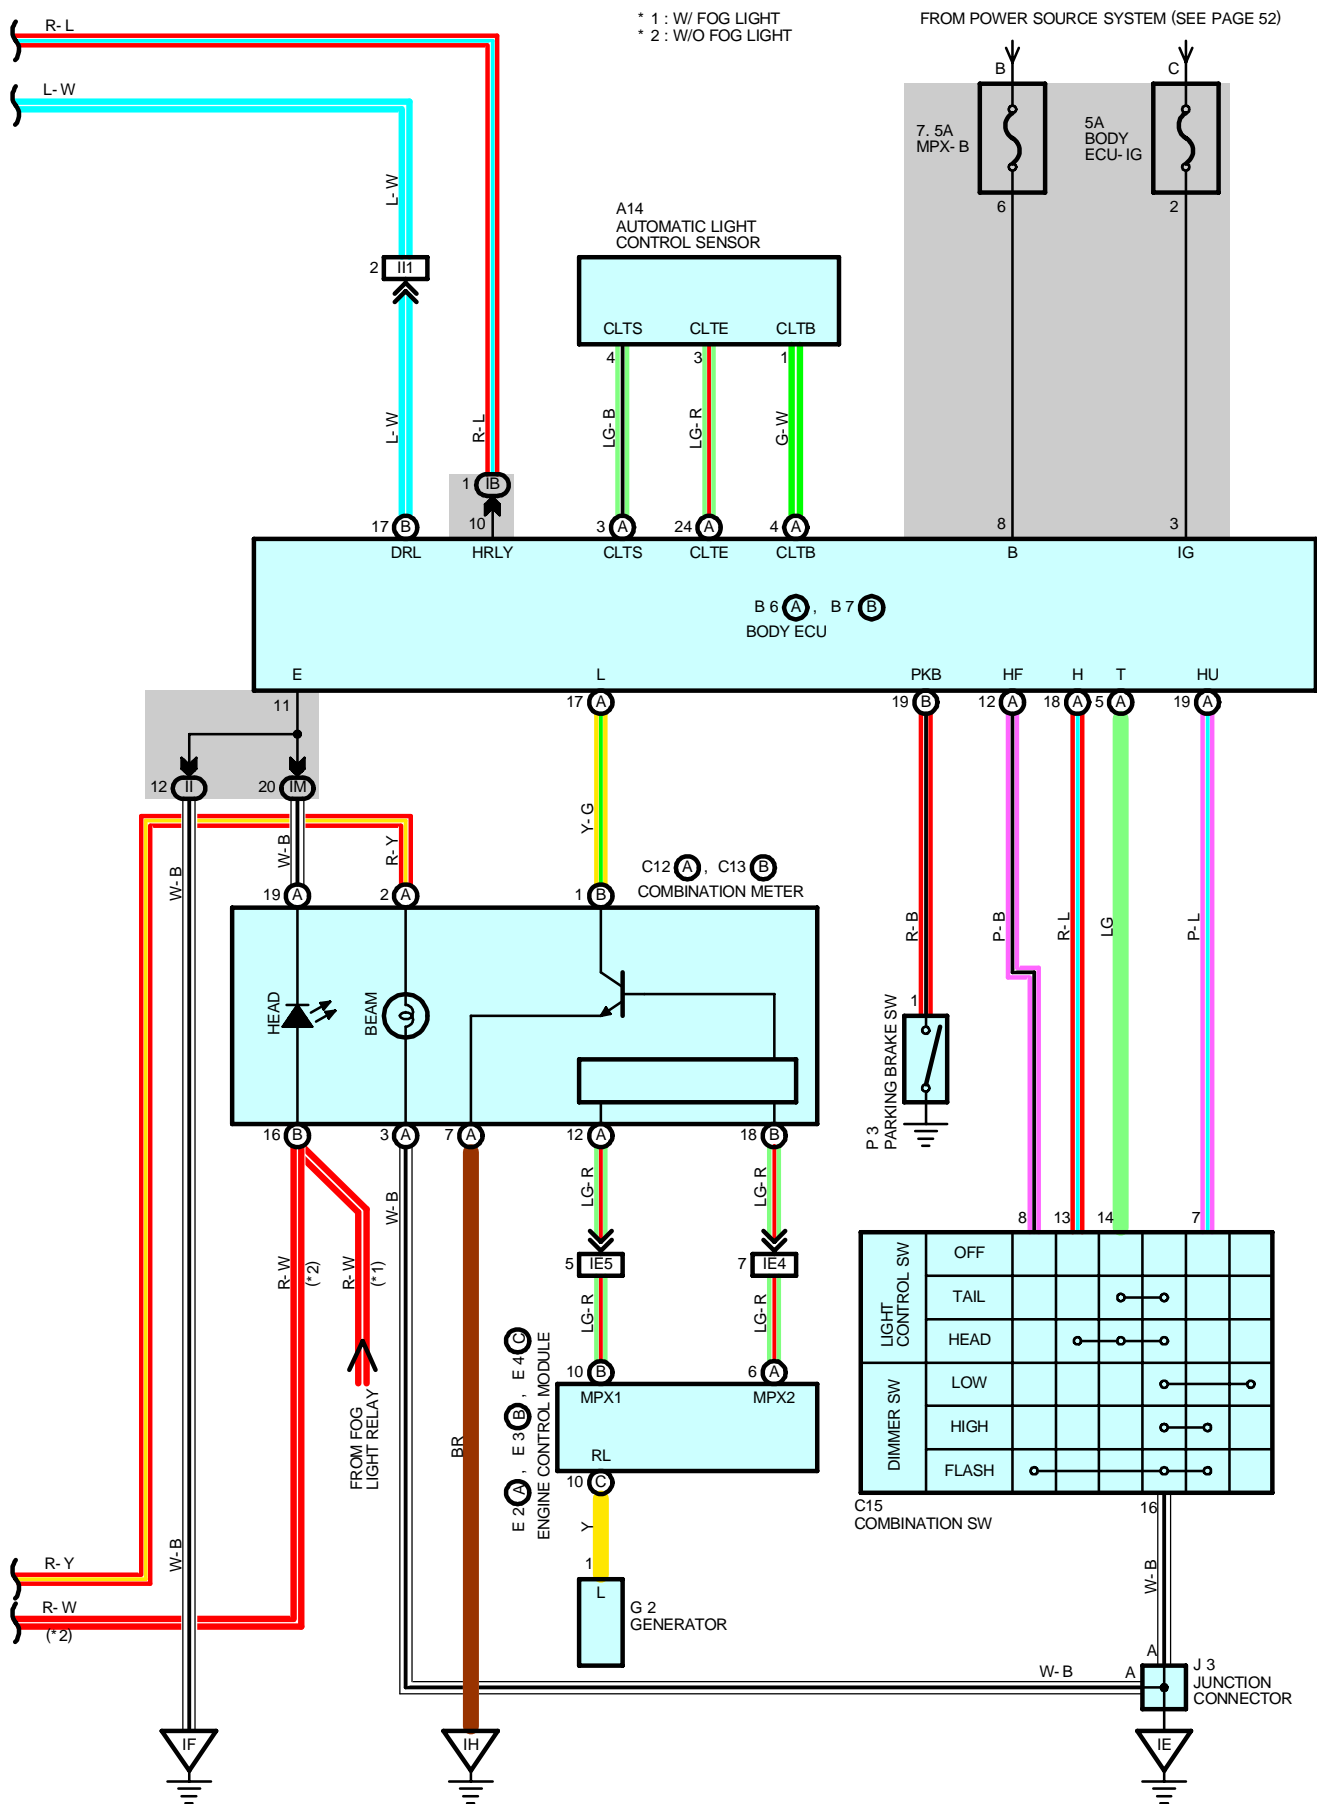

HEADLIGHT

SYSTEM OUTLINE

When the following conditions are met while the ignition SW is ON, and if the light control SW is at OFF or TAIL position, the daytime running light is controlled.

- * Parking brake lever is released (Parking brake SW is OFF)

- * Input signal from the generator

If any of the following conditions are met, the daytime running light control is canceled.

- * Ignition SW is turned OFF.

- * Light control SW is at HEAD position.

SERVICE HINTS

HEAD RELAY

5-3 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position

Closed with the engine running and the parking brake lever released (Parking brake SW off)

C15 COMBINATION SW

13-16 : Closed with the light control SW at **HEAD** position

8-16 : Closed with the dimmer SW at **FLASH** position

7-16 : Closed with the dimmer SW at **FLASH** or **HIGH** position

P3 PARKING BRAKE SW

1-GROUND : Closed with the parking brake lever pulled up

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
A14		36	E3	B	34 (2ZZ-GE)	H3		32 (1ZZ-FE)
B6	A	36	E4	C	32 (1ZZ-FE)			34 (2ZZ-GE)
B7	B	36			34 (2ZZ-GE)	H4	32 (1ZZ-FE)	34 (2ZZ-GE)
C12	A	36	G2	32 (1ZZ-FE)				
C13	B	36		34 (2ZZ-GE)	J3	37		
C15		36	H1	32 (1ZZ-FE)	J4	A	37	
E2	A	32 (1ZZ-FE)		34 (2ZZ-GE)	J5	B	37	
		34 (2ZZ-GE)	H2	32 (1ZZ-FE)	P3	37		
E3	B	32 (1ZZ-FE)		34 (2ZZ-GE)				

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	27	Engine Room R/B No.2 (Engine Compartment Left)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IM		
2A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2D		
2F	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5		
II1	46	Engine Room Main Wire and Floor Wire (Instrument Panel Brace LH)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	40 (1ZZ-FE)	Front Right Fender
	42 (2ZZ-GE)	
EB	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
EM	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
IE	44	Cowl Side Panel LH
IF	44	Instrument Panel Brace RH
IG	44	Cowl Side Panel RH
IH		

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	40 (1ZZ-FE)	Engine Room Main Wire			
	42 (2ZZ-GE)				