


FOG LIGHT

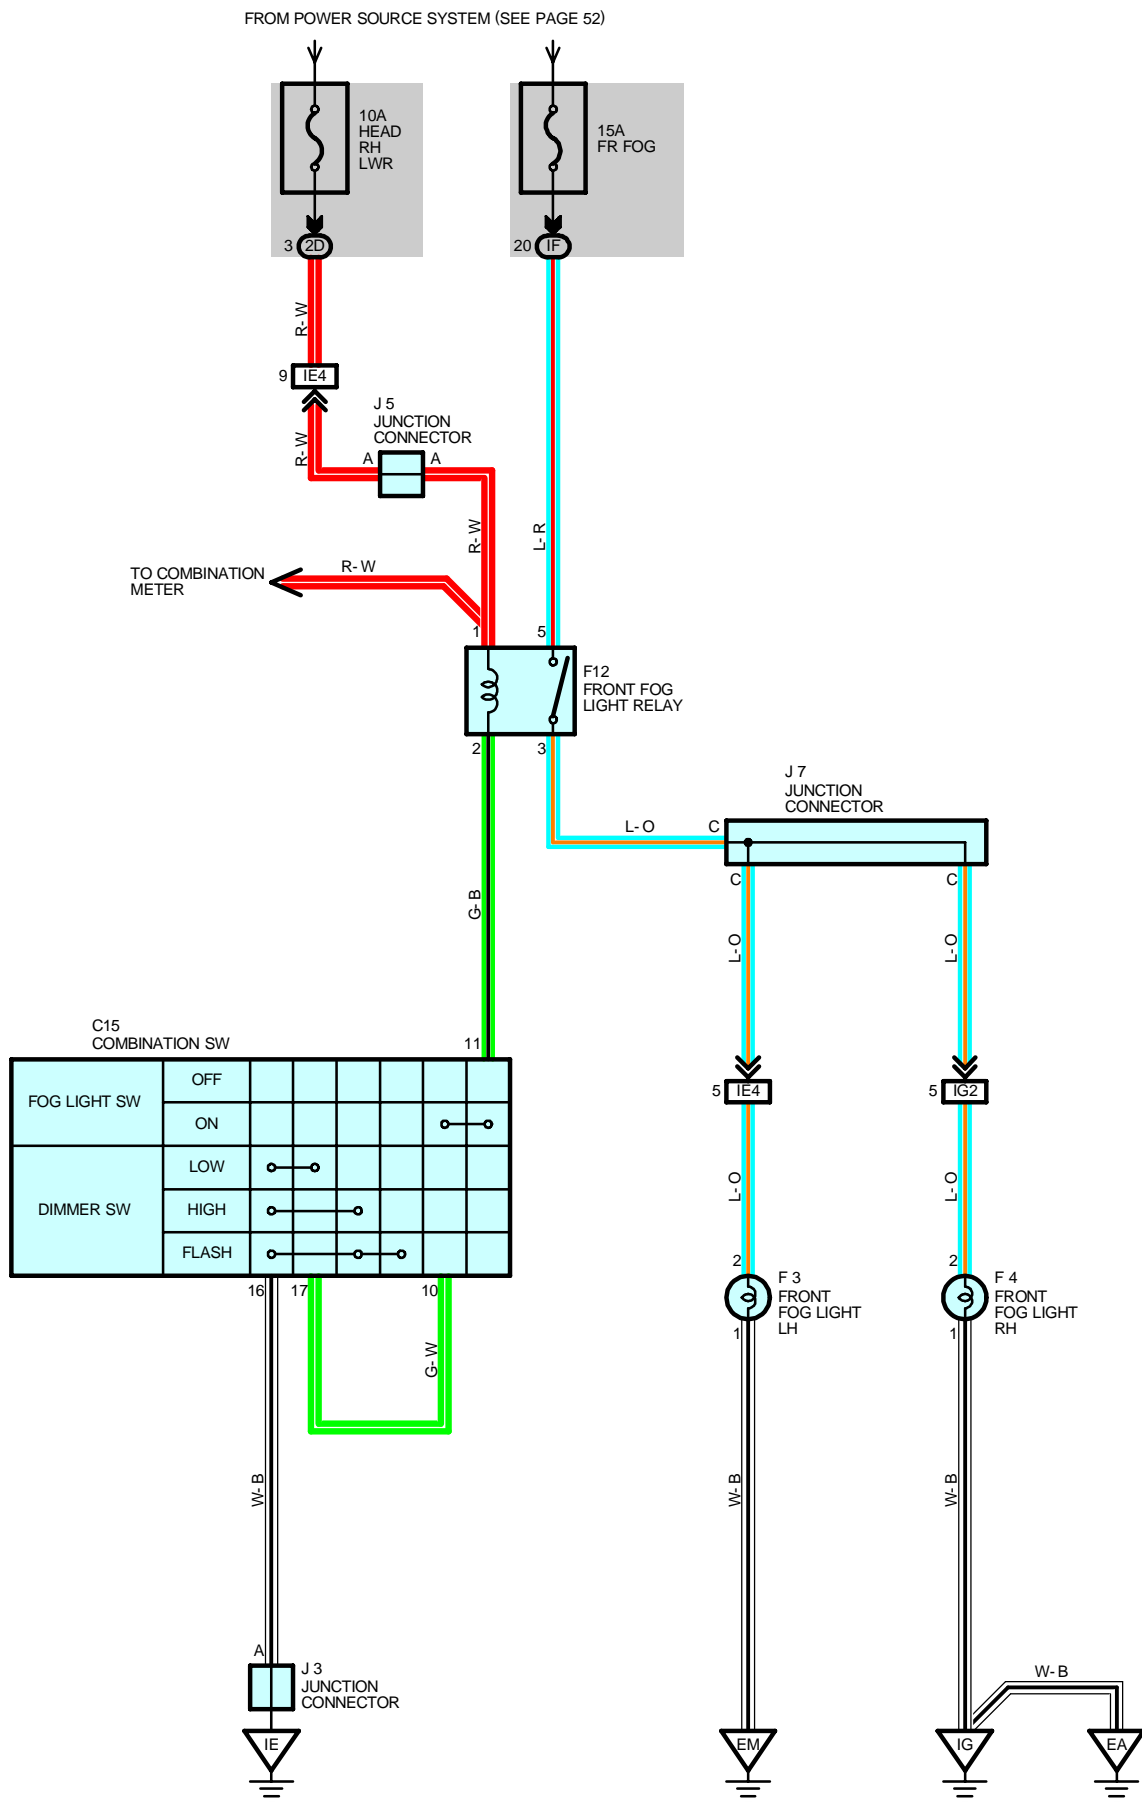

SERVICE HINTS

F12 FRONT FOG LIGHT RELAY

5-3 : Closed with the dimmer SW at **LOW** position and the fog light SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C15	36	F4	32 (1ZZ-FE)	J3	37
F3	32 (1ZZ-FE)		34 (2ZZ-GE)	J5	37
	34 (2ZZ-GE)	F12	36	J7	37

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IF	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2D	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IG2	46	Engine Room No.2 Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	40 (1ZZ-FE)	Front Right Fender
	42 (2ZZ-GE)	
EM	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
IE	44	Cowl Side Panel LH
IG	44	Cowl Side Panel RH