


TURN SIGNAL AND HAZARD WARNING LIGHT

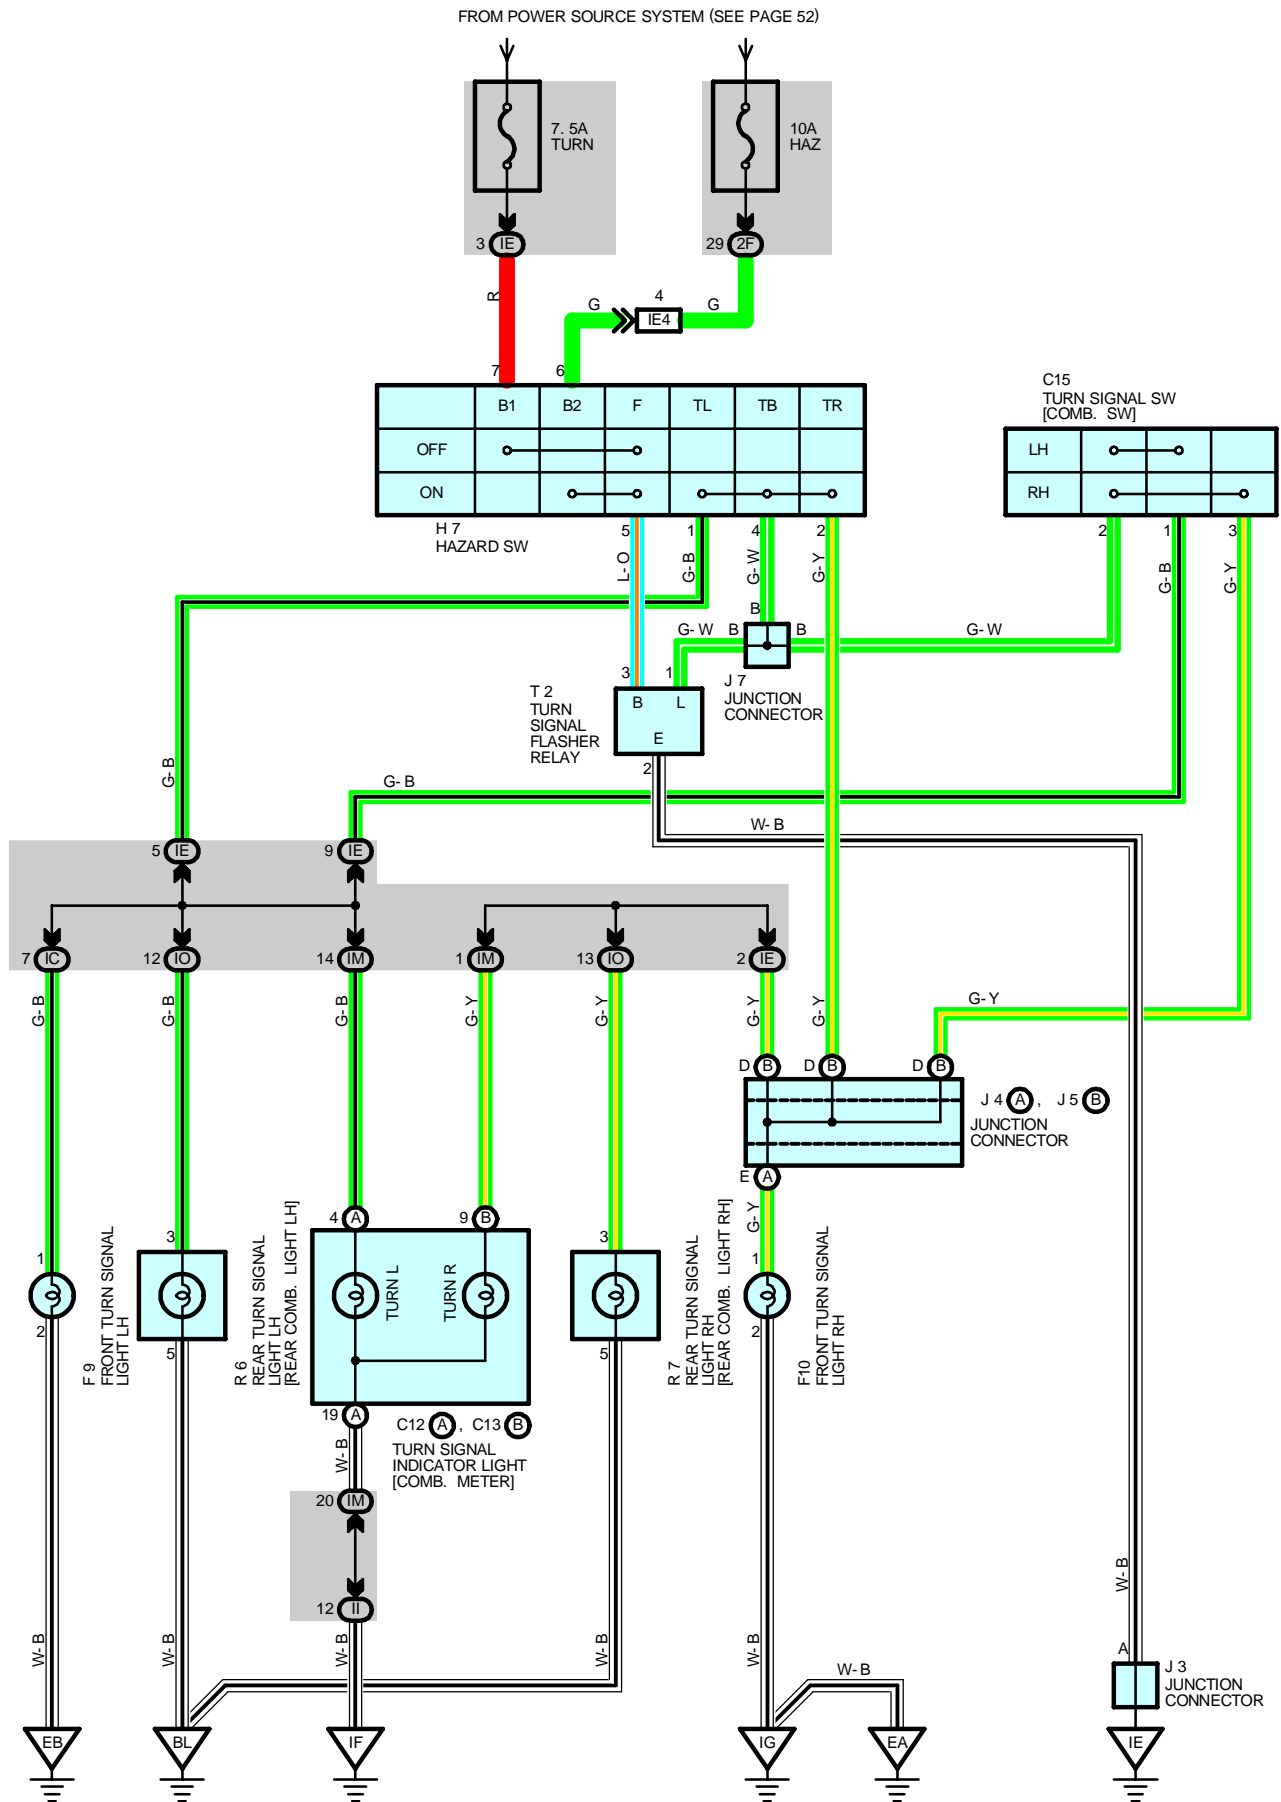

SERVICE HINTS

T2 TURN SIGNAL FLASHER RELAY

3-GROUND : Approx. **12** volts with the ignition SW on or the hazard SW on

1-GROUND : Changes from **12** to **0** volts with the ignition SW on and the turn signal SW **LH** or **RH** position,
and with the hazard SW on

2-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	A	F10	32 (1ZZ-FE)	J5	B
C13	B		34 (2ZZ-GE)	J7	
C15	36	H7	37	R6	39
F9	32 (1ZZ-FE)	J3	37	R7	39
	34 (2ZZ-GE)	J4	A	T2	37

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IE	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IM		
IO	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2F	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	40 (1ZZ-FE)	Front Right Fender
	42 (2ZZ-GE)	
EB	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
IE	44	Cowl Side Panel LH
IF	44	Instrument Panel Brace RH
IG	44	Cowl Side Panel RH
BL	48	Back Panel Center