



## SYSTEM OUTLINE

When the ignition SW is OFF and the driver's side door is opened (Door courtesy SW ON) and the light control SW is at TAIL or HEAD position, the light reminder buzzer comes ON.

## SERVICE HINTS

### D3 DOOR COURTESY SW LH

1-GROUND : Driver's door open



## : PARTS LOCATION

| Code |   | See Page | Code |    | See Page | Code |    | See Page |
|------|---|----------|------|----|----------|------|----|----------|
| B6   | A | 36       | C15  | 36 |          | J3   | 37 |          |
| B7   | B | 36       | D3   | 38 |          |      |    |          |



## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)                       |
|------|----------|--|
| IA   | 25       | Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH) |
| II   | 25       | Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH) |
| 2E   | 23       | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)        |



## : GROUND POINTS

| Code | See Page | Ground Points Location    |
|------|----------|---------------------------|
| IE   | 44       | Cowl Side Panel LH        |
| IF   | 44       | Instrument Panel Brace RH |