


ELECTRIC TENSION REDUCER

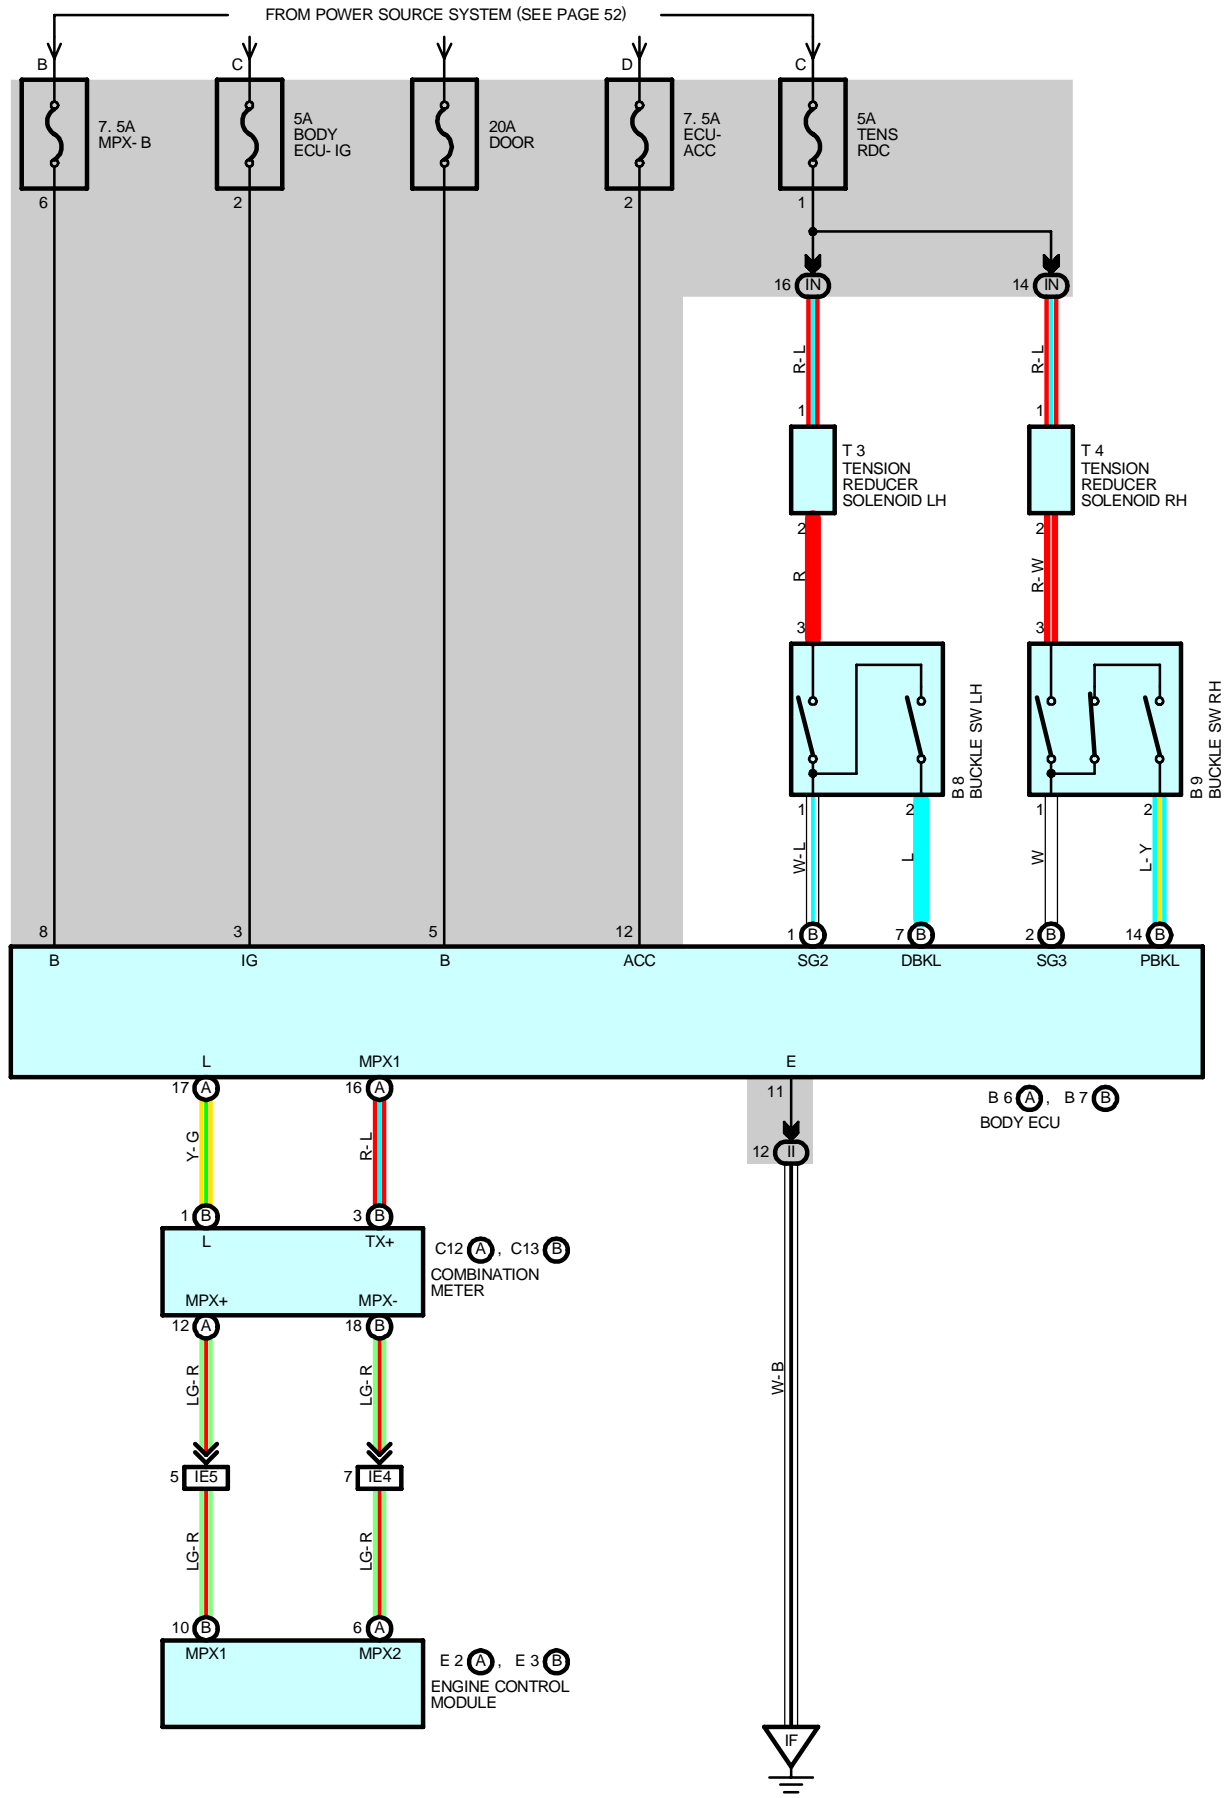

SERVICE HINTS

B8 BUCKLE SW LH

1-3 : Closed with the driver's seat belt in use

B9 BUCKLE SW RH

1-3 : Closed with the passenger's seat belt in use

T3, T4 TENSION REDUCER SOLENOID LH, RH

1-GROUND : Approx. 12 volts with the ignition SW at **ON** position

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
B6	A	36	C12	A	36	E3	B	32 (1ZZ-FE)
B7	B	36	C13	B	36			34 (2ZZ-GE)
B8		36	E2	A	32 (1ZZ-FE)	T3		39
B9		36			34 (2ZZ-GE)	T4		39

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
II	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IN	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE4	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5		

: GROUND POINTS

Code	See Page	Ground Points Location
IF	44	Instrument Panel Brace RH