


# REMOTE CONTROL MIRROR

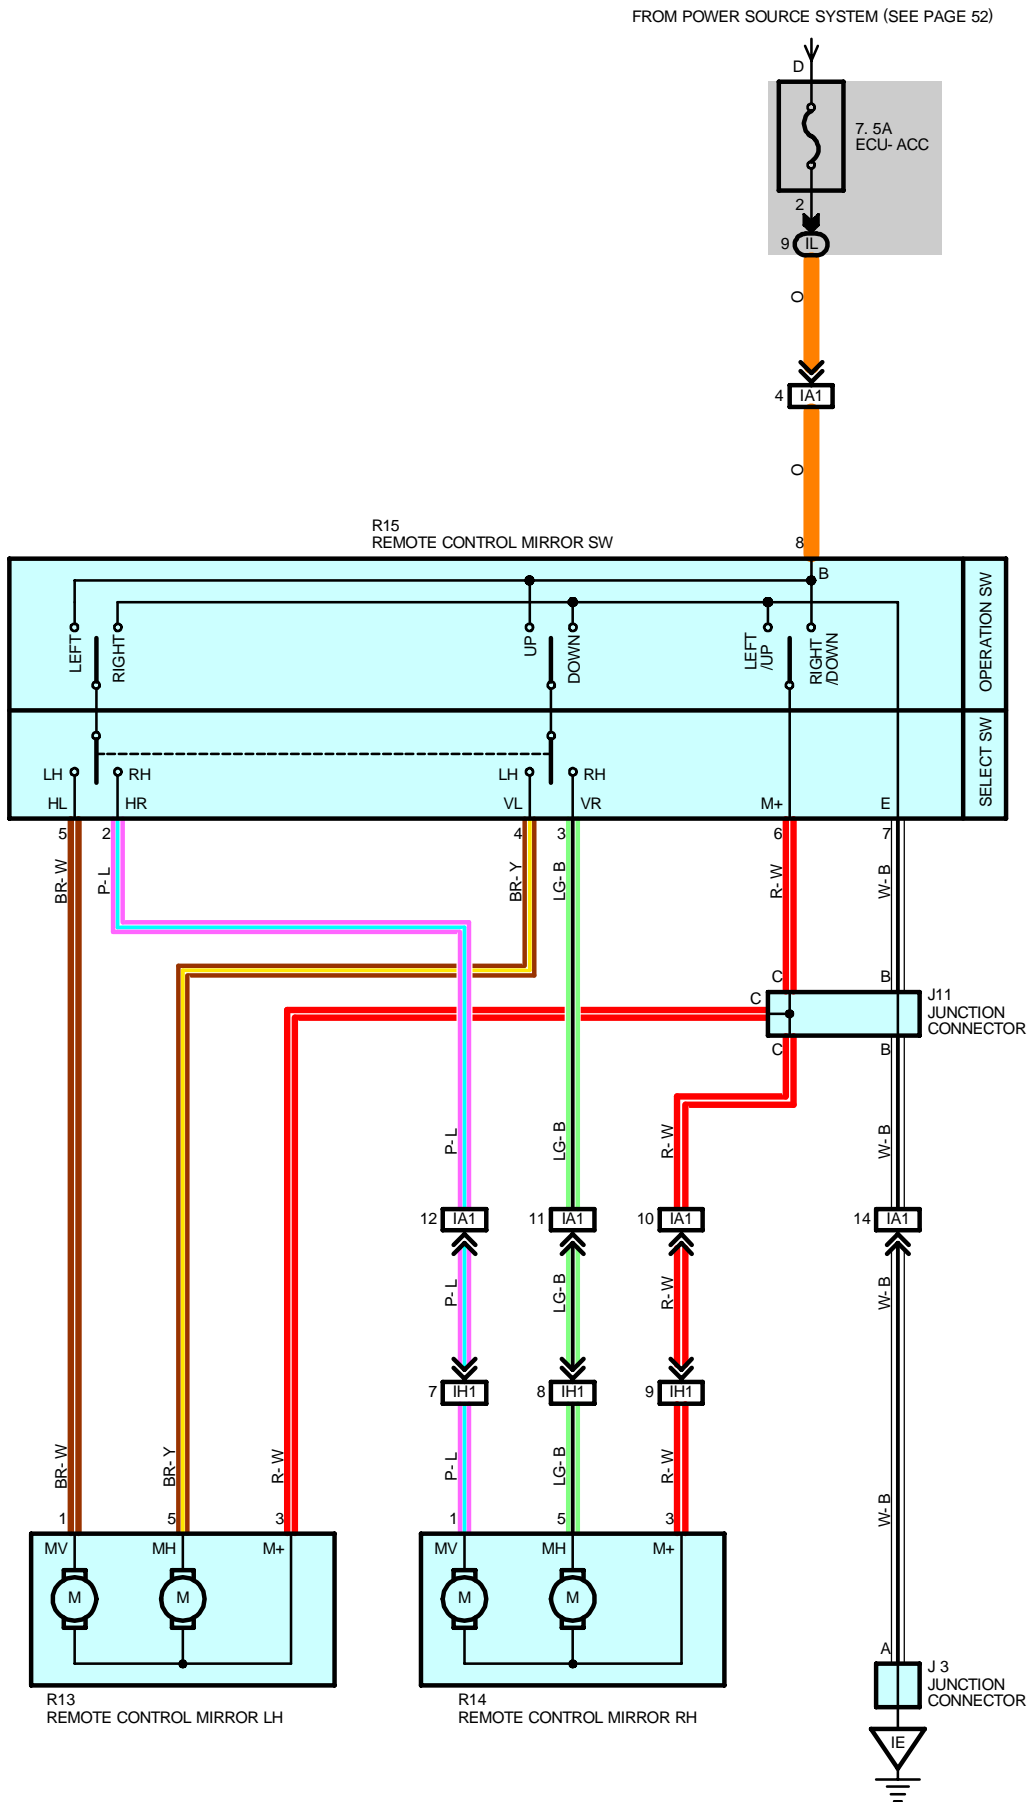

## SERVICE HINTS

### R15 REMOTE CONTROL MIRROR SW

- 8-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- 6-7 : Continuity with the operation SW at **UP** or **LEFT** position
- 5-7 : Continuity with the operation SW at **RIGHT** position and the select SW at **LH** position
- 4-7 : Continuity with the operation SW at **DOWN** position and the select SW at **LH** position
- 2-7 : Continuity with the operation SW at **RIGHT** position and the select SW at **RH** position
- 3-7 : Continuity with the operation SW at **DOWN** position and the select SW at **RH** position

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J3	<a href="#">37</a>	R13	<a href="#">39</a>	R15	<a href="#">39</a>
J11	<a href="#">38</a>	R14	<a href="#">39</a>		

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IL	<a href="#">25</a>	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	<a href="#">44</a>	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IH1	<a href="#">46</a>	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

## : GROUND POINTS

Code	See Page	Ground Points Location
IE	<a href="#">44</a>	Cowl Side Panel LH