


REAR WINDOW DEFOGGER

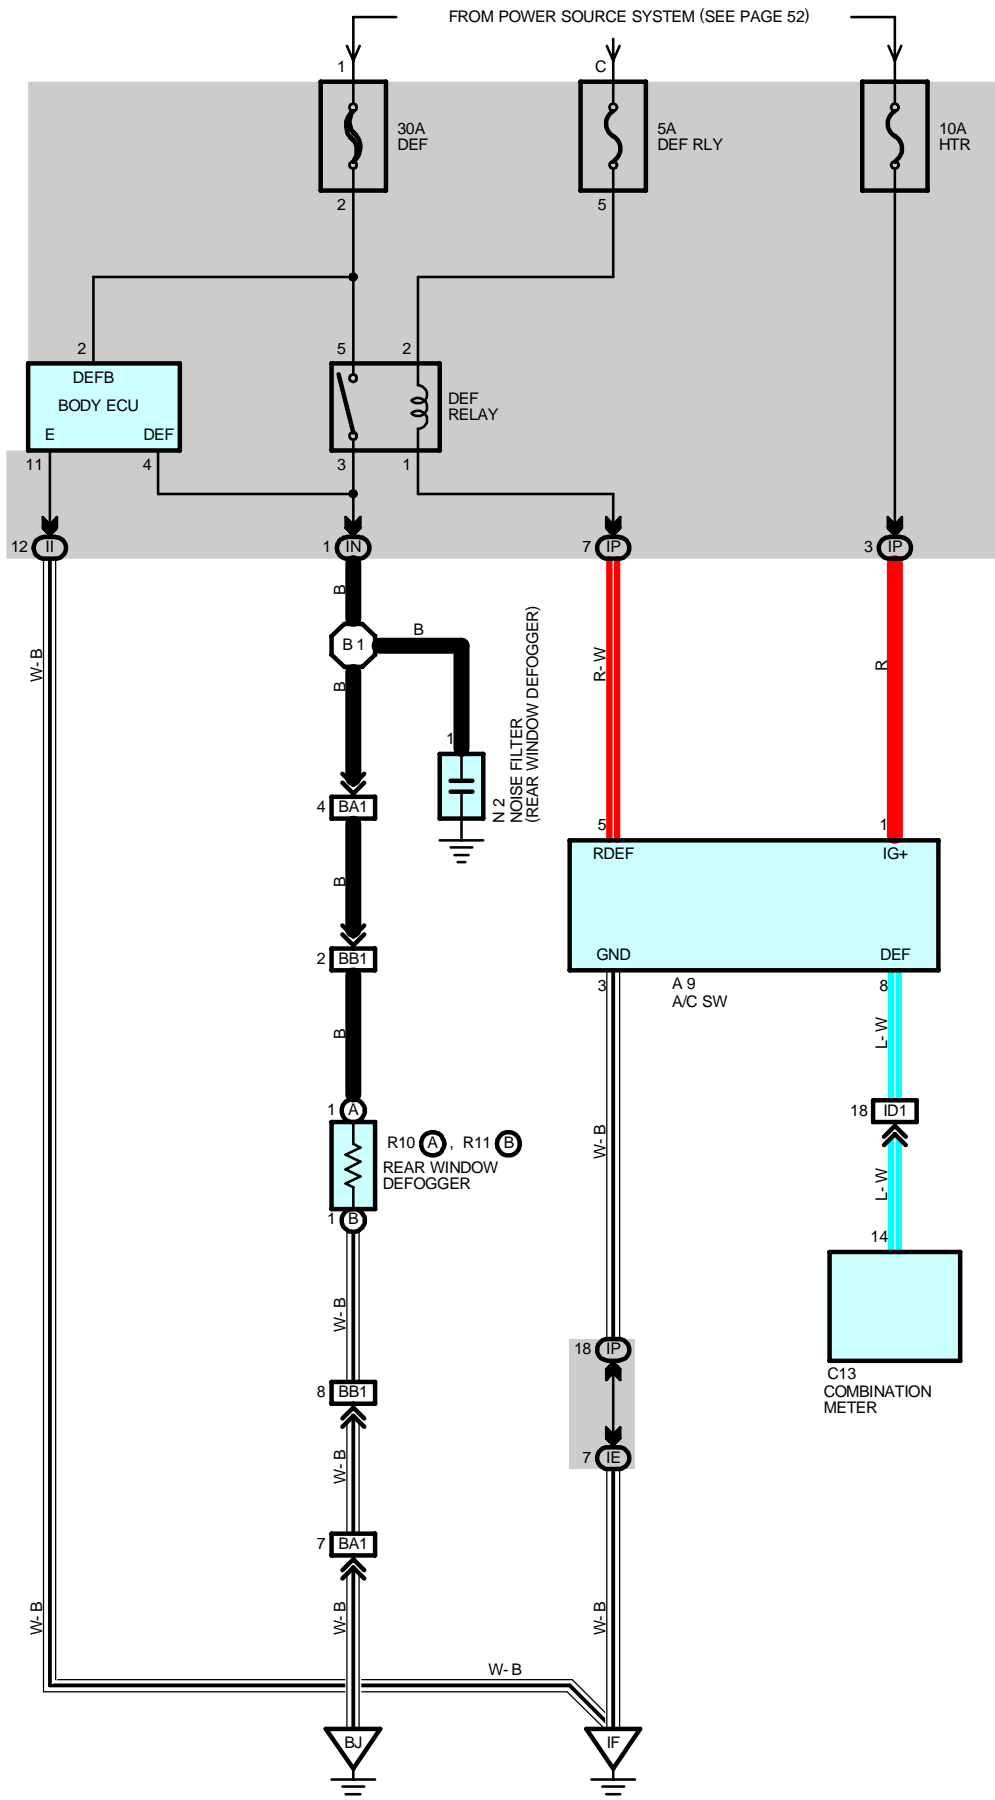

SERVICE HINTS

DEF RELAY

5-3 : Closed with the ignition SW at **ON** position and the defogger SW [A/C SW] on

A9 A/C SW

1-GROUND : Approx. **12** volts with the ignition SW at **ON** position

3-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A9	36	N2	39	R11	B 39
C13	36	R10	A 39		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IE	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
II		
IN	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IP	25	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	44	Cowl No.2 Wire and Instrument Panel Wire (Instrument Panel Brace LH)
BA1	48	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	48	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	44	Instrument Panel Brace RH
BJ	48	Luggage Room Left

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	48	Floor Wire			