



RADIO AND PLAYER (SEPARATE TYPE AMPLIFIER)

SERVICE HINTS

S6 (A) STEREO POWER AMPLIFIER

(A)16-GROUND : Approx. 12 volts with the ignition SW at **ACC** or **ON** position

(A)12-GROUND : Always continuity

(A) 7-GROUND : Always approx. 12 volts

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F15	38	J10	37	S6	A 37
F16	38	R4	37	S7	B 37
J6	37	R8	39	W2	39
J7	37	R9	39	W3	39

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
II	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	44	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IF1	46	Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IH1	46	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH2		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	44	Instrument Panel Brace RH
IH	44	Cowl Side Panel RH

