


# RADIO AND PLAYER (BUILT-IN TYPE AMPLIFIER)

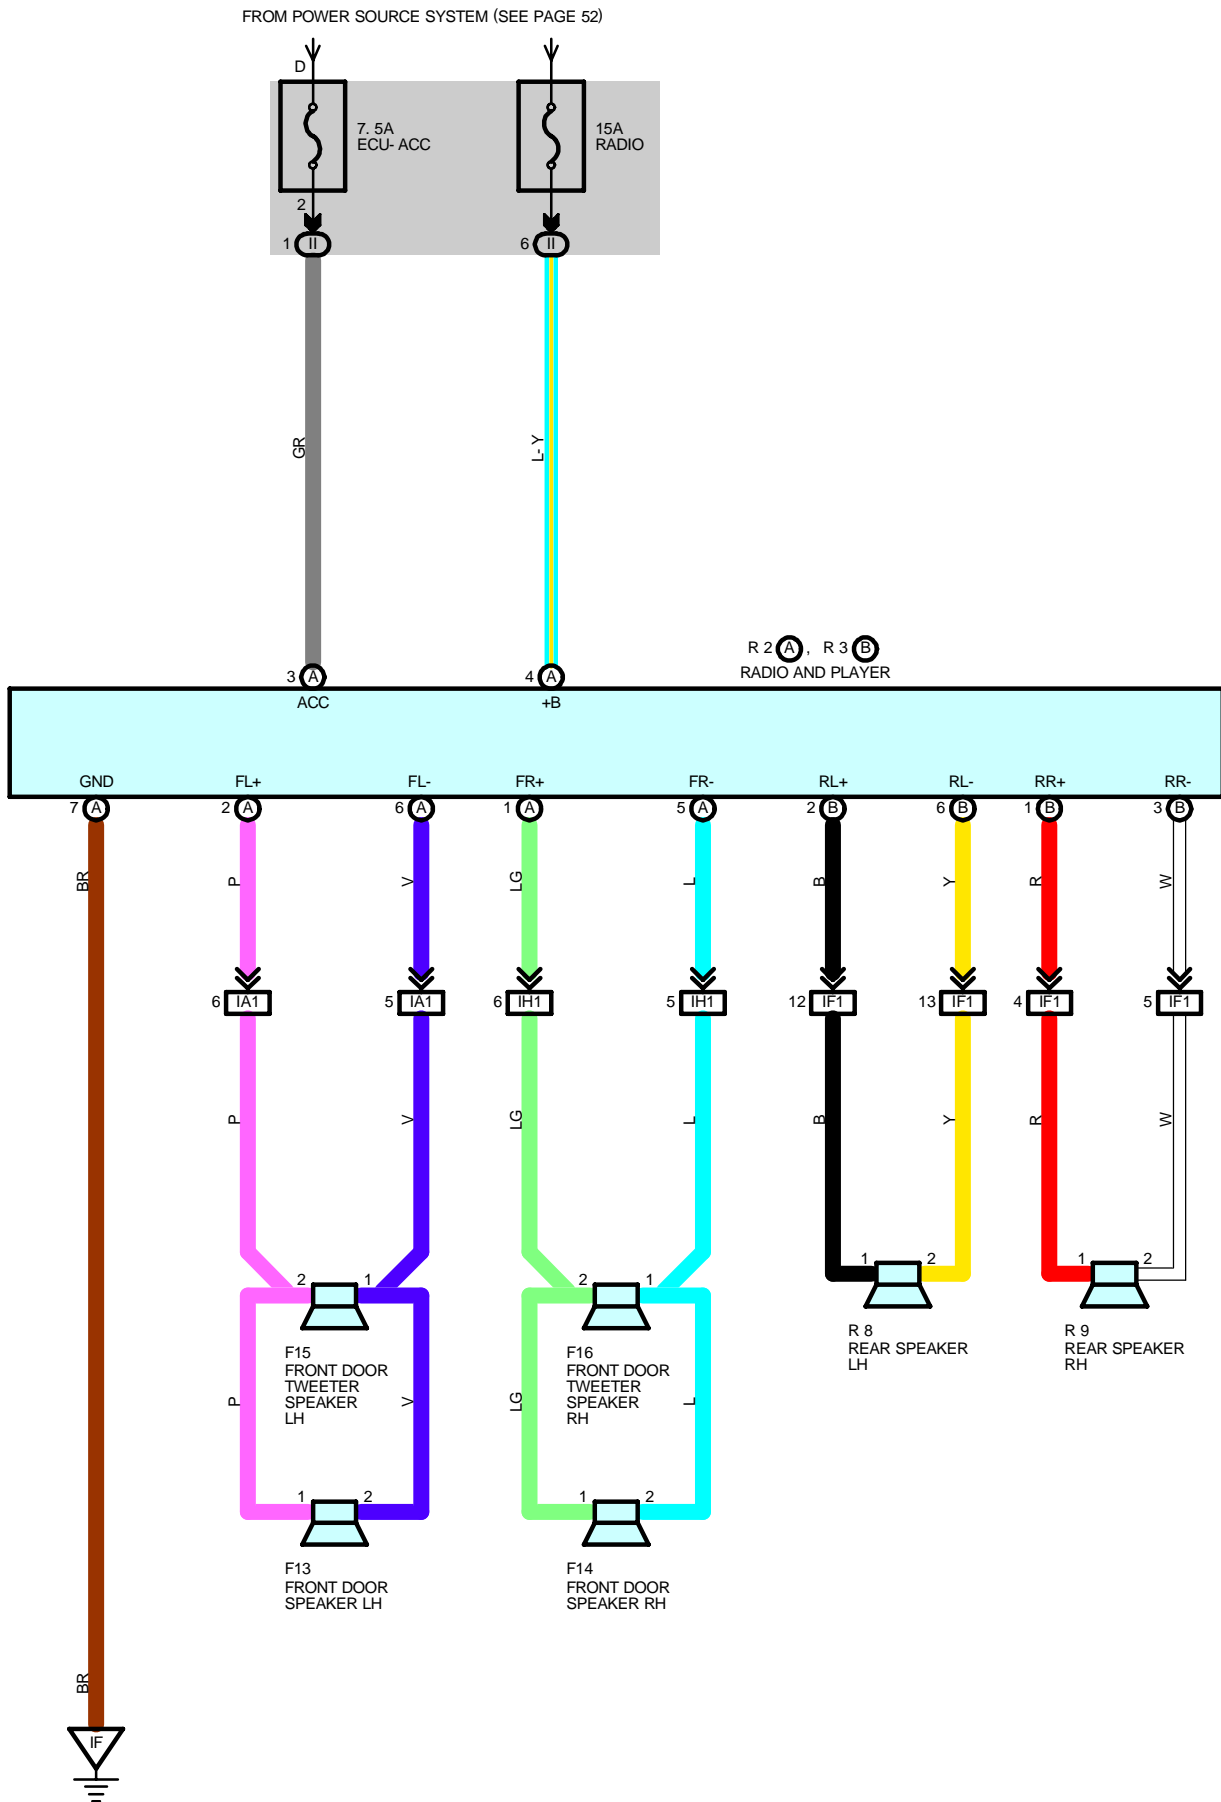

## SERVICE HINTS

### R2 (A) RADIO AND PLAYER

(A) 4-GROUND : Always approx. **12** volts

(A) 3-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

(A) 7-GROUND : Always continuity

### : PARTS LOCATION

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| F13  | <a href="#">38</a> | F16  | <a href="#">38</a> | R8   | <a href="#">39</a> |
| F14  | <a href="#">38</a> | R2   | A                  | R9   | <a href="#">39</a> |
| F15  | <a href="#">38</a> | R3   | B                  |      |                    |

### : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                       |
|------|--------------------|--|
| II   | <a href="#">25</a> | Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH) |

### : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)       |
|------|--------------------|--|
| IA1  | <a href="#">44</a> | Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)   |
| IF1  | <a href="#">46</a> | Floor Wire and Instrument Panel Wire (Instrument Panel Brace LH) |
| IH1  | <a href="#">46</a> | Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)  |

### : GROUND POINTS

| Code | See Page           | Ground Points Location    |
|------|--------------------|---------------------------|
| IF   | <a href="#">44</a> | Instrument Panel Brace RH |