



TAILLIGHT

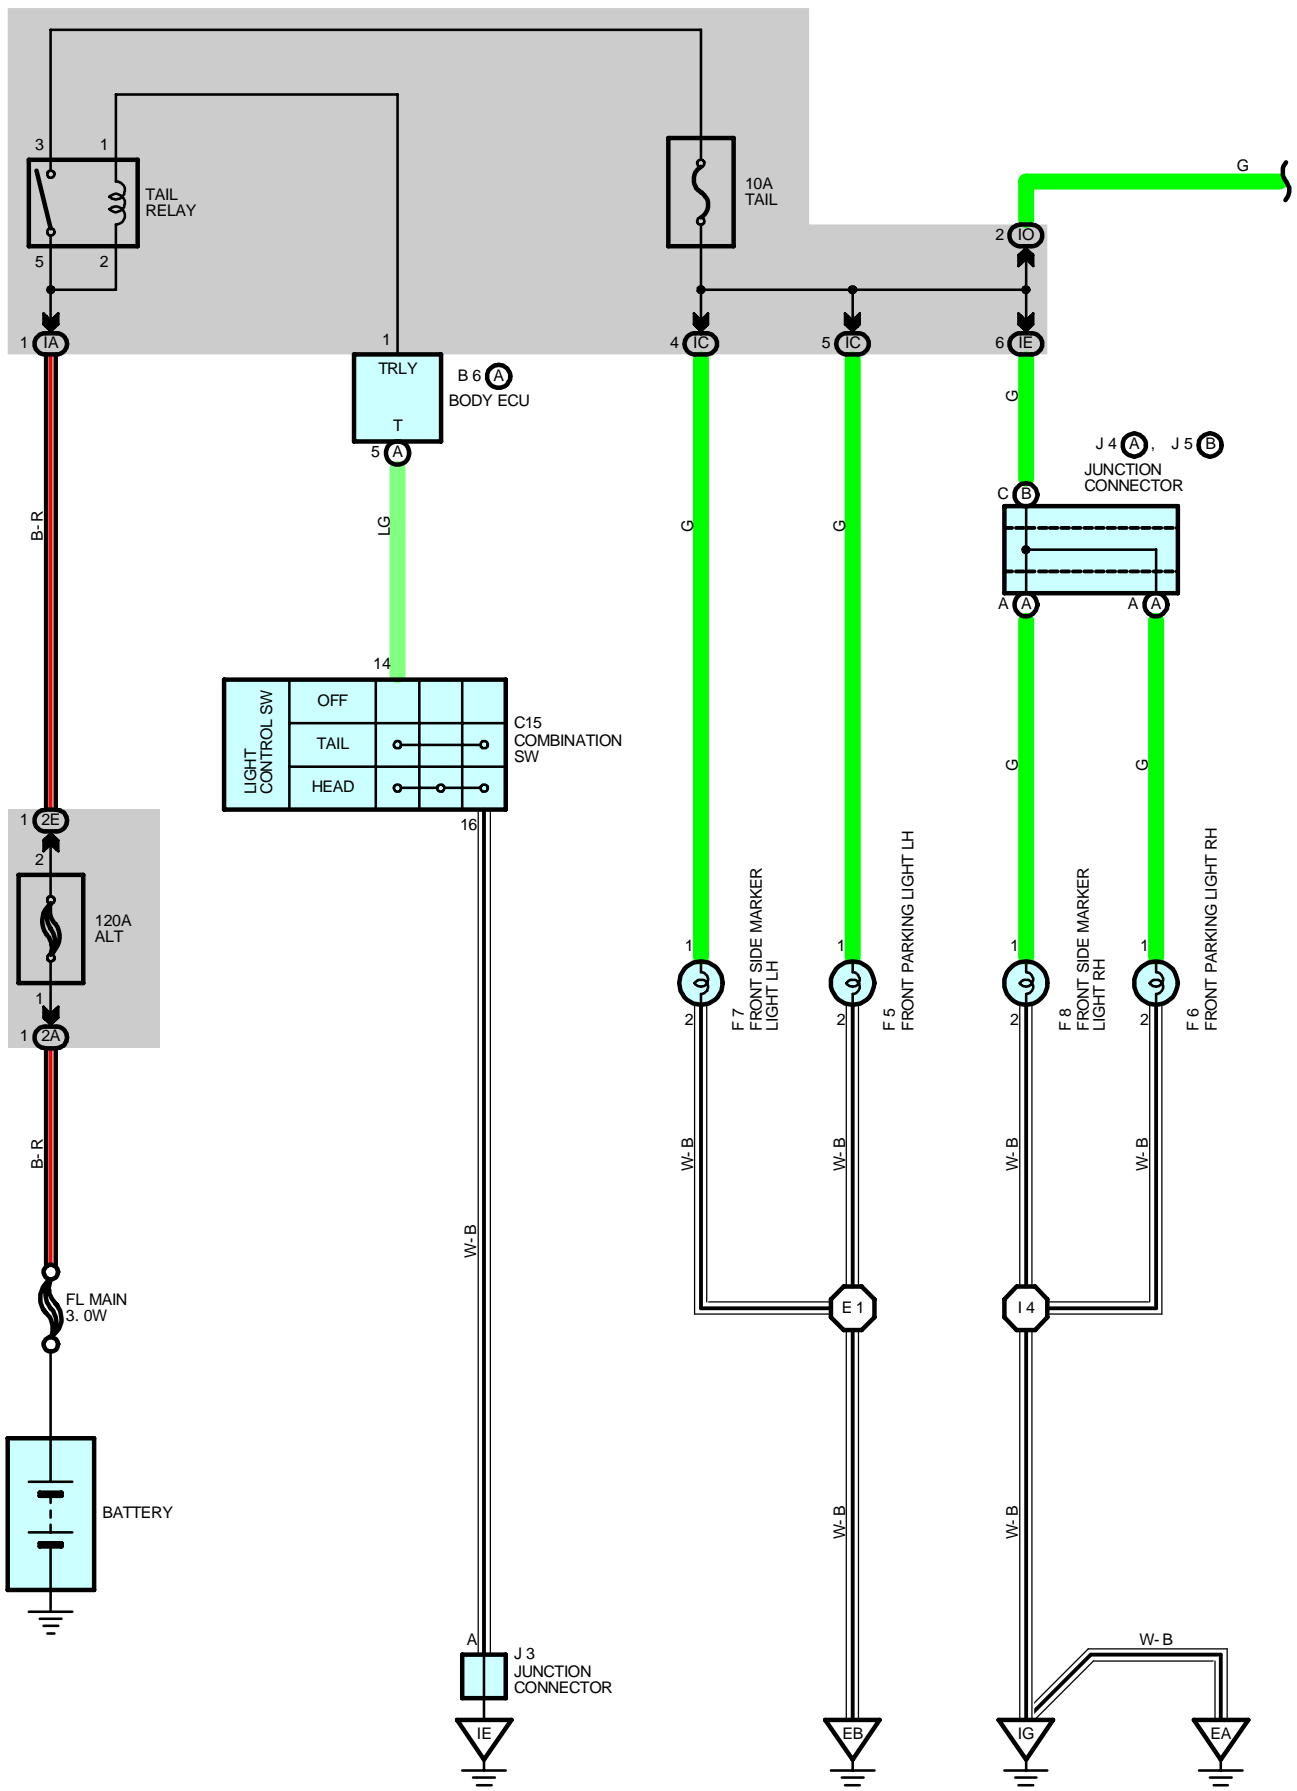

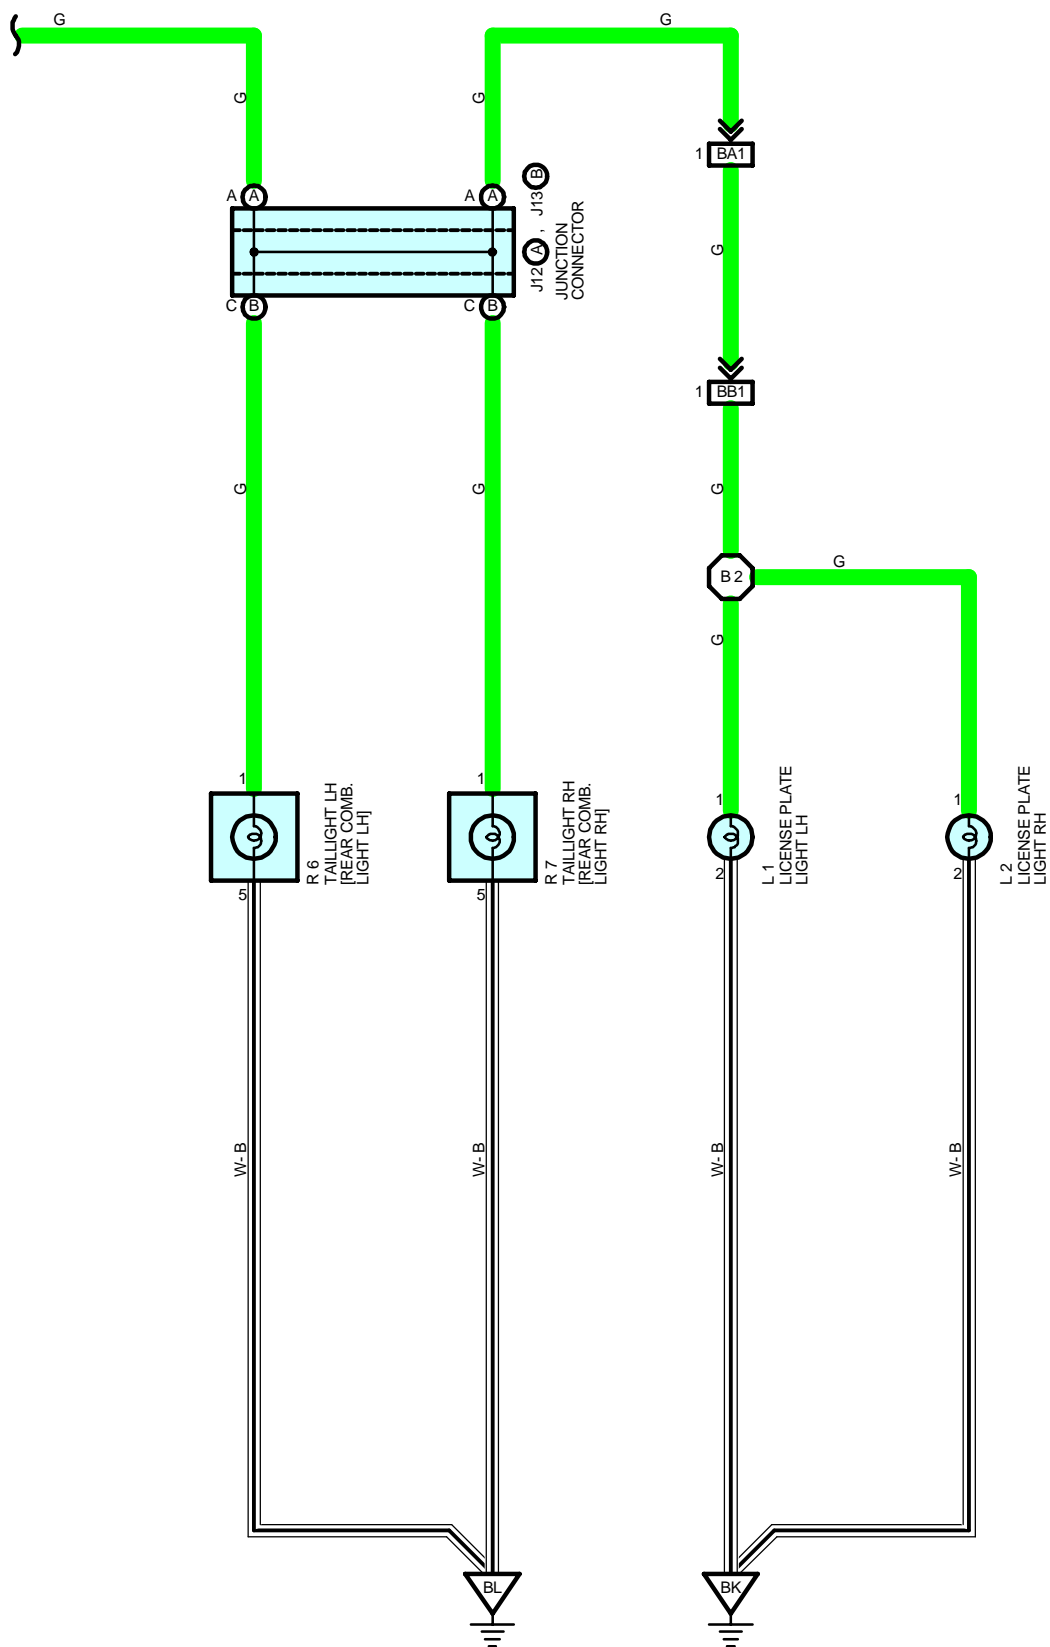

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C15 COMBINATION SW

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
B6	A	36	F7		34 (2ZZ-GE)	J13	B	38
C15		36	F8		32 (1ZZ-FE)	L1		38
F5	32 (1ZZ-FE)				34 (2ZZ-GE)	L2		38
	34 (2ZZ-GE)		J3		37	R6		39
F6	32 (1ZZ-FE)		J4	A	37	R7		39
	34 (2ZZ-GE)		J5	B	37			
F7	32 (1ZZ-FE)		J12	A	38			

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IC		
IE	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IO	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2E	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA1	48	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	48	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	40 (1ZZ-FE)	Front Right Fender
	42 (2ZZ-GE)	
EB	40 (1ZZ-FE)	Front Left Fender
	42 (2ZZ-GE)	
IE	44	Cowl Side Panel LH
IG	44	Cowl Side Panel RH
BK	48	Back Door Left
BL	48	Back Panel Center

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	40 (1ZZ-FE)	Engine Room Main Wire	I4	46	Engine Room No.2 Wire
	42 (2ZZ-GE)		B2	48	Back Door No.2 Wire

