

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	=	Anti-Lock Brake System
A/C	=	Air Conditioning
ACIS	=	Acoustic Control Induction System
A/T	=	Automatic Transaxle
COMB.	=	Combination
ECU	=	Electronic Control Unit
EFI	=	Electronic Fuel Injection
ESA	=	Electronic Spark Advance
EVAP	=	Evaporative Emission
FL	=	Fusible Link
IC	=	Integrated Circuit
J/B	=	Junction Block
LH	=	Left-Hand
MPX	=	Multiplex
M/T	=	Manual Transaxle
O/D	=	Overdrive
R/B	=	Relay Block
RH	=	Right-Hand
SFI	=	Sequential Multiport Fuel Injection
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
VSV	=	Vacuum Switching Valve
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.