



ILLUMINATION

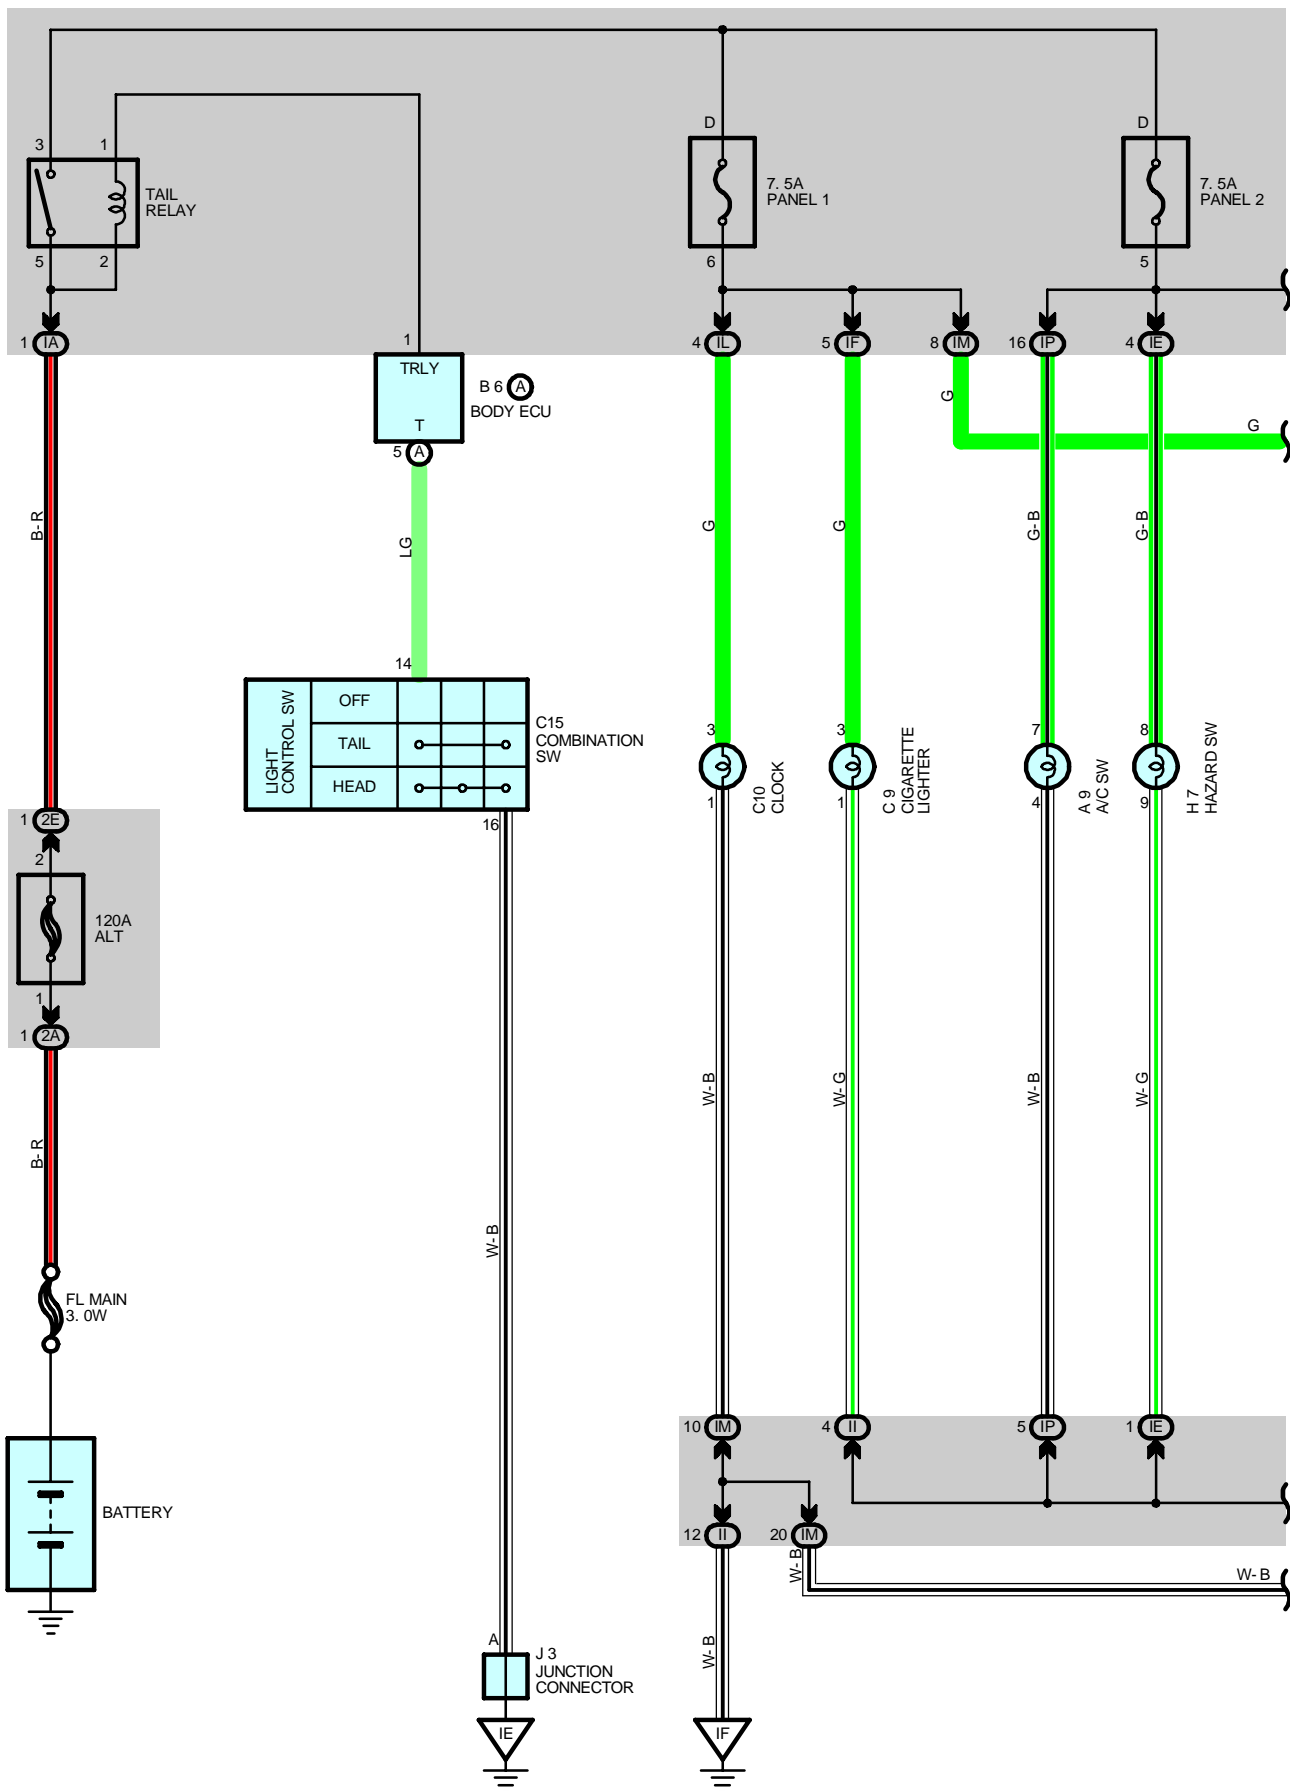

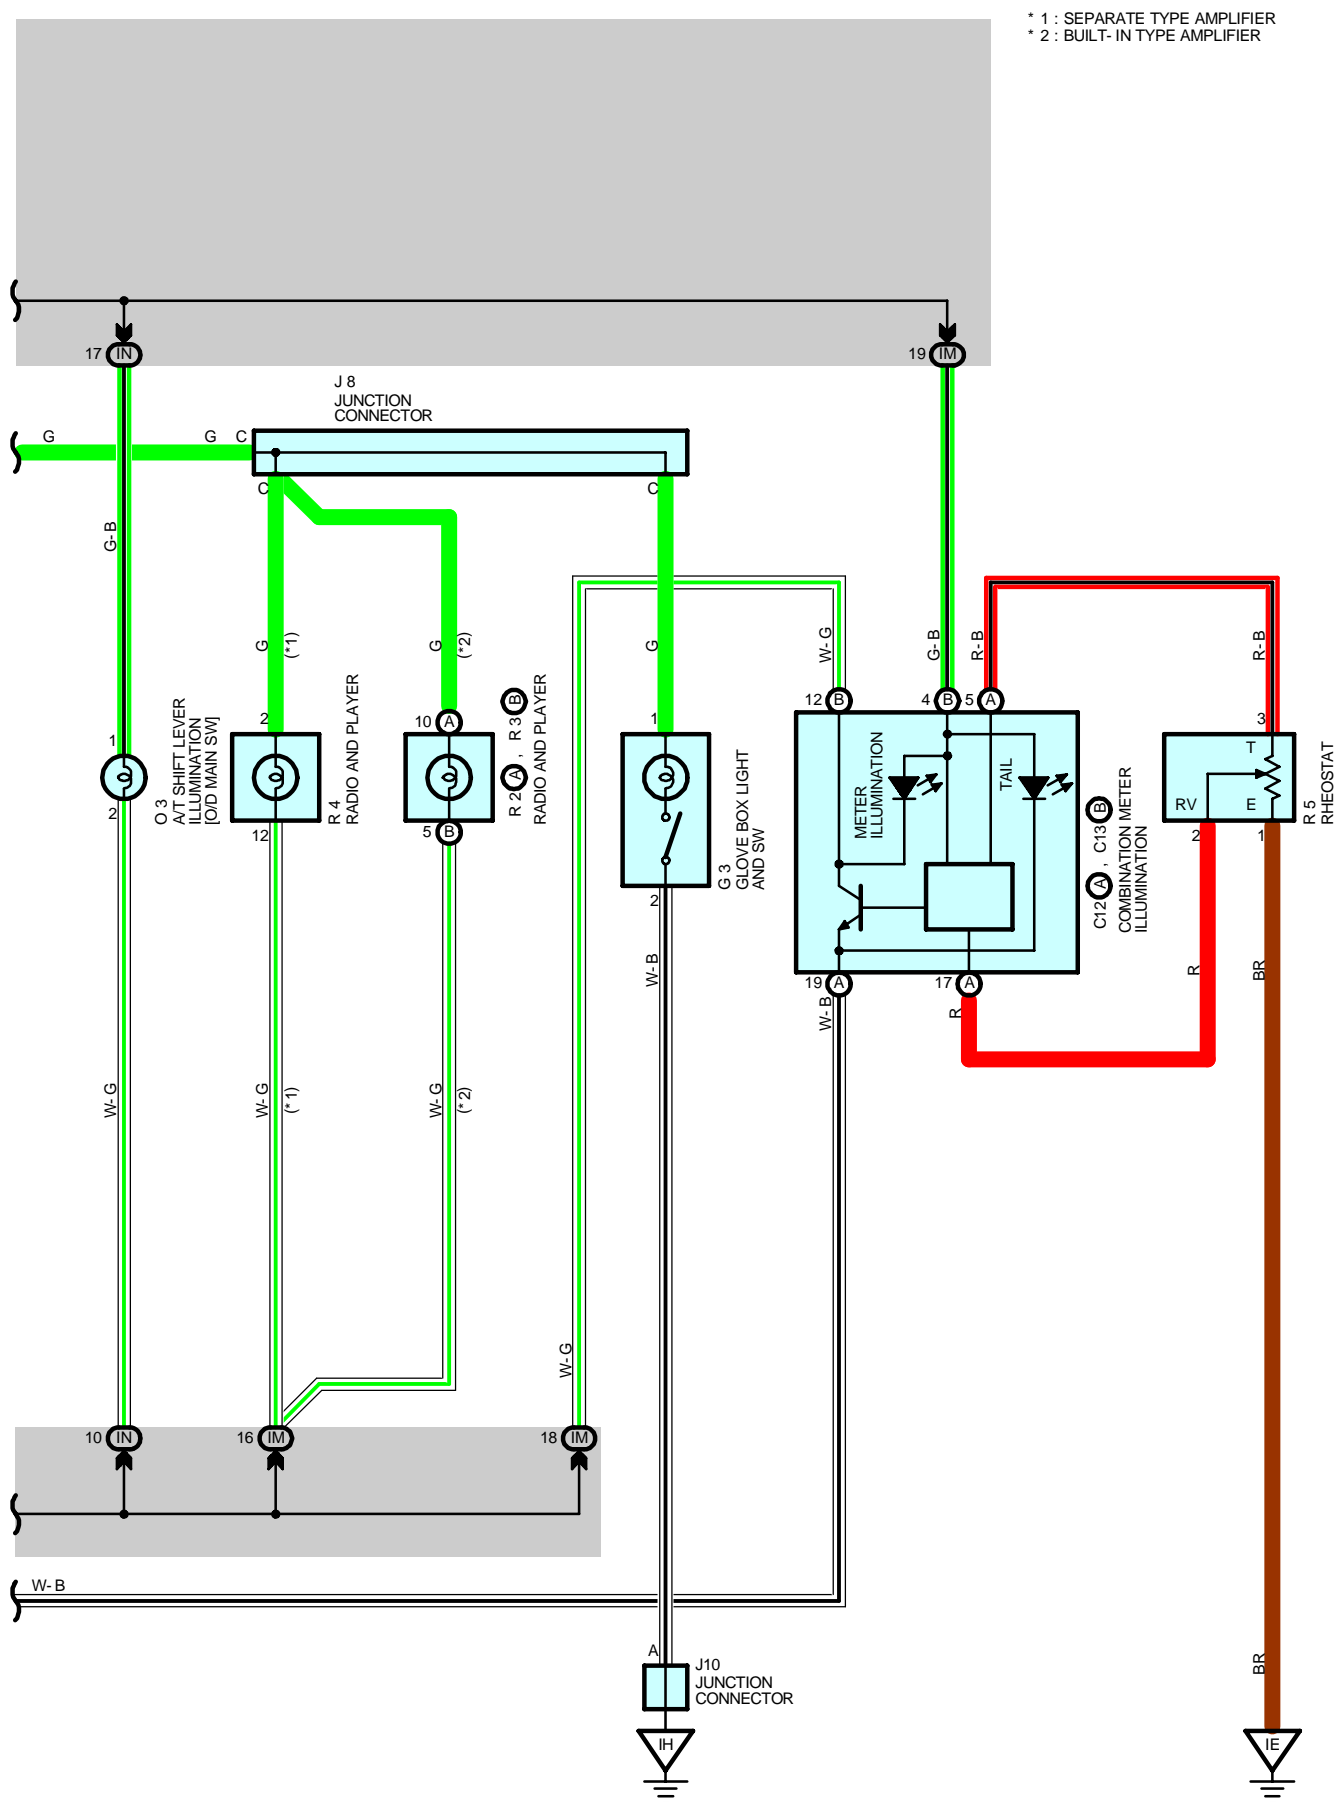

ILLUMINATION

SERVICE HINTS

TAIL RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C15 COMBINATION SW

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A9	36	C15	36	O3	37
B6	36	G3	37	R2	37
C9	36	H7	37	R3	37
C10	36	J3	37	R4	37
C12	36	J8	37	R5	37
C13	36	J10	37		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	25	Engine Room Main Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IE	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IF		
II		
IL		
IM		
IN	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IP	25	Cowl No.2 Wire and Instrument Panel J/B (Instrument Panel Brace RH)
2A	23	Engine Wire and Engine Room J/B (Engine Compartment Left)
2E	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	44	Cowl Side Panel LH
IF	44	Instrument Panel Brace RH
IH	44	Cowl Side Panel RH

