


INTERIOR LIGHT

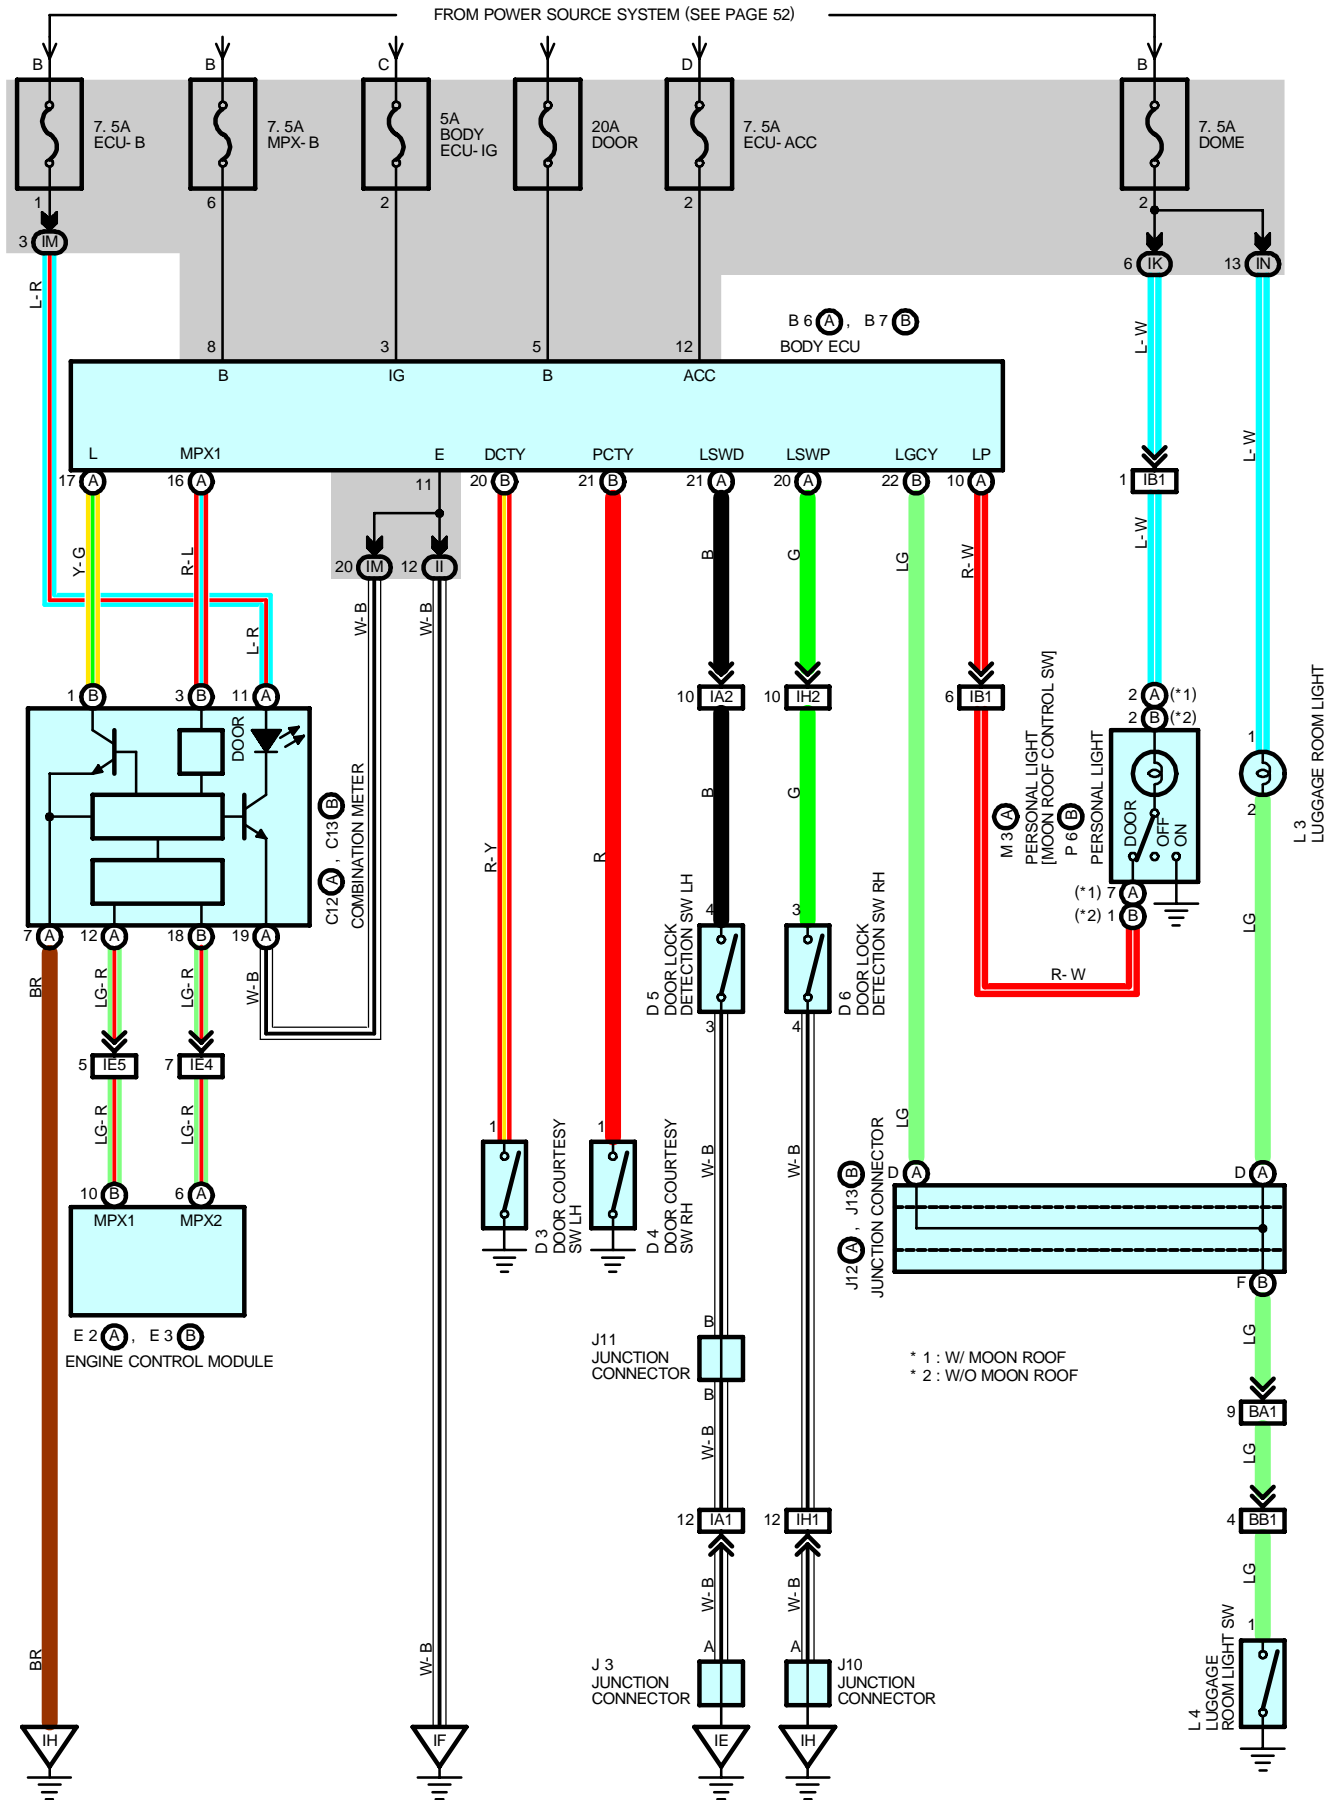

SYSTEM OUTLINE

ILLUMINATED ENTRY SYSTEM

* Lights ON condition

When any door (Driver's side, front passenger's side, or back door etc.) is opened.

* Lights OFF condition

If any of the following conditions are met while the dome light is ON, the light fades out and is turned OFF.

When approximately 15 seconds have elapsed after all doors are closed.

When all doors are closed and the driver's side door and the front passenger's side door is locked.

When all the doors are closed with the ignition SW at ACC or ON position.

SERVICE HINTS

D3, D4 DOOR COURTESY SW LH, RH

1-GROUND : Closed with door open

L4 LUGGAGE ROOM LIGHT SW

1-GROUND : Luggage compartment door open

○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
B6	A	36		D6		38		J11		38	
B7	B	36		E2	A	32 (1ZZ-FE)		J12	A	38	
C12	A	36				34 (2ZZ-GE)		J13	B	38	
C13	B	36		E3	B	32 (1ZZ-FE)		L3		38	
D3		38				34 (2ZZ-GE)		L4		38	
D4		38		J3		37		M3	A	39	
D5		38		J10		37		P6	B	39	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
II	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IK		
IM		
IN	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	44	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IA2		
IB1	44	Roof Wire and Instrument Panel Wire (left Kick Panel)
IE4	44	Engine Room Main Wire and Instrument Panel Wire (Instrument Panel Brace LH)
IE5		
IH1	46	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IH2		
BA1	48	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)
BB1	48	Back Door No.2 Wire and Back Door No.1 Wire (Back Door Upper Left)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	44	Cowl Side Panel LH
IF	44	Instrument Panel Brace RH
IH	44	Cowl Side Panel RH