



J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

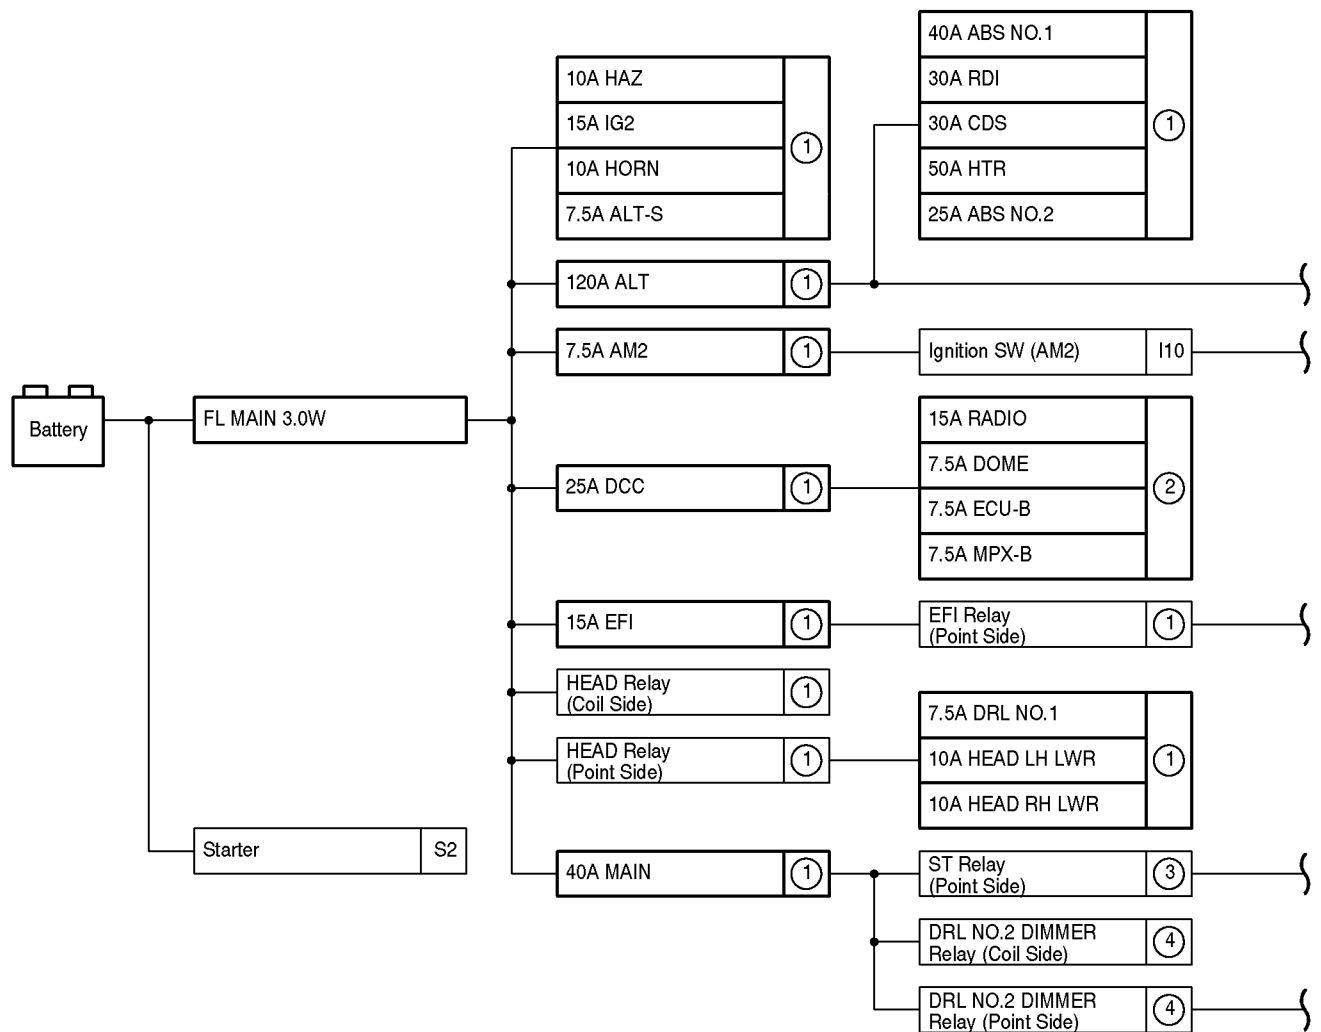

[LOCATION] ① : Engine Room J/B (See page 22)

② : Instrument Panel J/B (See page 24)

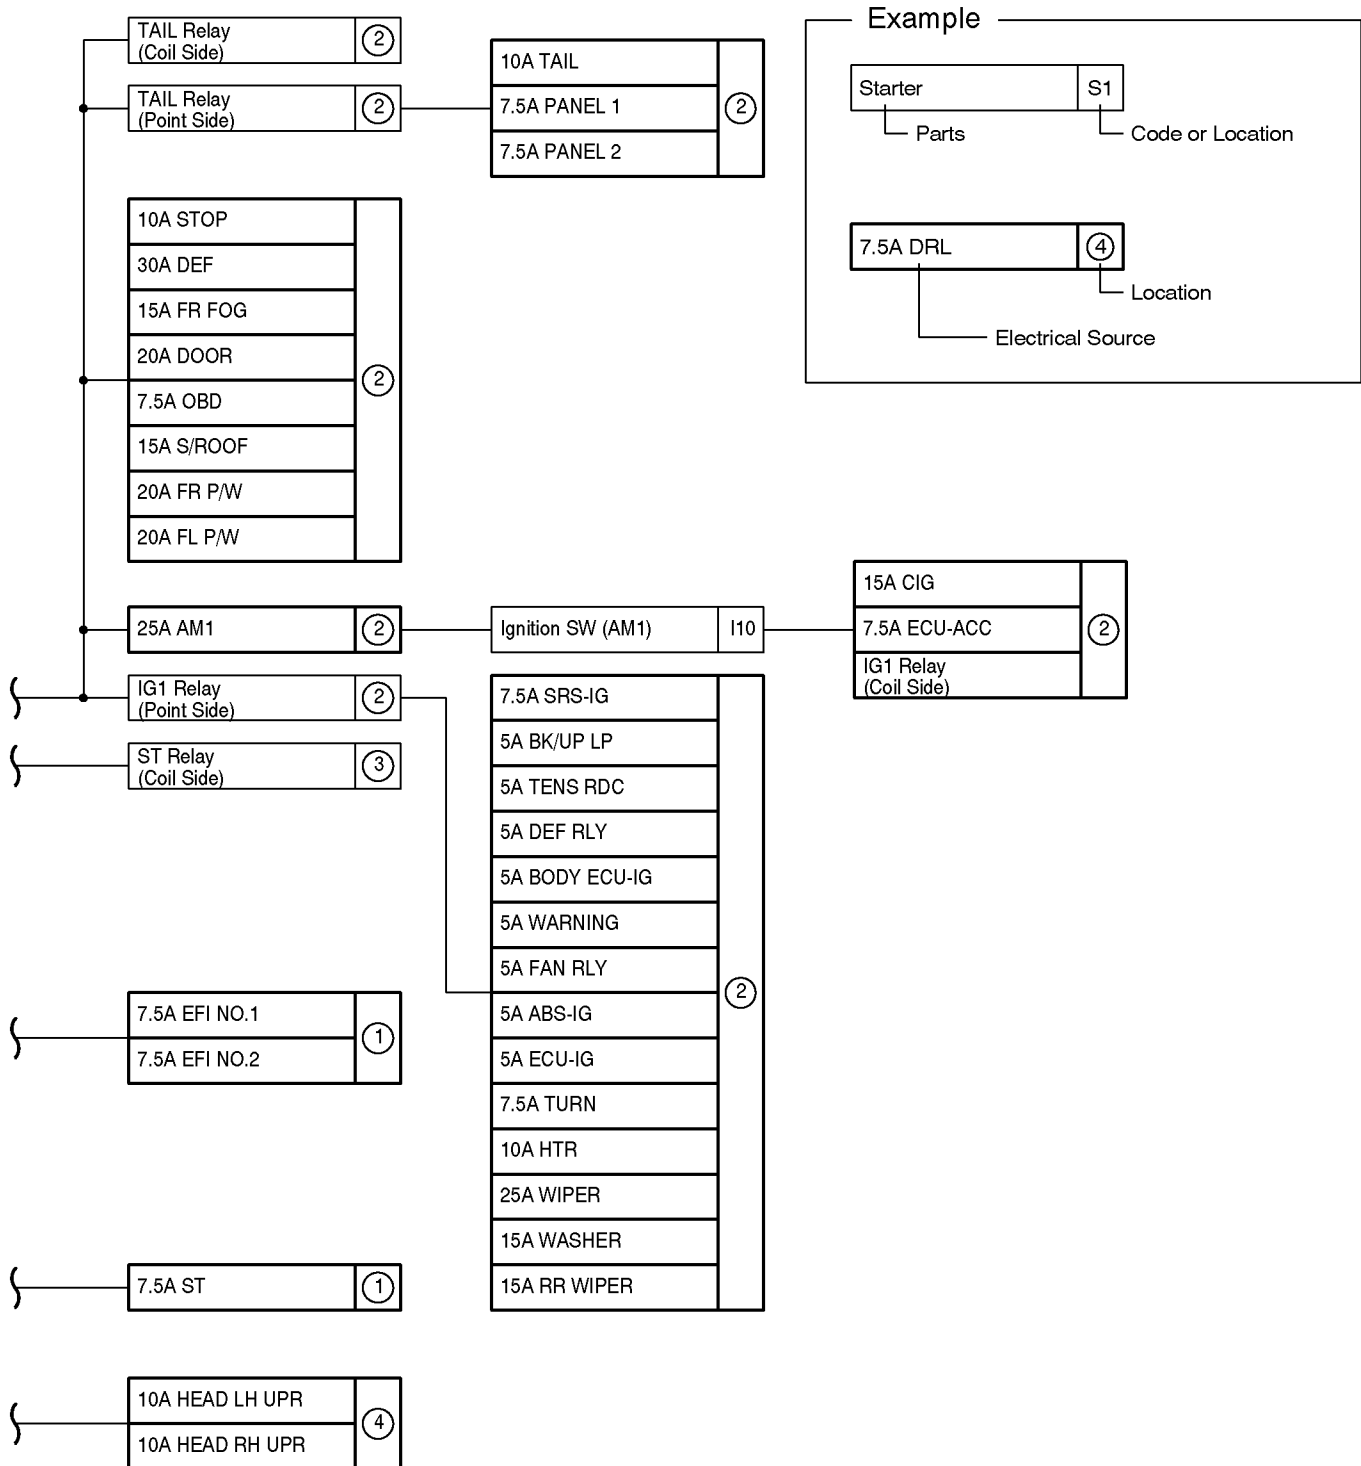

J POWER SOURCE (Current Flow Chart)

Engine Room J/B (See Page 22)

Fuse		System	Page
7.5A	ALT-S	Charging	60
7.5A	AM2	Engine Control SRS Starting and Ignition	62 129 56
7.5A	DRL NO.1	Headlight	74
7.5A	EFI NO.1	Electronically Controlled Transmission and A/T Indicator Engine Control	142 62
7.5A	EFI NO.2	Engine Control	62
7.5A	ST	Engine Control Starting and Ignition	62 56
10A	HAZ	Turn Signal and Hazard Warning Light	94
10A	HEAD LH LWR	Headlight	74
10A	HEAD RH LWR	Combination Meter Fog Light Headlight	170 78 74
10A	HORN	Horn Multiplex Communication System Wireless Door Lock Control	150 100 110
15A	EFI	Electronically Controlled Transmission and A/T Indicator Engine Control	142 62
15A	IG2	Engine Control Starting and Ignition	62 56
25A	ABS NO.2	ABS	134
30A	CDS	Radiator Fan and Condenser Fan	176
30A	RDI	Radiator Fan and Condenser Fan	176
40A	ABS NO.1	ABS	134
40A	MAIN	Engine Control Headlight Multiplex Communication System Starting and Ignition	62 74 100 56
50A	HTR	Air Conditioning	178
120A	ALT	Charging Illumination Light Reminder Buzzer Multiplex Communication System Taillight	60 84 96 100 80

* These are the page numbers of the first page on which the related system is shown.

Instrument Panel J/B (See Page 24)

Fuse		System	Page
5A	ABS-IG	ABS	134
5A	BK/UP LP	Back-Up Light	90
		Combination Meter	170
		Cruise Control	138
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control	62
5A	BODY ECU-IG	Door Lock Control	114
		Electric Tension Reducer	124
		Headlight	74
		Interior Light	88
		Key Reminder and Seat Belt Warning	126
		Light Reminder Buzzer	96
		Moon Roof	122
		Multiplex Communication System	100
		Power Window	118
		Wireless Door Lock Control	110
5A	DEF RLY	Multiplex Communication System	100
		Power Window	118
		Rear Window Defogger	162
5A	ECU-IG	Cruise Control	138
5A	FAN RLY	Radiator Fan and Condenser Fan	176
5A	TENS RDC	Electric Tension Reducer	124
		Moon Roof	122
		Multiplex Communication System	100
		Shift Lock	148
5A	WARNING	ABS	134
		Air Conditioning	178
		Charging	60
		Combination Meter	170
		Cruise Control	138
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control	62
		Key Reminder and Seat Belt Warning	126
		Multiplex Communication System	100
7.5A	DOME	Cigarette Lighter and Clock	152
		Interior Light	88
		Key Reminder and Seat Belt Warning	126
		Multiplex Communication System	100
7.5A	ECU-ACC	Cigarette Lighter and Clock	152
		Door Lock Control	114
		Electric Tension Reducer	124
		Interior Light	88

* These are the page numbers of the first page on which the related system is shown.

J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	ECU-ACC	Key Reminder and Seat Belt Warning	126
		Light Reminder Buzzer	96
		Moon Roof	122
		Multiplex Communication System	100
		Power Window	118
		Radio and Player (Built-In Type Amplifier)	168
		Radio and Player (Separate Type Amplifier)	164
		Remote Control Mirror	154
		Wireless Door Lock Control	110
7.5A	ECU-B	Air Conditioning	178
		Combination Meter	170
		Interior Light	88
		Multiplex Communication System	100
7.5A	MPX-B	Door Lock Control	114
		Electric Tension Reducer	124
		Headlight	74
		Interior Light	88
		Key Reminder and Seat Belt Warning	126
		Light Reminder Buzzer	96
		Moon Roof	122
		Multiplex Communication System	100
		Power Window	118
		Wireless Door Lock Control	110
7.5A	OBD	Engine Control	62
7.5A	PANEL 1	Illumination	84
7.5A	PANEL 2	Combination Meter	170
		Illumination	84
7.5A	SRS-IG	SRS	129
7.5A	TURN	Turn Signal and Hazard Warning Light	94
10A	HTR	Air Conditioning	178
		Rear Window Defogger	162
10A	STOP	ABS	134
		Cruise Control	138
		Electronically Controlled Transmission and A/T Indicator	142
		Engine Control	62
		Shift Lock	148
		Stop Light	92
10A	TAIL	Taillight	80
15A	CIG	Cigarette Lighter and Clock	152
15A	FR FOG	Fog Light	78
15A	RADIO	Radio and Player (Built-In Type Amplifier)	168
		Radio and Player (Separate Type Amplifier)	164
15A	RR WIPER	Rear Wiper and Washer	160

* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	S/ROOF	Moon Roof	122
15A	WASHER	Front Wiper and Washer Rear Wiper and Washer	156 160
20A	DOOR	Door Lock Control Electric Tension Reducer Interior Light Key Reminder and Seat Belt Warning Light Reminder Buzzer Moon Roof Multiplex Communication System Power Window Wireless Door Lock Control	114 124 88 126 96 122 100 118 110
20A	FL P/W	Multiplex Communication System Power Window	100 118
20A	FR P/W	Multiplex Communication System Power Window	100 118
25A	WIPER	Front Wiper and Washer	156
30A	DEF	Multiplex Communication System Rear Window Defogger	100 162

Engine Room R/B No.2 (See Page 27)

Fuse		System	Page
10A	HEAD LH UPR	Headlight	74
10A	HEAD RH UPR	Headlight	74

* These are the page numbers of the first page on which the related system is shown.