




F RELAY LOCATIONS

[Engine Compartment]

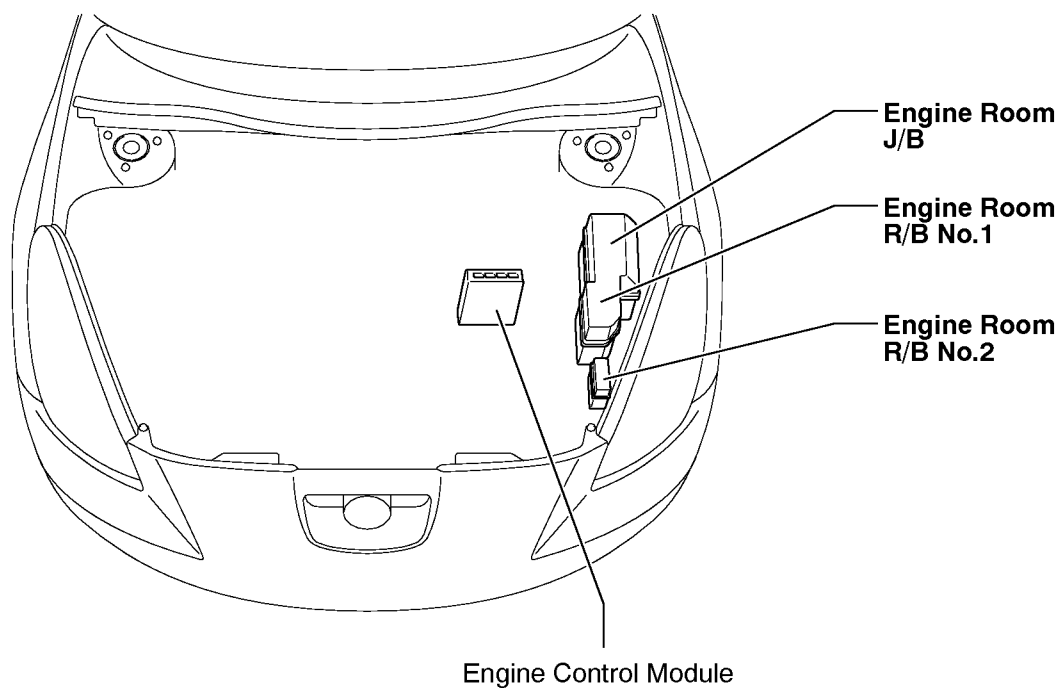

[Instrument Panel]

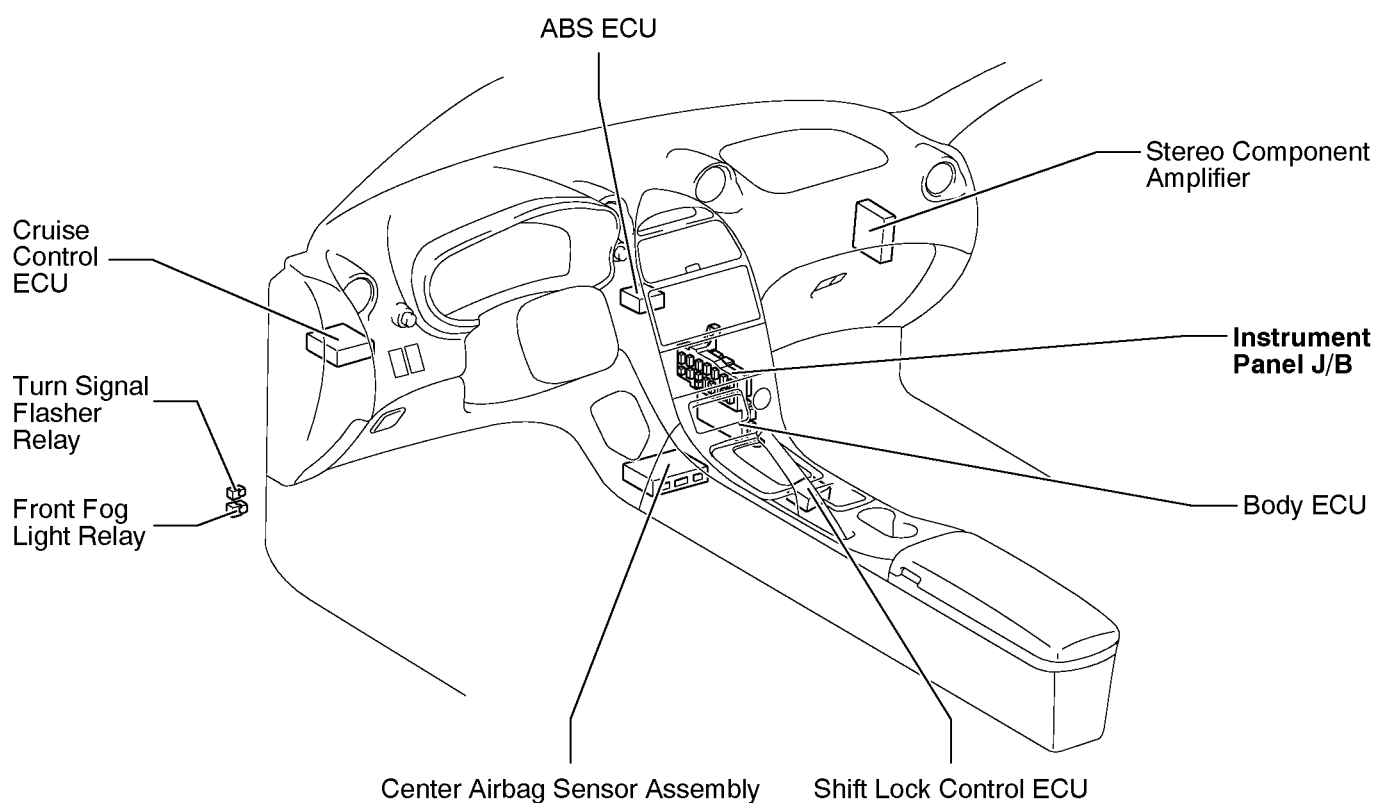


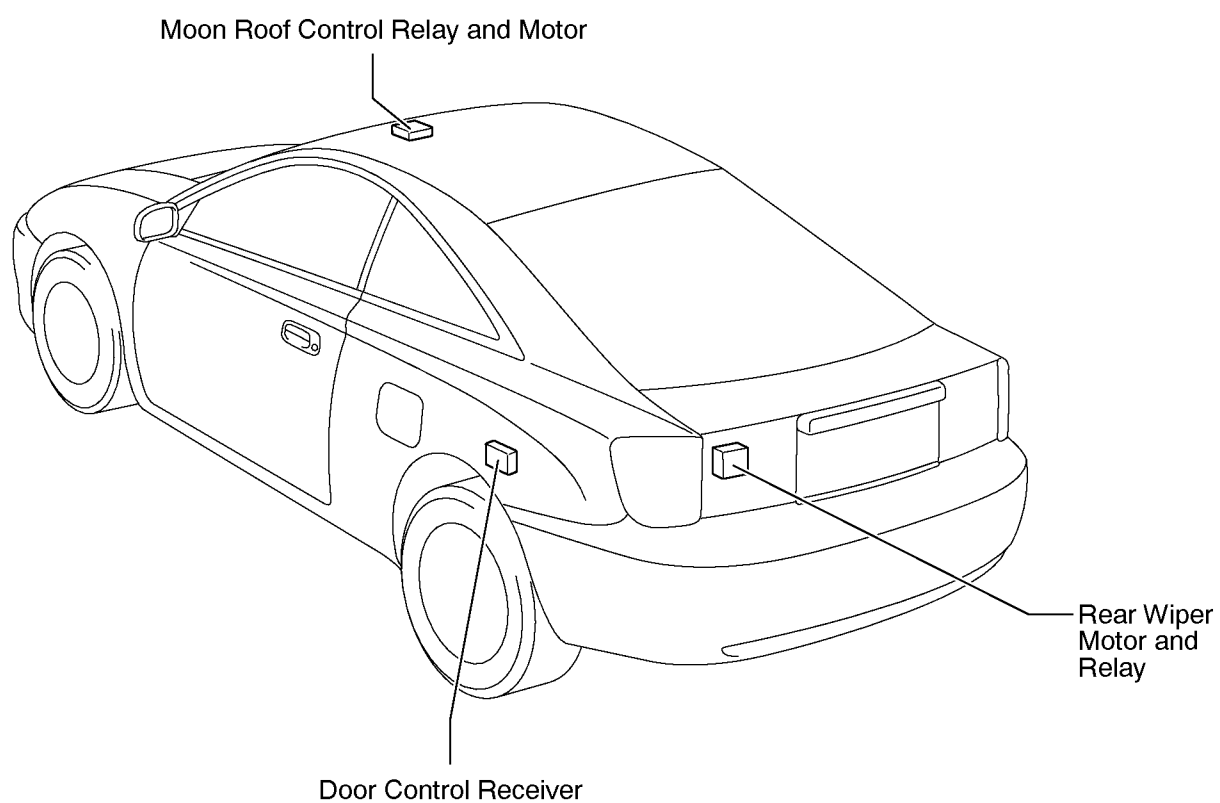[Body]


F RELAY LOCATIONS

○ : Engine Room J/B

Engine Compartment Left (See Page 20)

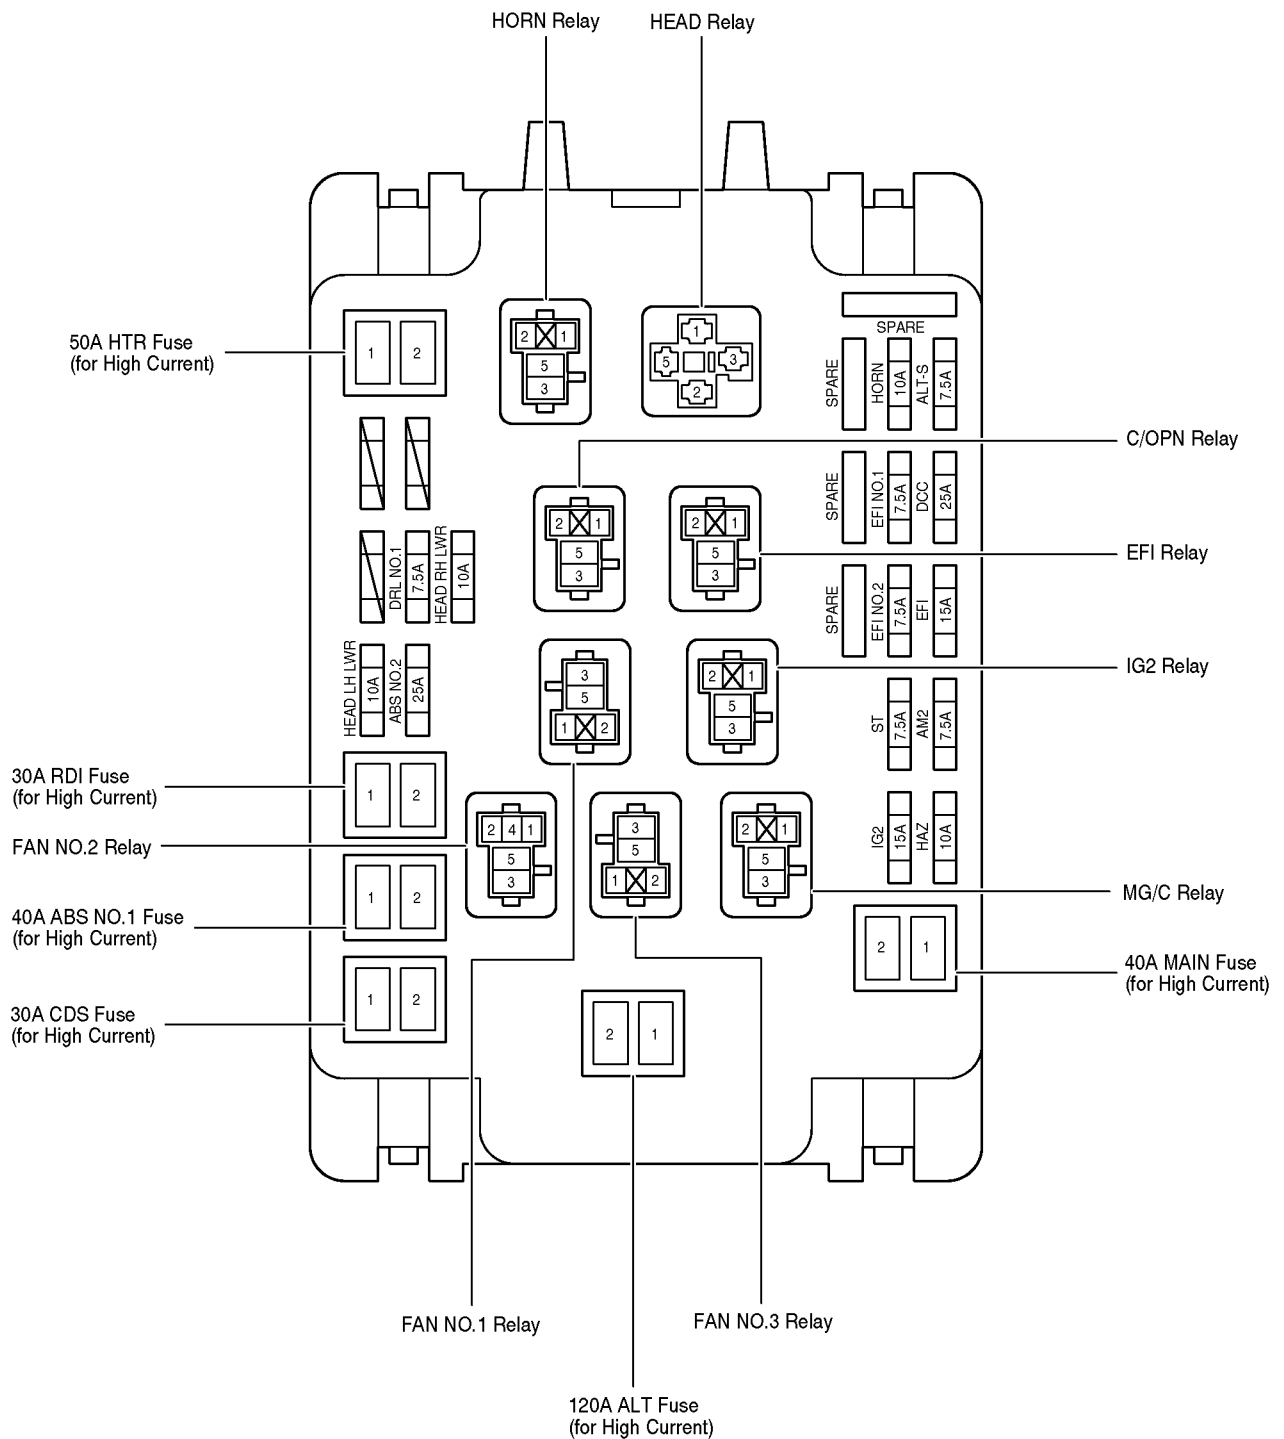


(Inner Circuit : See Page 28)

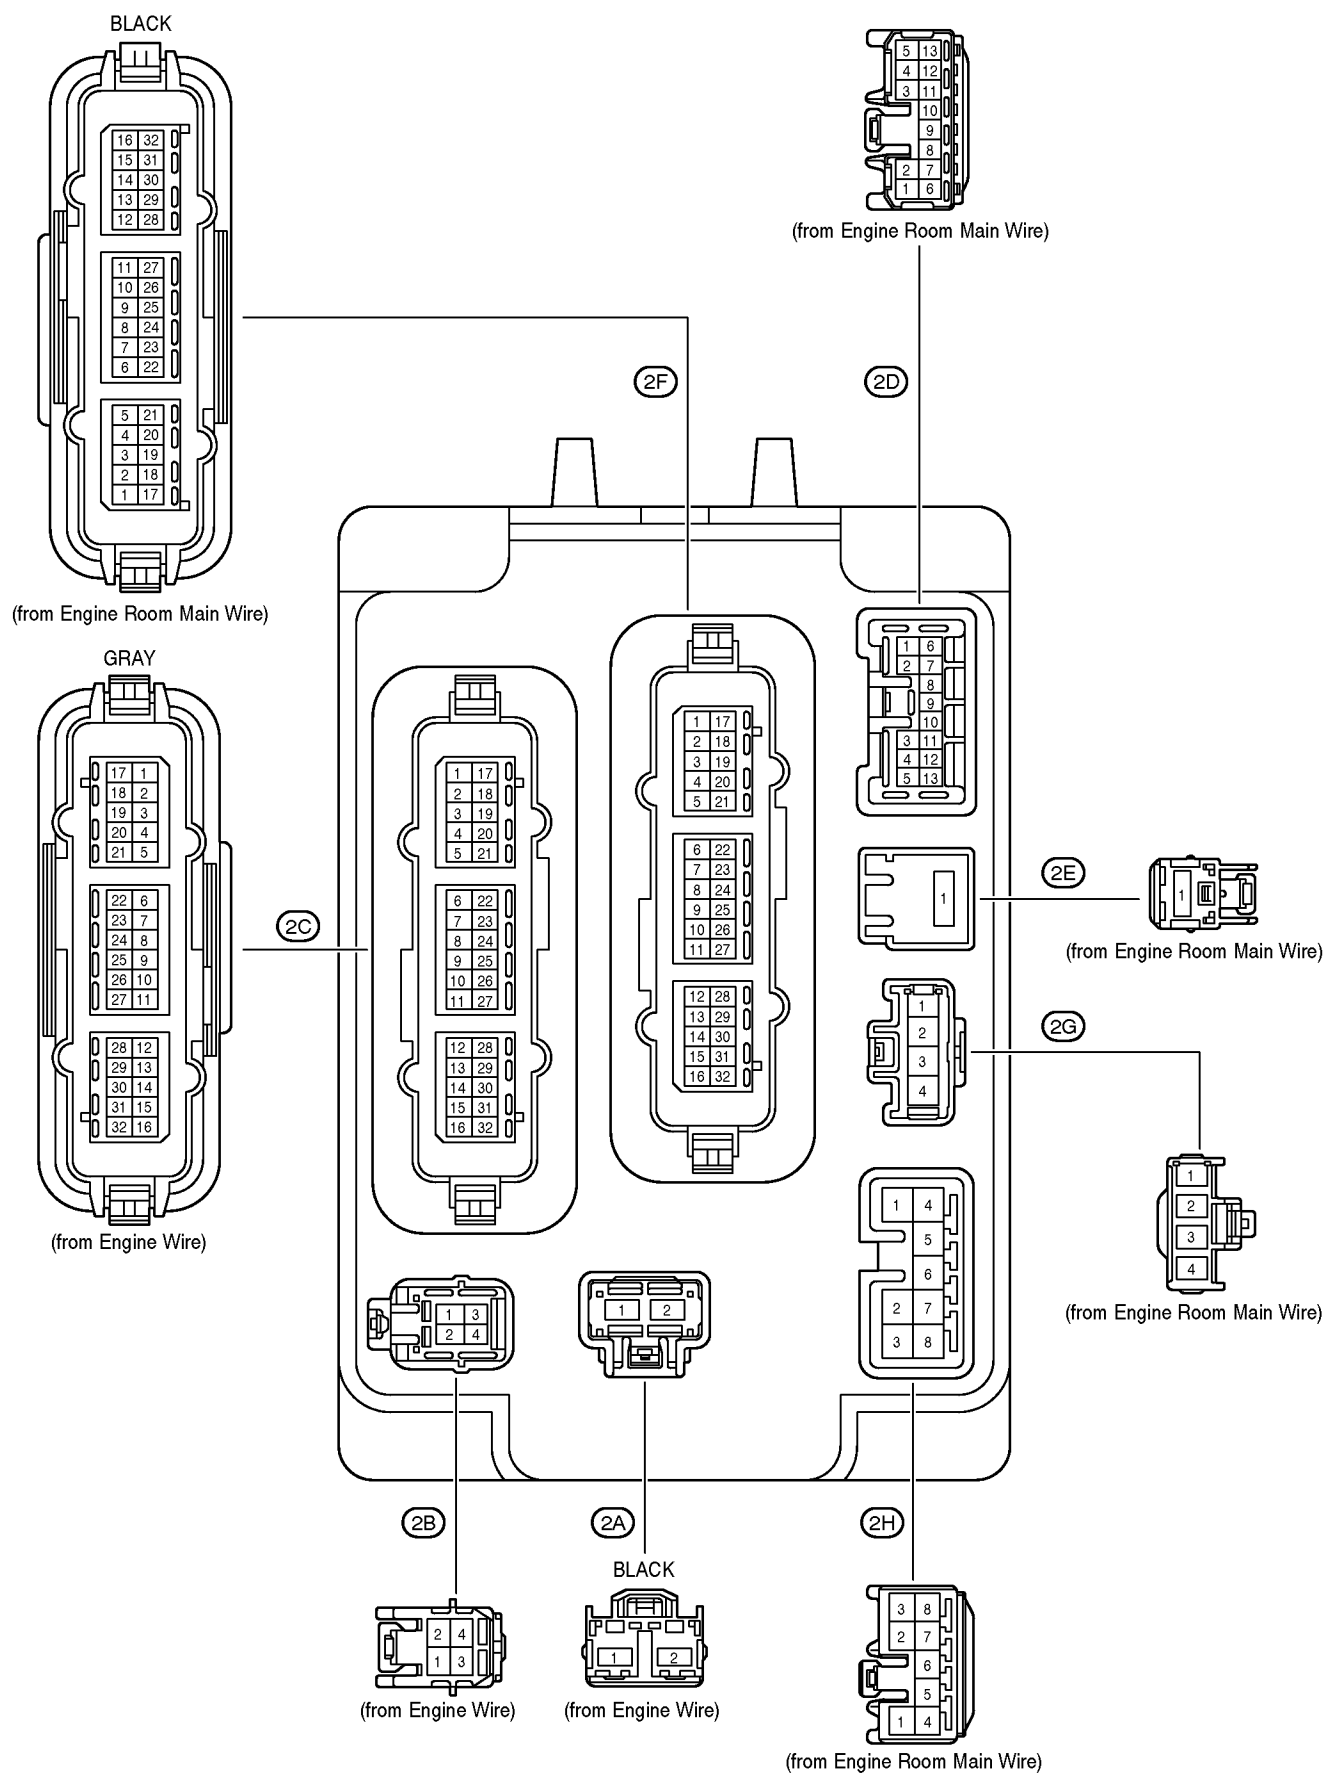


F RELAY LOCATIONS

 : Instrument Panel J/B Instrument Panel Brace RH (See Page 21)

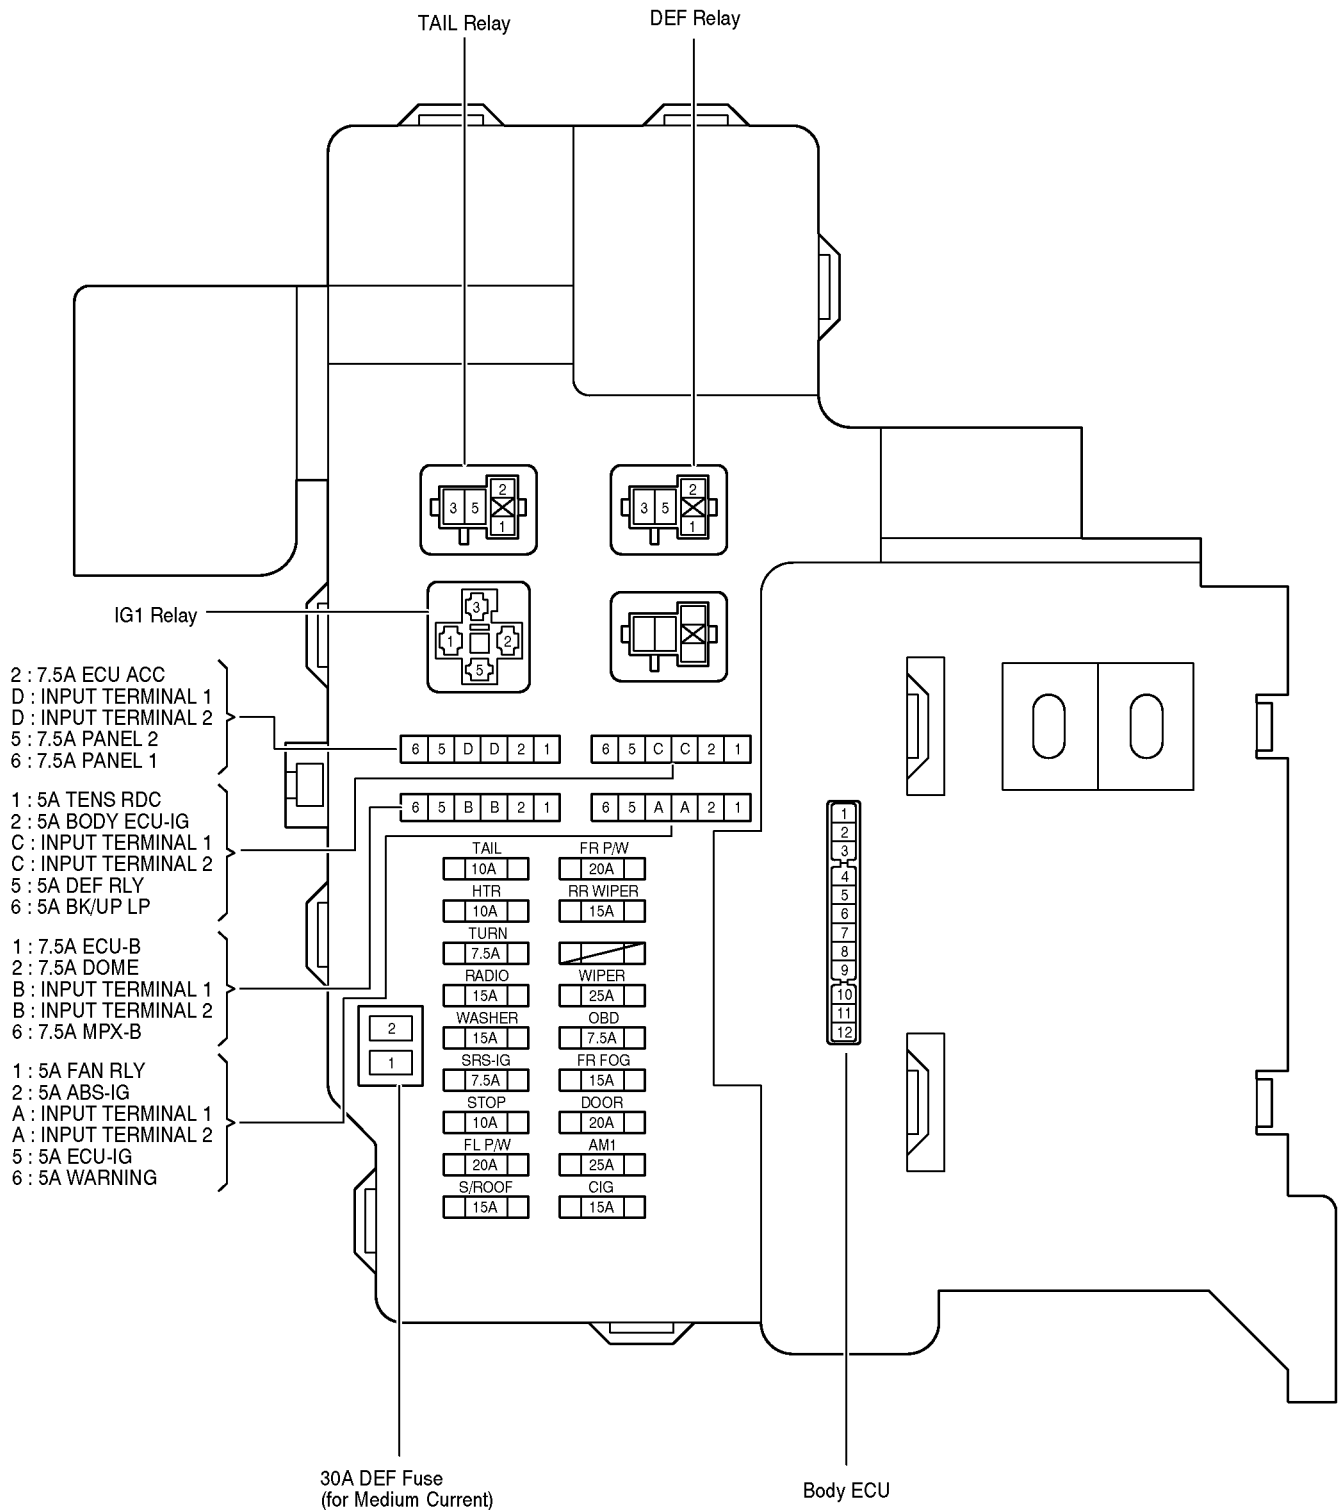


(Inner Circuit : See Page 30)

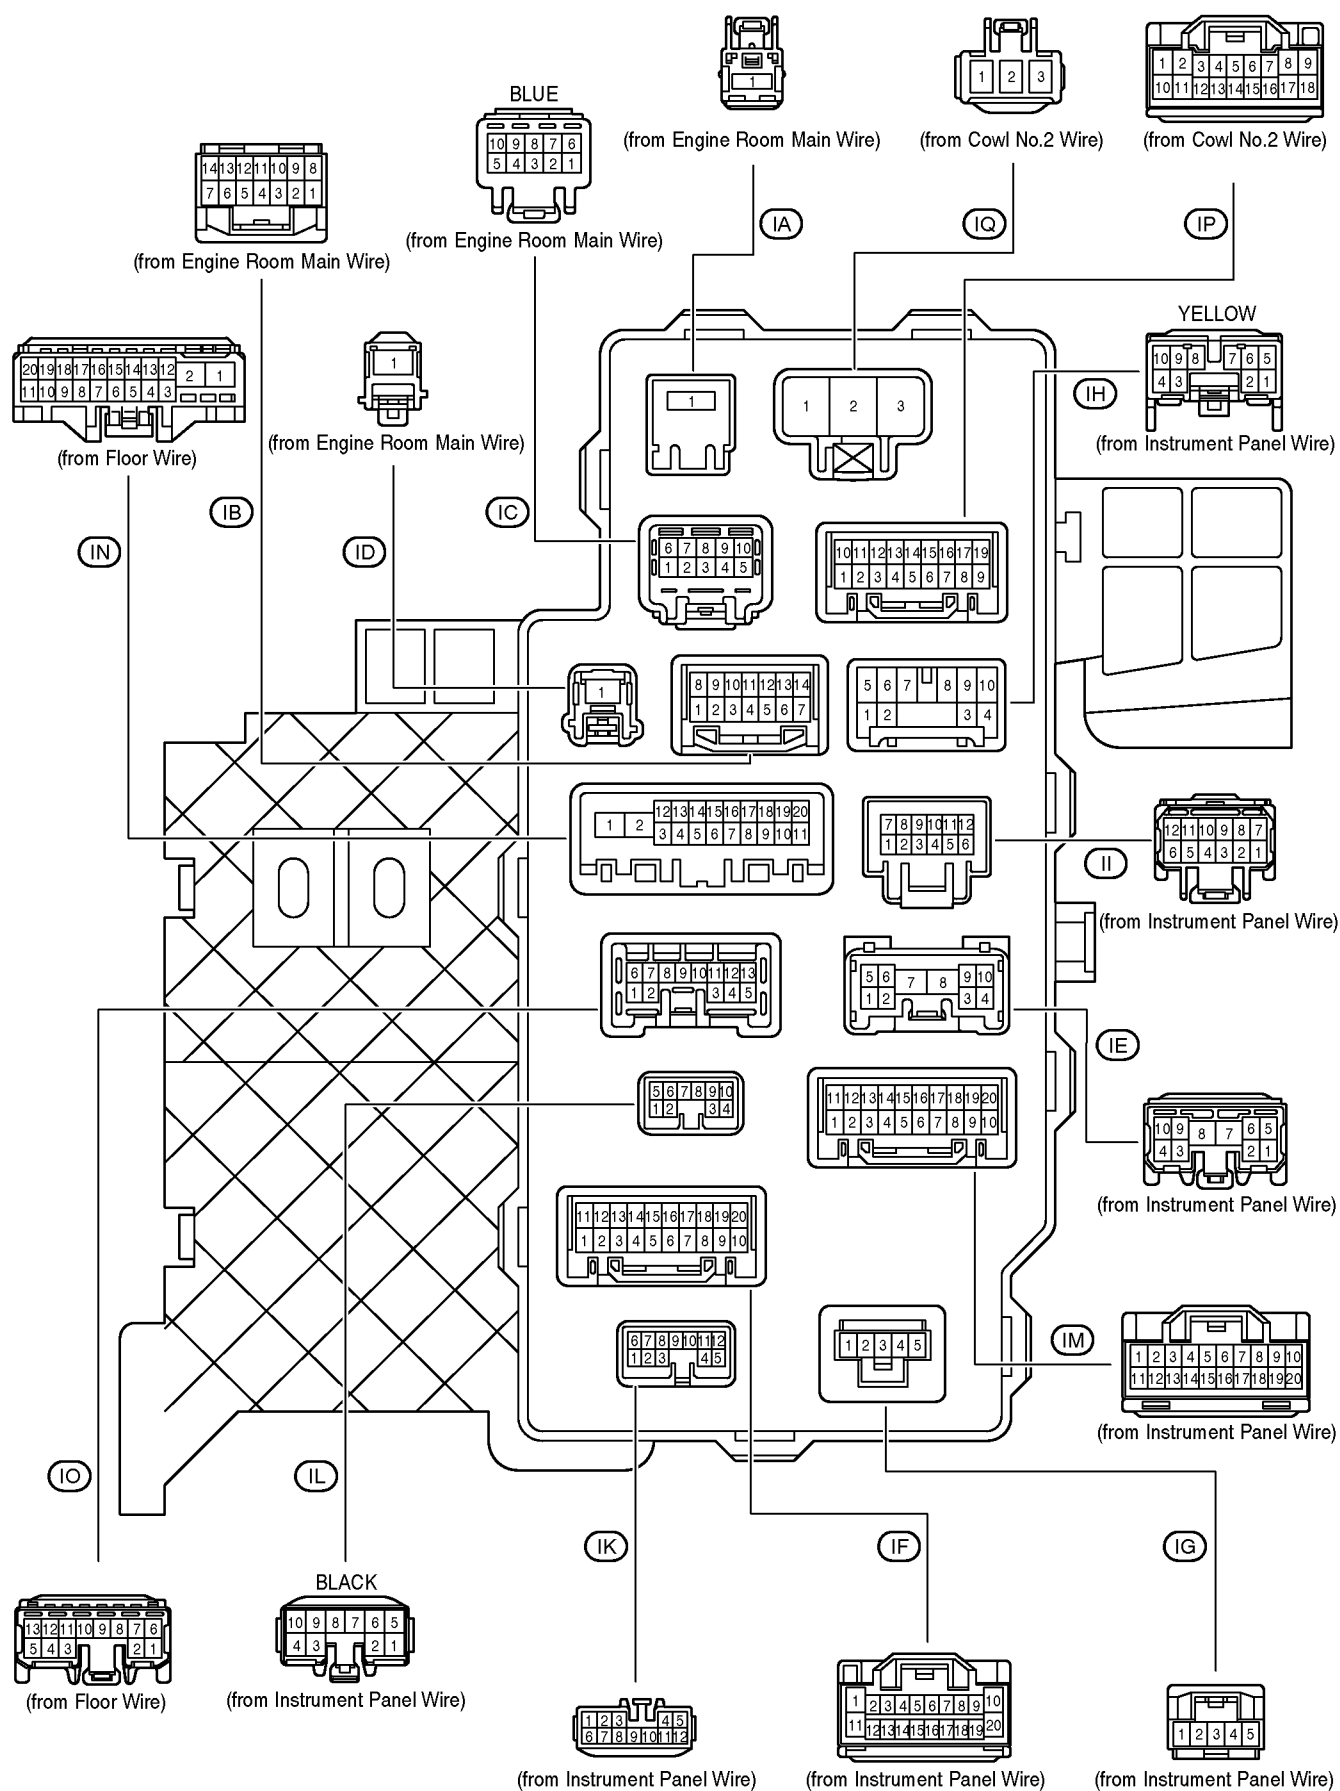


F RELAY LOCATIONS

① : Engine Room R/B No.1 [Engine Compartment Left \(See Page 20\)](#)

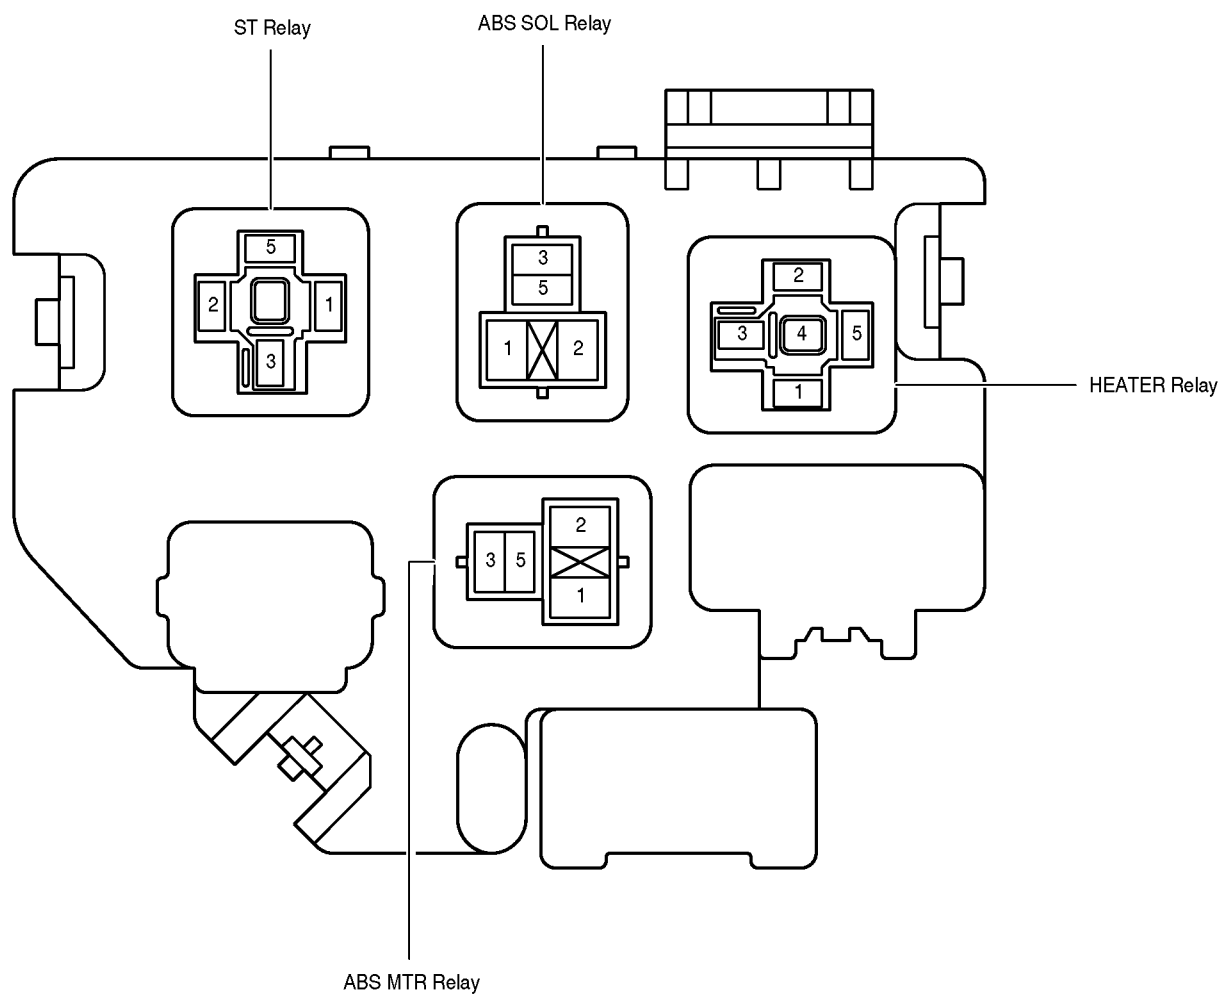


② : Engine Room R/B No.2	Engine Compartment Left (See Page 20)
--------------------------	---------------------------------------

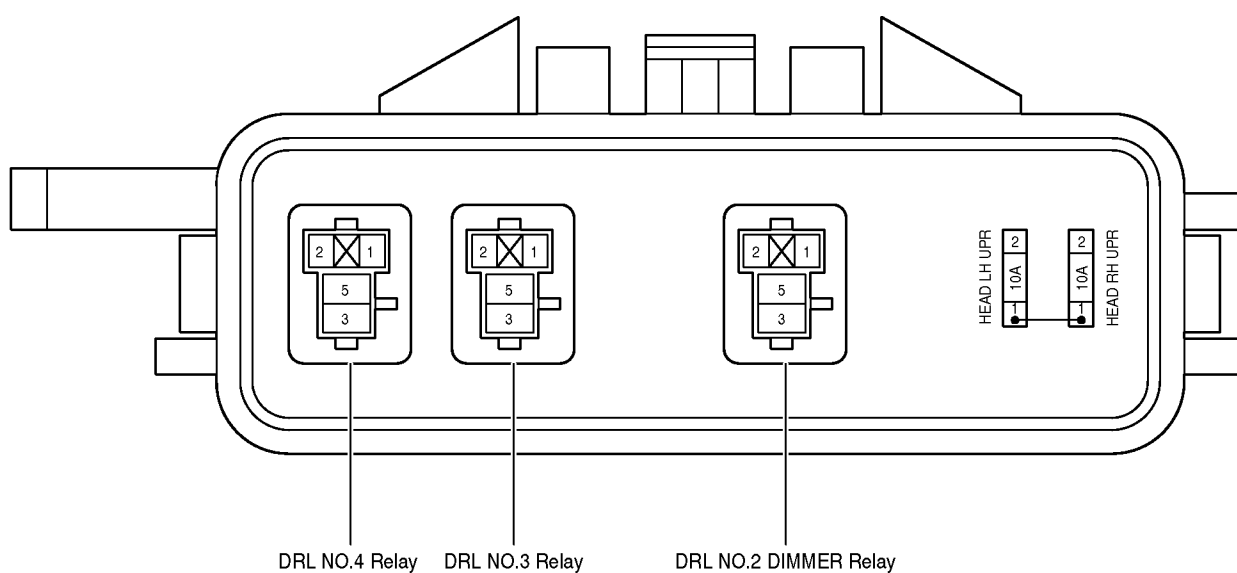


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

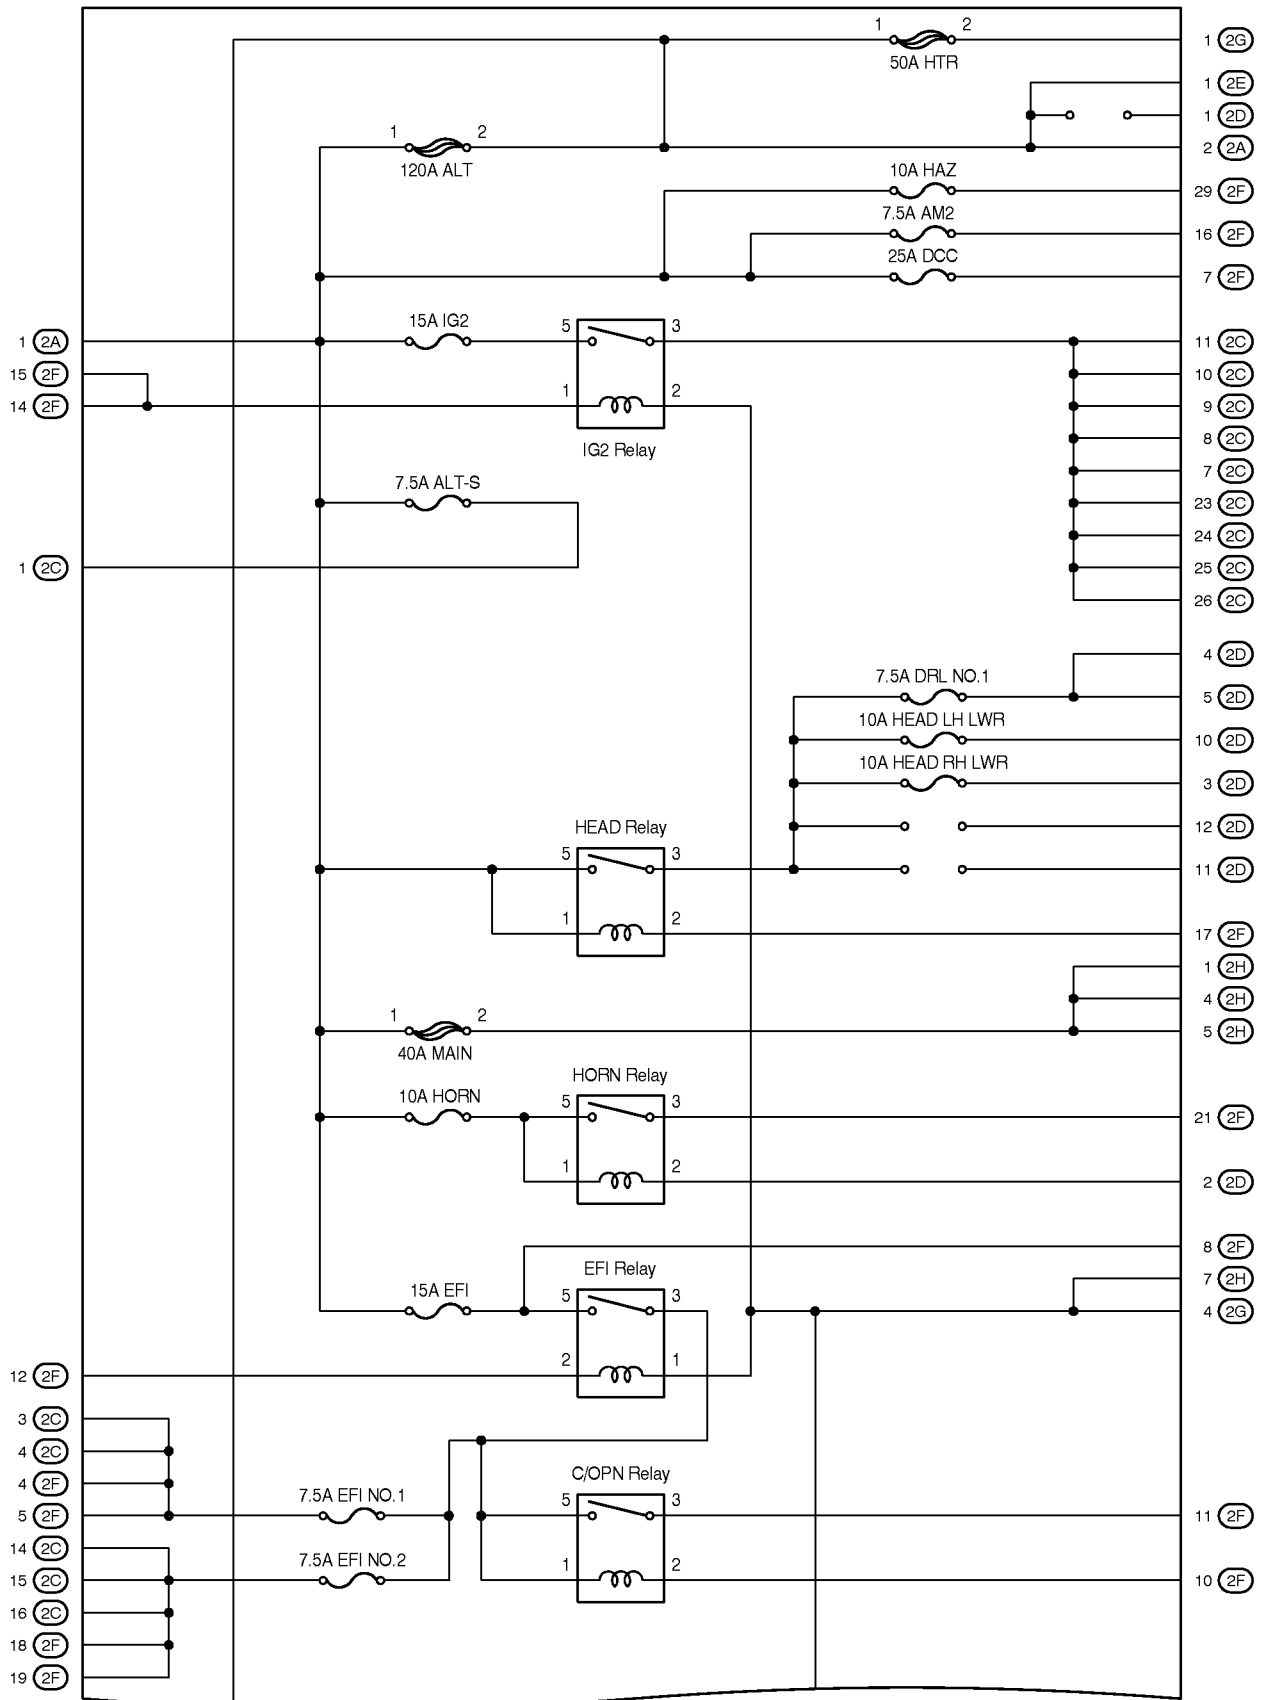


(Cont. next page)

(Cont'd)

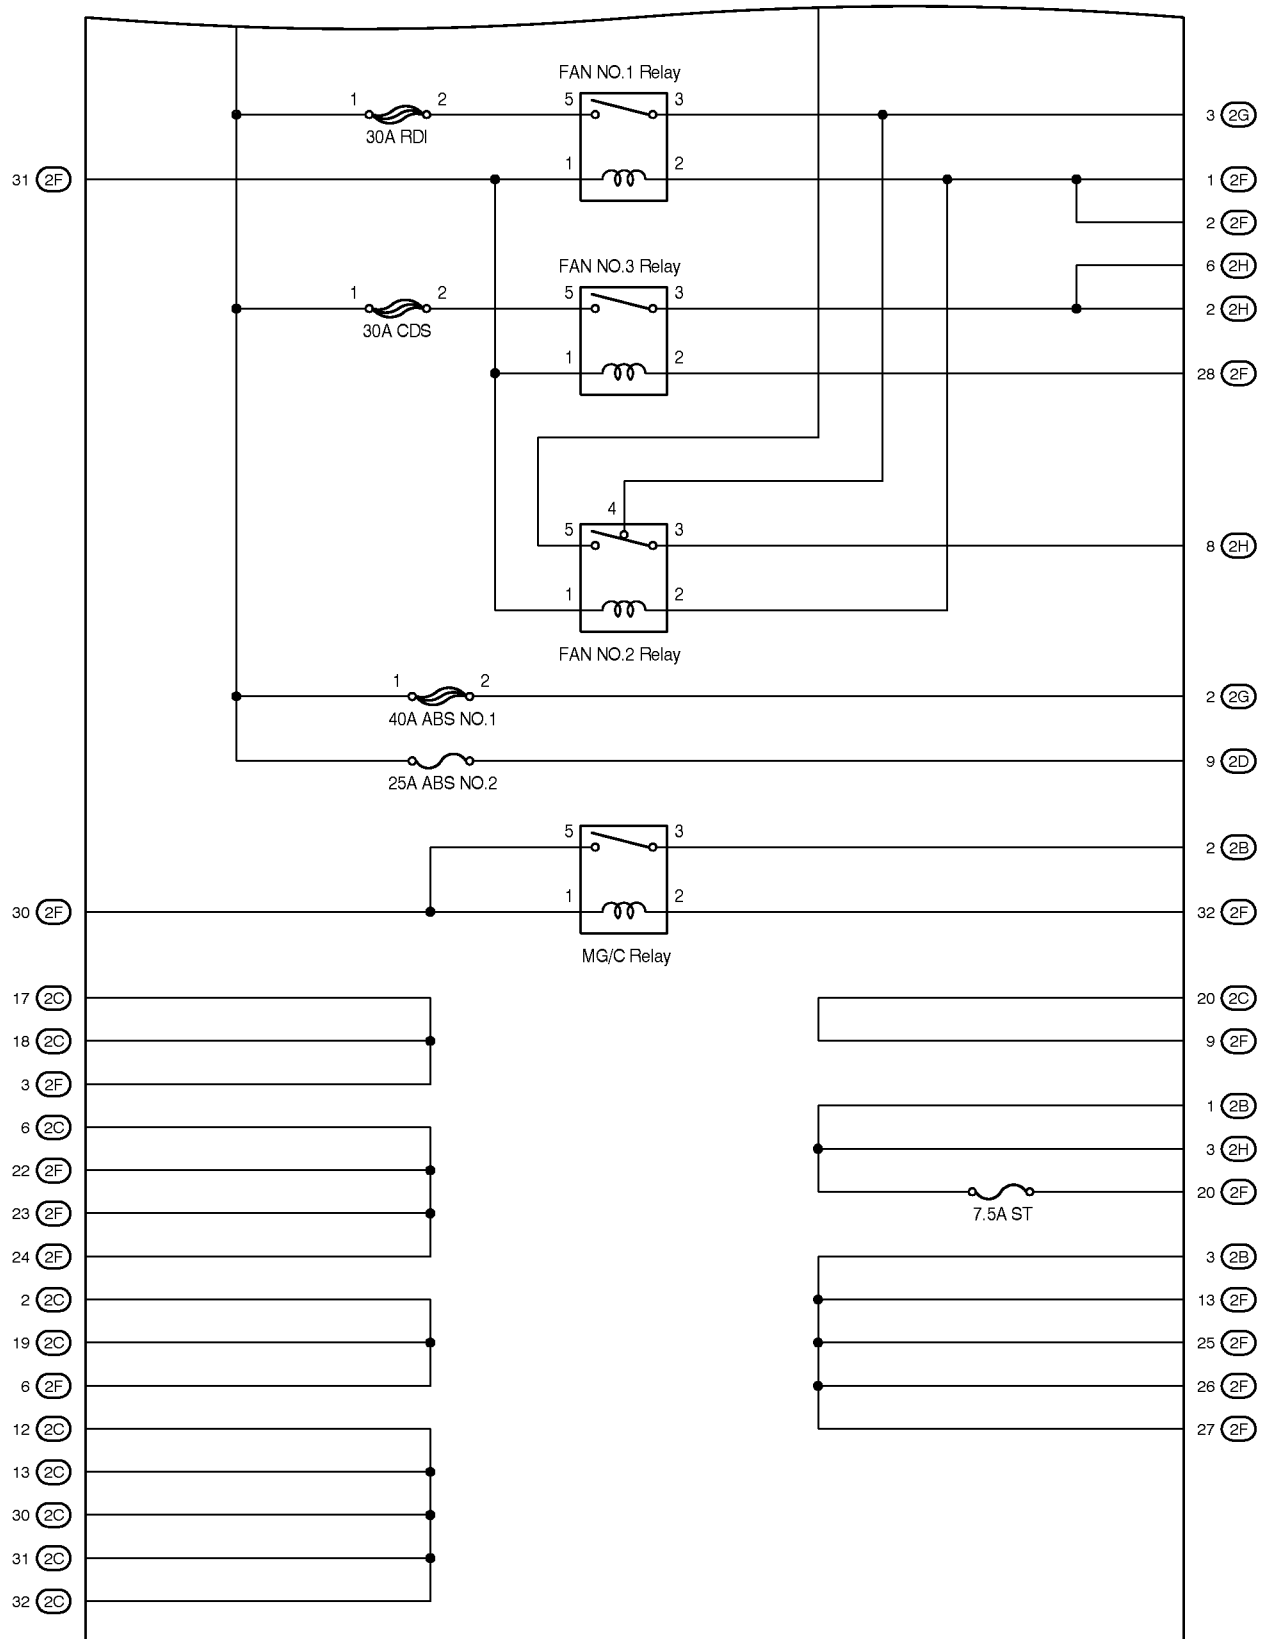

F RELAY LOCATIONS

[Instrument Panel J/B Inner Circuit]

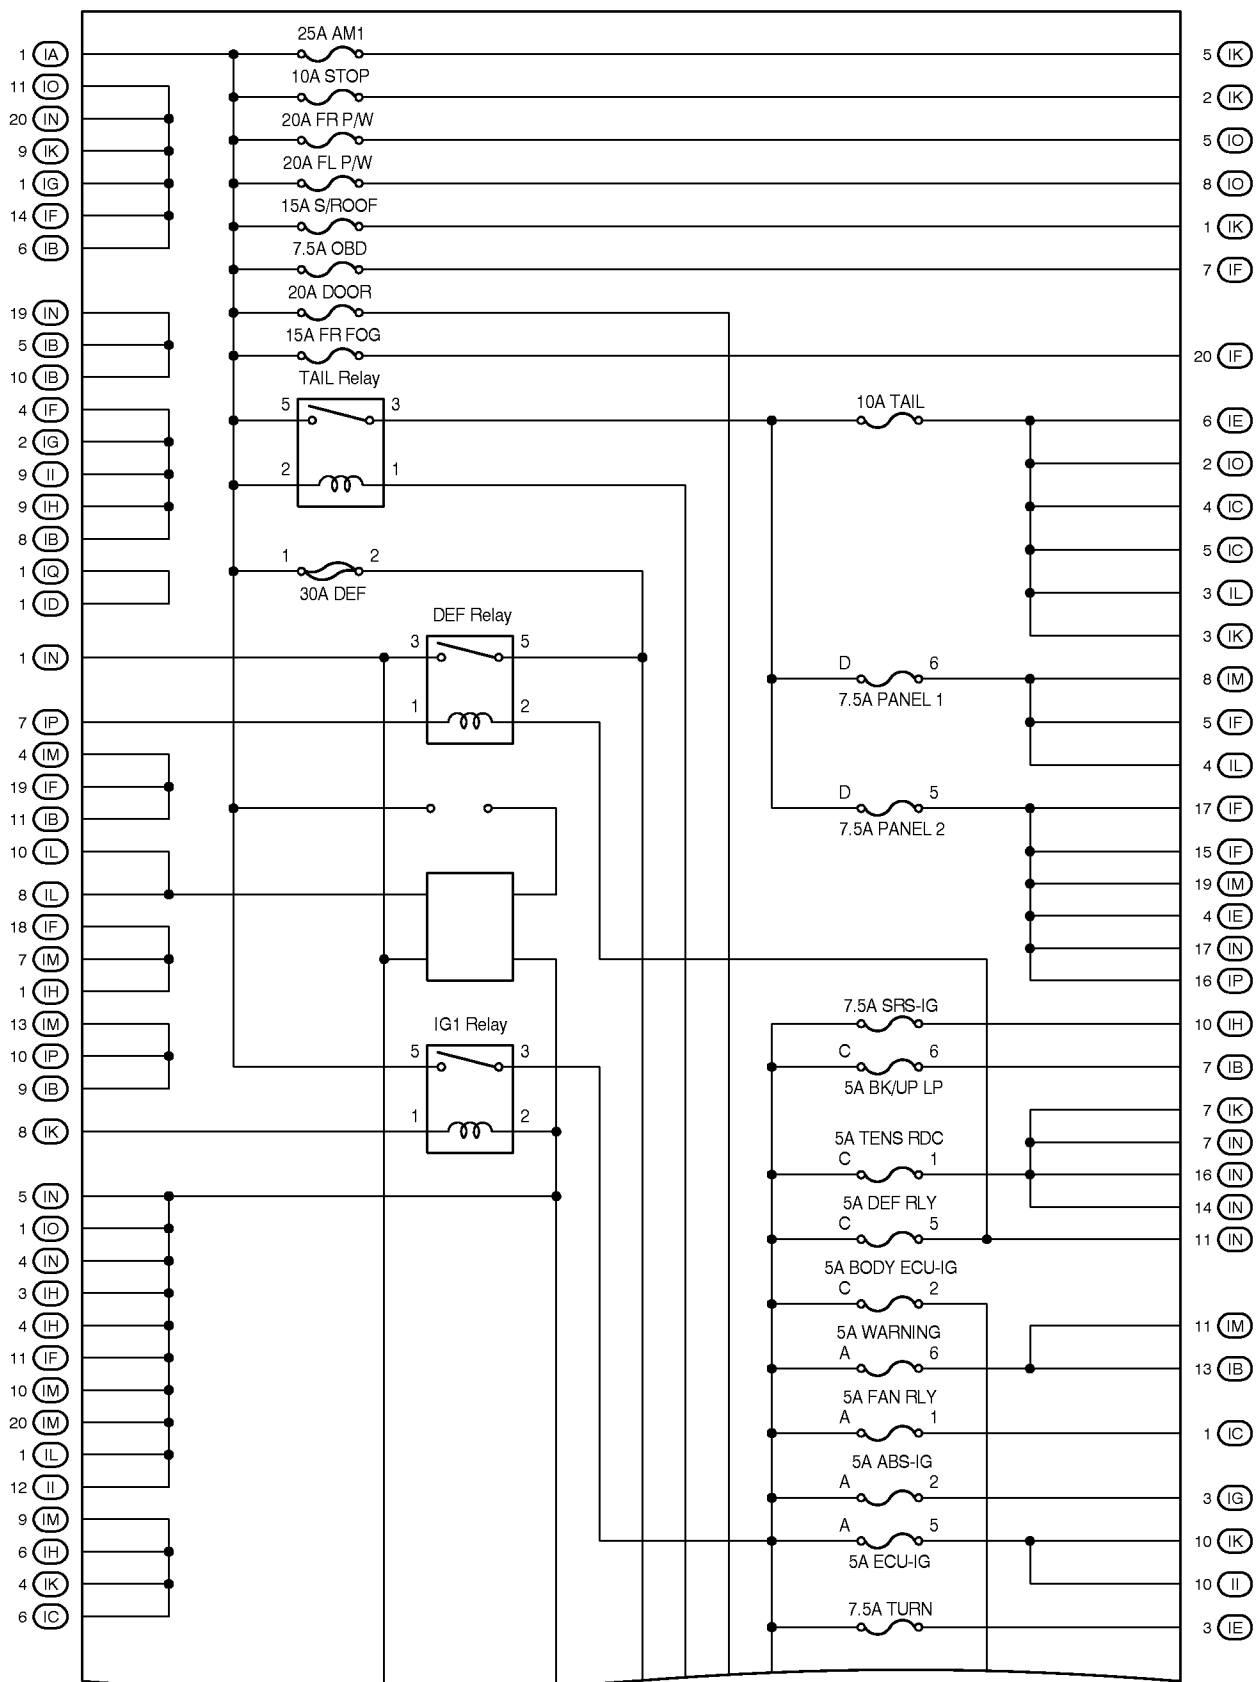

(Cont. next page)

(Cont'd)

