


STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

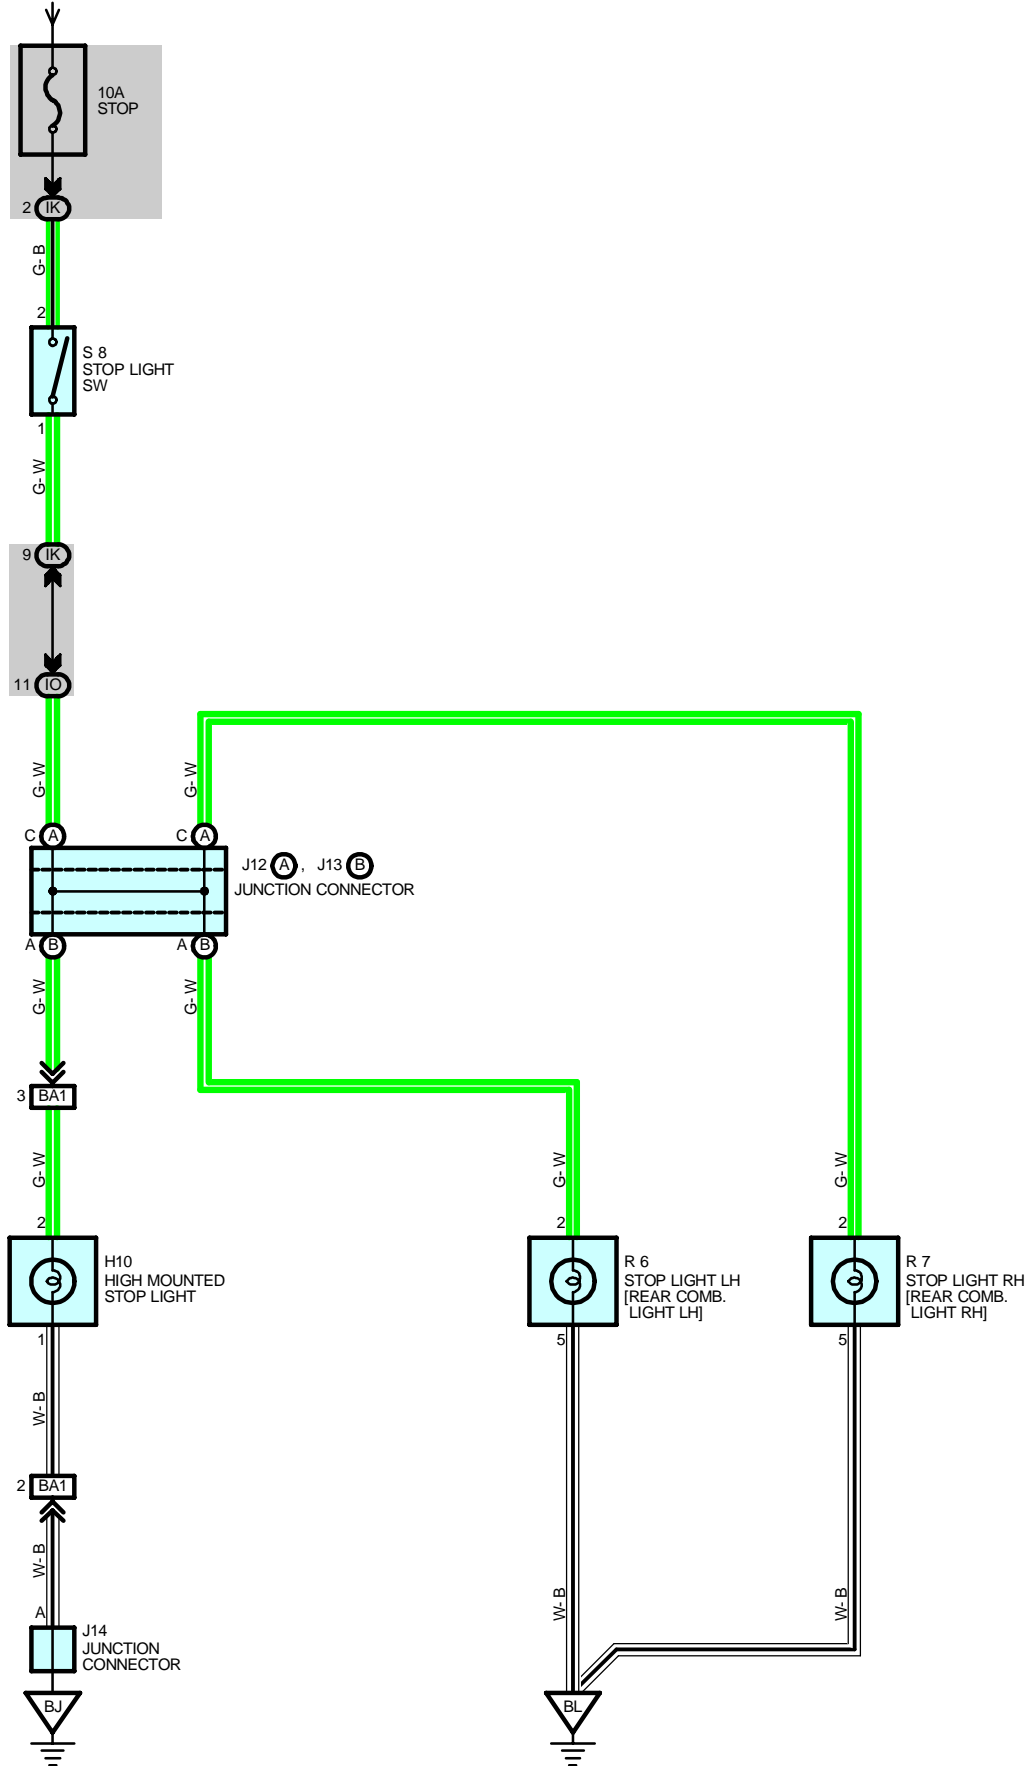

SERVICE HINTS

S8 STOP LIGHT SW

2-1 : Closed with the brake pedal depressed

: PARTS LOCATION

Code		See Page	Code		See Page
H10		38	J14		38
J12	A	38	R6	39	
J13	B	38	R7	39	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
IK	25	Instrument Panel Wire and Instrument Panel J/B (Instrument Panel Brace RH)
IO	25	Floor Wire and Instrument Panel J/B (Instrument Panel Brace RH)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA1	48	Back Door No.1 Wire and Floor Wire (Quarter Panel LH)

: GROUND POINTS

Code	See Page	Ground Points Location
BJ	48	Luggage Room Left
BL	48	Back Panel Center