



REMOVAL

1. **REMOVE LOWER FINISH PANEL** (See page [BO-54](#))
2. **REMOVE A/C AMPLIFIER**
 - (a) Disconnect the connector from the amplifier.
 - (b) Remove the 2 screws and the amplifier.