


AIR CONDITIONING SWITCH INSPECTION

AC1FF-02


1. REMOVE A/C SWITCH

- Cover the switch with a cloth.
- Using pliers, pull out the A/C switch.
- Disconnect the A/C switch connector.

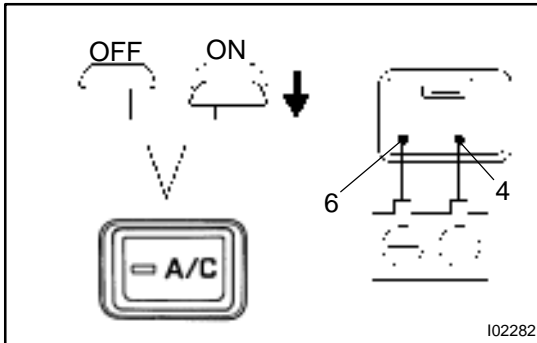


2. INSPECT A/C INDICATOR OPERATION

- Connect the positive (+) lead from the battery to terminal 6 and negative (-) lead to terminal 4 and check that the indicator lights up, when A/C switch ON.

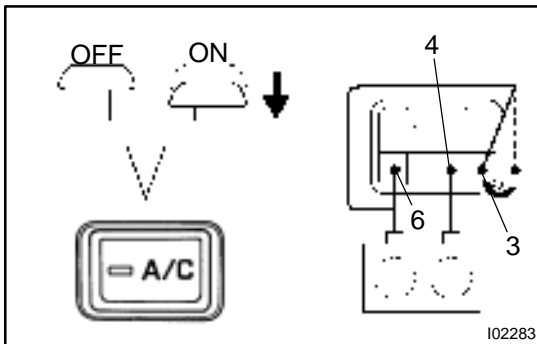

- Connect the positive (+) lead from the battery to terminal 3 and check that the indicator dims.

If operations are not as specified, replace the A/C switch.

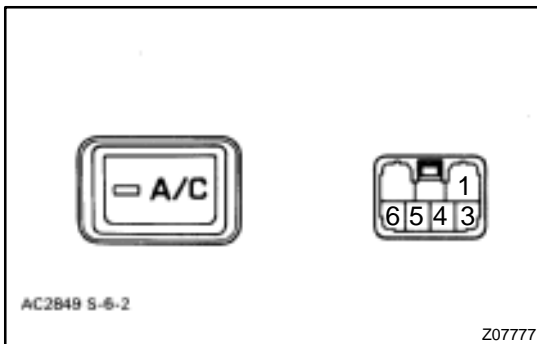

3. INSPECT A/C SWITCH CONTINUITY

Condition / Circuit	Tester connection	Specified condition
OFF	–	No continuity
ON	5 – 6	Continuity
Illumination circuit	3 – 1	Continuity

If continuity is not as specified, replace the A/C switch.

4. INSTALL A/C SWITCH

Connect the A/C switch connector, and install the A/C switch.