



## BLOWER MOTOR INSPECTION

AC1F2-02

1. **REMOVE LOWER FINISH PANEL**  
(See page [BO-54](#))

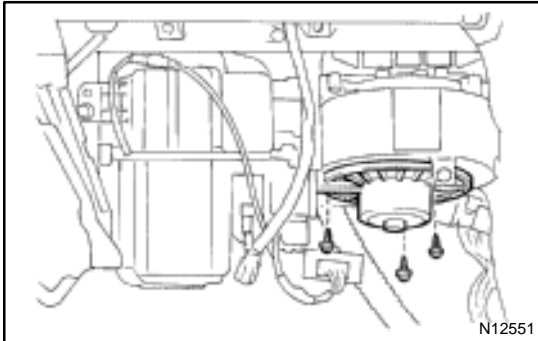

2. **REMOVE BLOWER MOTOR**
  - (a) Remove the A/C amplifier.
  - (b) Disconnect the connector.
  - (c) Remove the 3 screws and motor.

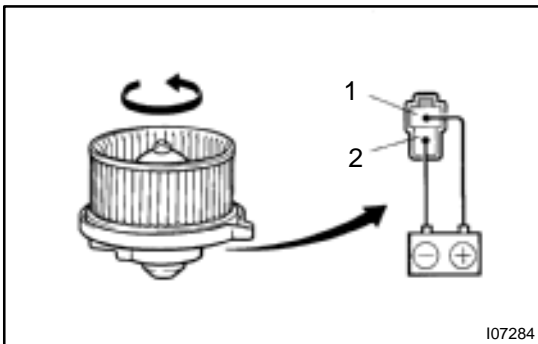

3. **INSPECT BLOWER MOTOR OPERATION**

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.
4. **INSTALL BLOWER MOTOR**
  - (a) Install the motor and 3 screws.
  - (b) Connect the connector.
  - (c) Install the A/C amplifier.
5. **INSTALL LOWER FINISH PANEL**  
(See page [BO-58](#))