



BLOWER RESISTOR INSPECTION

1. REMOVE LOWER FINISH PANEL
(See page [BO-54](#))

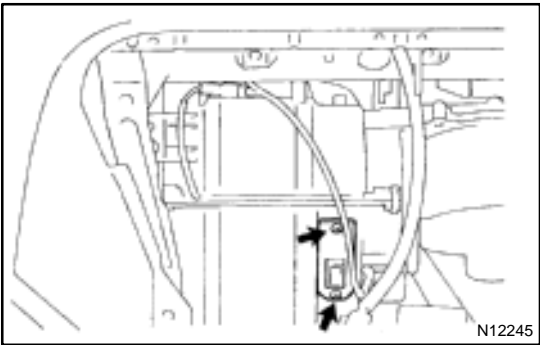

2. REMOVE BLOWER RESISTOR
- (a) Disconnect the connector.
 - (b) Remove the 2 screws and blower resistor.

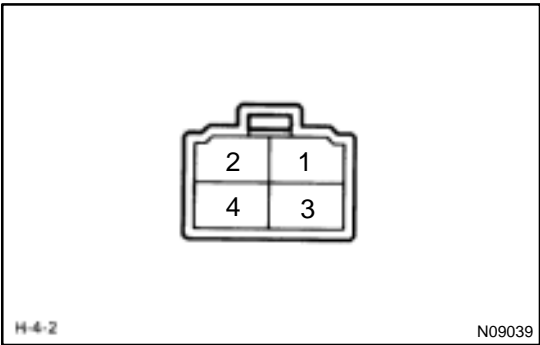

3. INSPECT BLOWER RESISTOR RESISTANCE

Tester connection	Condition	Specified condition
1 – 3	Constant	Approx. 0.4 Ω
2 – 3	Constant	Approx. 1.1 Ω
2 – 4	Constant	Approx. 2.8 Ω

If continuity is not as specified, replace the blower resistor.

4. INSTALL BLOWER MOTOR
- (a) Install the blower resistor with screw.
 - (b) Connect the connector.
5. INSTALL LOWER FINISH PANEL
(See page [BO-58](#))